



Deze download wordt u gratis aangeboden door Pick-upnaalden.nl

Web : www.pickupnaalden.com
Email : info@pick-upnaalden.nl
Facebook : www.facebook.com/pickupnaalden
Twitter : twitter.com/Pickupnaalden
Google+ : https://plus.google.com/+FCaris_pickupnaalden

PS-LX56/LX56P

SERVICE MANUAL

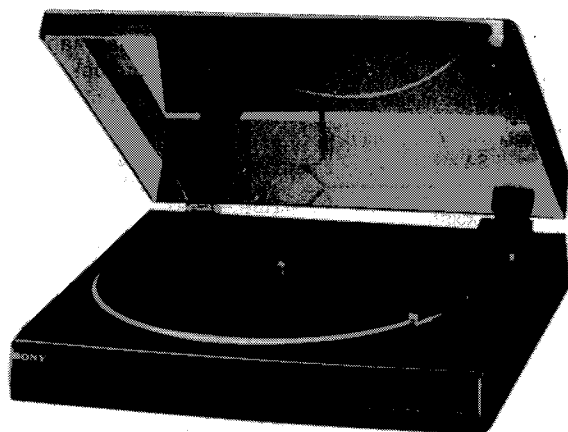 


PHOTO : PS-LX56

PS-LX56/LX56P are the turntable section in LBT-A190/A195/A290/A290K/A295/A390/A390K/A395/A490/A490K/A495/D150/D250/D550/G1000/G2000.

US Model
Canadian Model
PX Model
Tourist Model
PS-LX56
AEP Model
E Model
Australian Model
PS-LX56/LX56P
UK Model
PS-LX56P

SPECIFICATIONS

	(PS-LX56)		(PS-LX56P)
Turntable		Turntable	
Platter	30cm (12 in.)	Platter	30 cm
Motor	DC servo motor	Tone arm type	Dynamically balanced
Drive system	Belt drive	Cartridge type	Moving magnet type
Speed	33 1/3 rpm/45 rpm switchable	Stylus	Sony CN-234 (0.6 mil diamond)
Wow and flutter	0.2% (WRMS)	Mass	Approx. 2.3 kg (5 lb 1 oz)
Signal-to-noise ratio	60 dB (DIN-B)	Dimensions	Approx. 355 x 95 x 345 mm (14 x 3 3/4 x 13 5/8 inches) (w/h/d, including projections)
Automatic system	Return, reject		
Tonearm			
Type	Dynamically balanced		
Pivot-to-stylus length	203 mm (8 in.)		
Overall arm length	235 mm (9 1/4 in.)		
Cartridge			
Type	Moving magnet type		
Frequency response	20 Hz-20kHz		
Stylus	CN-234		
General			
Dimensions	355 x 94 x 345 mm(w/h/d) (14 x 3 3/4 x 13 5/8 inches) Approx. 2.5 kg (5 lb 8 oz)		
Weight			
Power requirement	US and Canadian model : 120V AC, 60Hz European model : 220-230V AC, 50/60Hz Australian model : 240V AC, 50Hz Model for other countries : 110-120V/220-240V adjustable with the voltage selector AC, 50/60Hz		
Power consumption	2 W		
Accessory supplied	45-rpm adaptor (1)		
Optional accessories	Replacement stylus CN-234 Stat spray XP-C10 Cleaner XP-C1, XP-C2		

Design and specifications subject to change without notice.

Note

This appliance conforms with EEC Directive 87/308/EEC regarding interference suppression.

 
STEREO TURNTABLE SYSTEM
SONY®



Connections

Note

Connect the red plug to the right-channel jack (R), and the white plug to the left-channel jack (L).

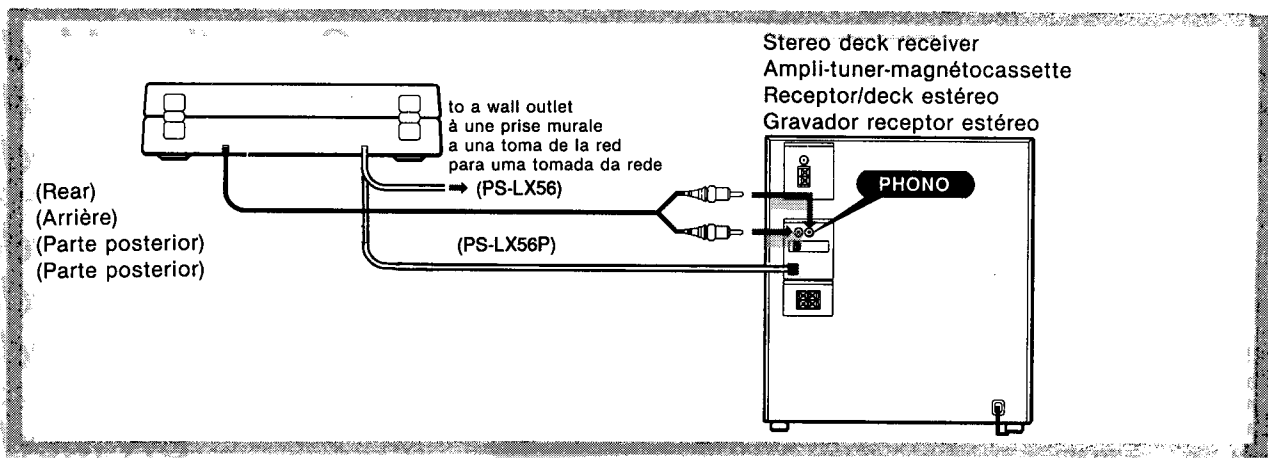

Notes on installation

 
- Place the turntable on a level surface.
- Avoid placing the unit near electrical appliances (such as a television, hair dryer, or fluorescent lamp) which may cause hum or noise.
- Place the turntable where it will not be subject to any vibration, such as from speakers, slamming of doors, etc.
- Keep the unit away from direct sunlight, extremes of temperature, and excessive dust and moisture.

Nota


Conecte la clavija roja a la toma del canal derecho (R), y la blanca a la del canal izquierdo (L).

To remove the dust cover

Open the cover fully and pull it up.

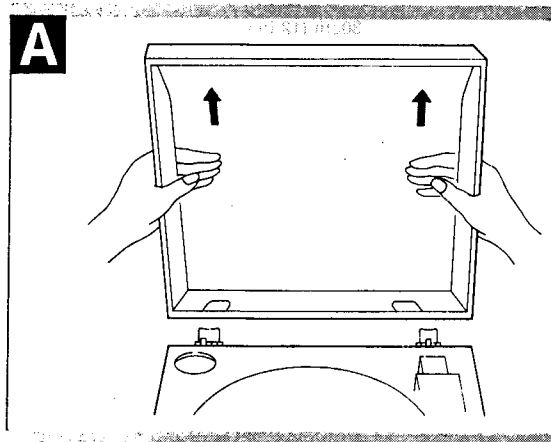

Location of Controls

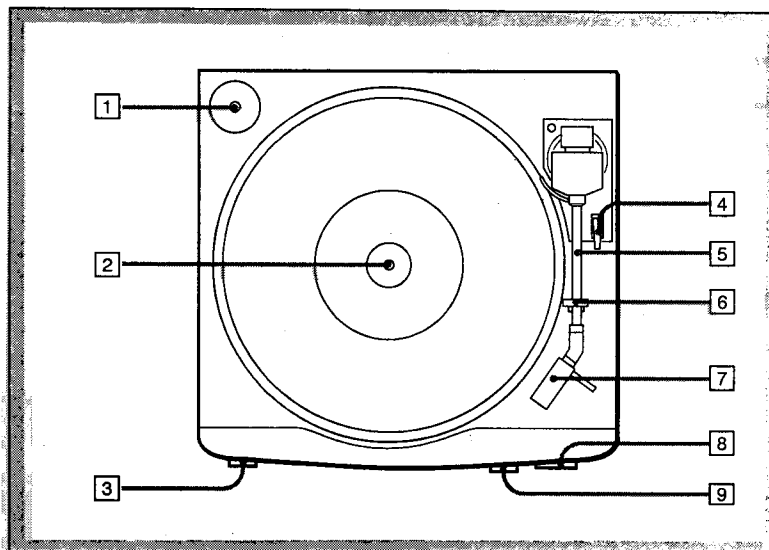 

- 1 45-rpm adaptor
- 2 Centre spindle
- 3 POWER switch (PS-LX56)
- 4 Cueing lever
- 5 Tonearm
- 6 Armrest
- 7 Cartridge
- 8 REJECT button
- 9 Speed selector