



Deze download wordt u gratis aangeboden door Pick-upnaalden.nl

Web : [www.pickupnaalden.com](http://www.pickupnaalden.com)  
Email : [info@pick-upnaalden.nl](mailto:info@pick-upnaalden.nl)  
Facebook : [www.facebook.com/pickupnaalden](http://www.facebook.com/pickupnaalden)  
Twitter : [twitter.com/Pickupnaalden](http://twitter.com/Pickupnaalden)  
Google+ : [https://plus.google.com/+FCaris\\_pickupnaalden](https://plus.google.com/+FCaris_pickupnaalden)

# PL-L1000

HET  
HBT  
S/G

## OPERATING INSTRUCTIONS



Thank you for buying this Pioneer stereo turntable.

Please read through these operating instructions and then you will know how to operate your model properly. After you have finished reading the instructions, put them away in a safe place for future reference.

These operating instructions are based on the model HET, and they can be used for the HBT and S/G models. The differences between the models are given below.

### Power Requirements

HET, HBT models: AC 220/240V ~ (switchable), 50, 60Hz

S/G model: AC110/120/220/240V ~ (switchable), 50, 60Hz

### NOTE:

*Read through the section on the "LINE VOLTAGE SELECTOR SWITCH" before using your turntable and check that the voltage selector switch is set correctly for use in your area.*

### Accessories

#### HET, HBT models:

A cartridge is not provided with these models. However, screws for mounting the cartridge, as well as washers and nuts come with each model, and so before use, provide yourself with the cartridge you intend to use, read through the section "ATTACHING THE CARTRIDGE" and then attach the cartridge to the accessory headshell.

#### S/G model:

This model comes with the PC-600 cartridge (which is attached to the accessory headshell). Screws for mounting a cartridge as well as washers and nuts are not provided.

## IMPORTANT

*To prevent electric shock, do not remove cover. No user serviceable parts inside, refer servicing to qualified service personnel.*

*Always disconnect all the equipment from the mains supply when disconnecting the signal leads. The power cord should be connected last, make sure that the power switch is off.*

*Unplug the set from the wall socket when it is not to be used for an extended period of time.*

### FOR USE IN UNITED KINGDOM AND AUSTRALIA

**CAUTION 240V:** Mains supply voltage is factory adjusted at 240V.

### FOR USE IN UNITED KINGDOM

*The wires in this mains lead are coloured in accordance with the following cord:*

Blue:	Neutral
Brown:	Live

*As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured marking identifying the terminals in your plug proceed as follows.*


*The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.*

*The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.*

# CONTENTS

Assembly Procedure .....	2	Maintenance .....	14
Installation .....	6	Line Voltage Selector Switch .....	14
Connections to Stereo Amplifier .....	6	Features .....	15
Adjusting the Tonearm .....	7	Troubleshooting .....	16
Panel Facilities .....	10	Specifications .....	17
Operation .....	12		


## ASSEMBLY PROCEDURE

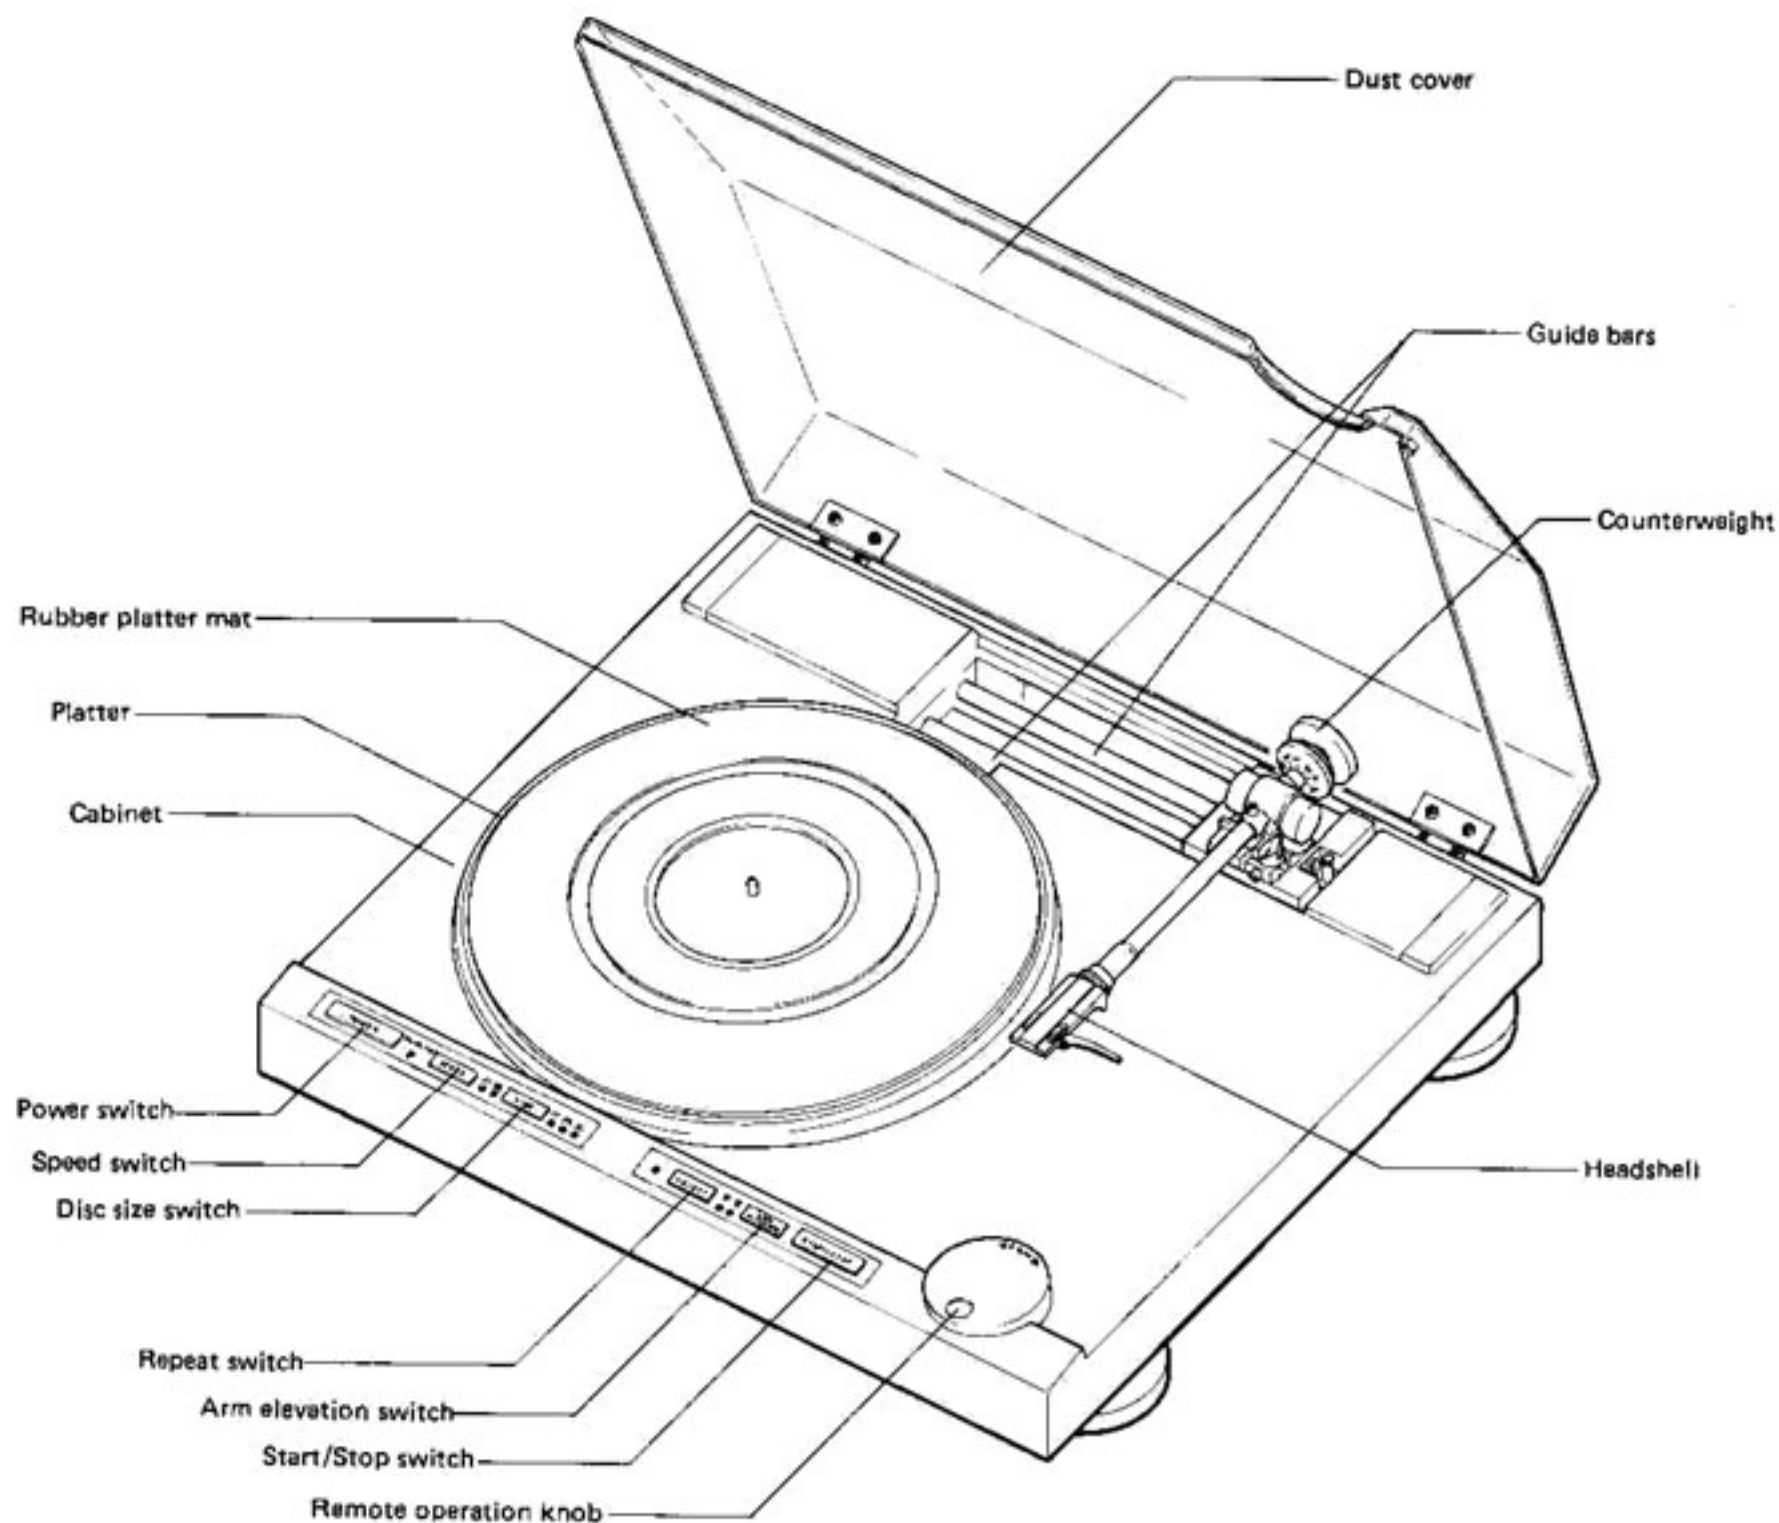



## STEP 1: CHECK THE ACCESSORIES

The styrene pad contains the parts shown in the figure. Check that they are all inside. The EP adapter is used for records with a large center hole.

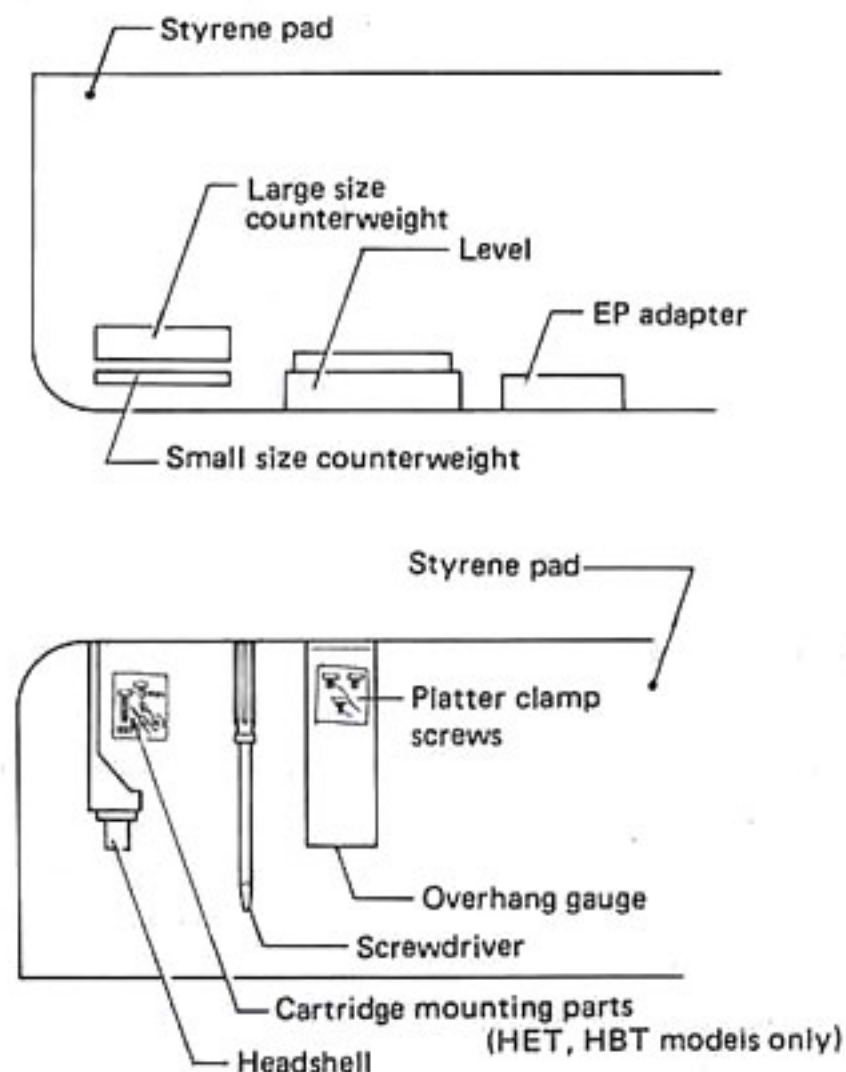


## STEP 2: REMOVING DUST COVER

1. Fully open the dust cover.
2. Hold the dust cover, and lift it off by pulling it straight upward.

## STEP 3: REMOVAL OF TONEARM CLAMP SCREWS AND TONEARM HOLDER A

1. The tonearm is anchored to prevent damage which might be sustained during transportation. Use a Phillips screwdriver to remove the four tonearm clamp screws on the rear panel as shown in the figure.

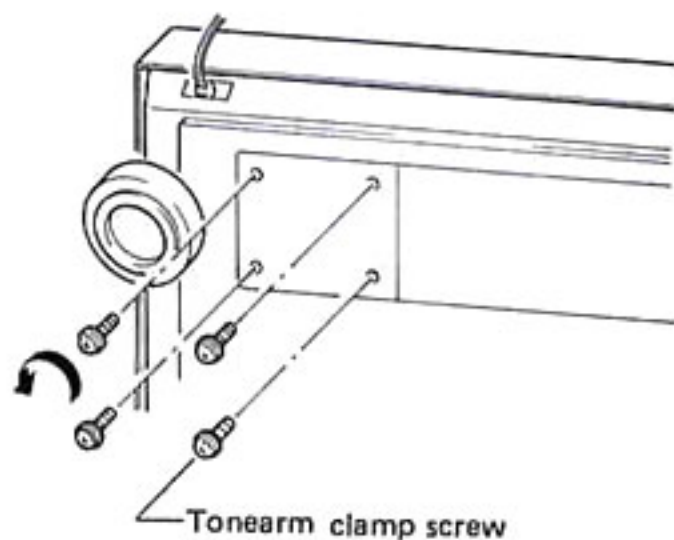

2. Pull tonearm holder A in the direction of the arrow given in Fig. A and then remove it. When removing the holder, bend its center part with your fingers as in Fig. B.

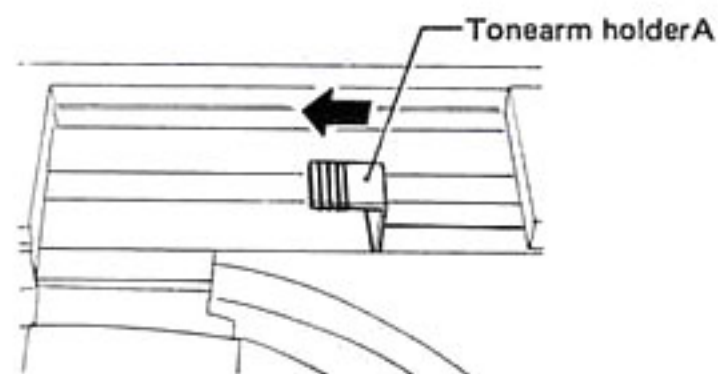


Fig. A


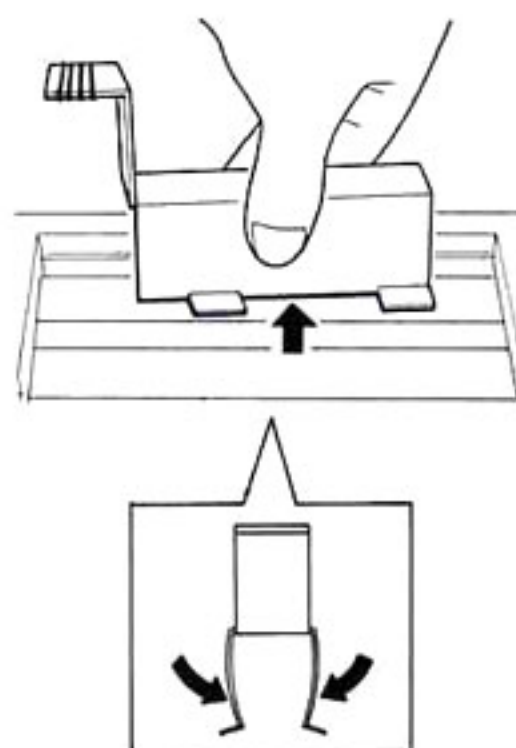


Fig. B

## STEP 4: REMOVAL OF TONEARM HOLDER B


1. Rotate the tracking-force scale ring 5 – 6 turns in the direction of the arrow shown in the figure.

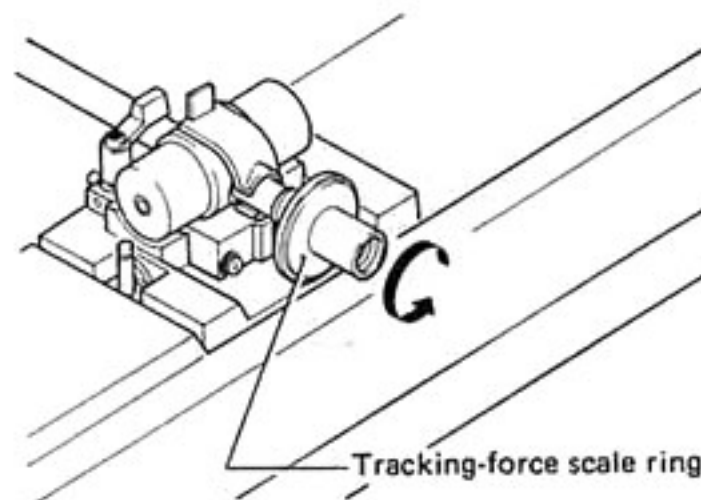

2. Use a Phillips screwdriver to remove the two clamp screws.


Be careful not to drop screws into the hole in the tonearm base.

3. Remove the tonearm holder B from the tonearm base.

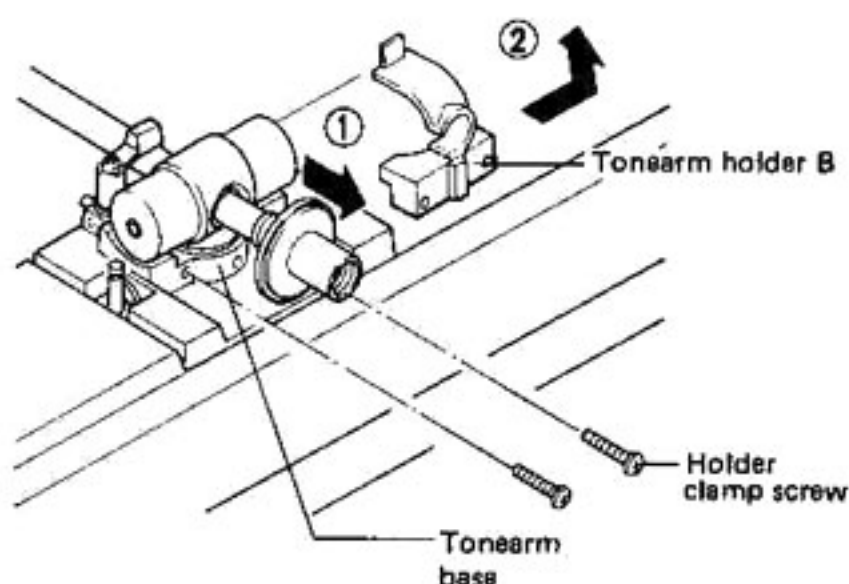


### STEP 5: REMOVING TRANSIT SCREWS

Remove three transit screws with a Phillips screwdriver as shown below.

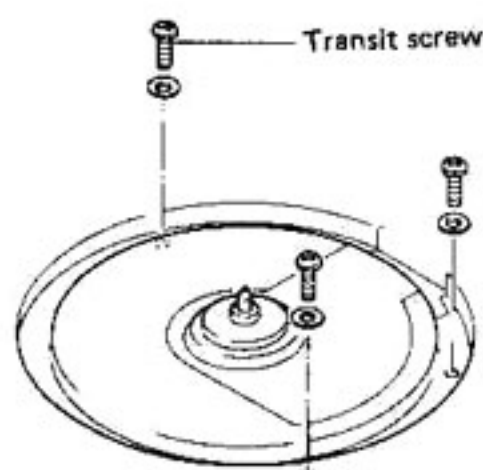

### STEP 6: MOUNTING THE PLATTER AND RUBBER PLATTER MAT


1. Slip the platter over the center shaft and secure it using the accessory platter clamp screws (3) and an ordinary slot screwdriver.
2. Place the rubber platter mat on top of the platter.

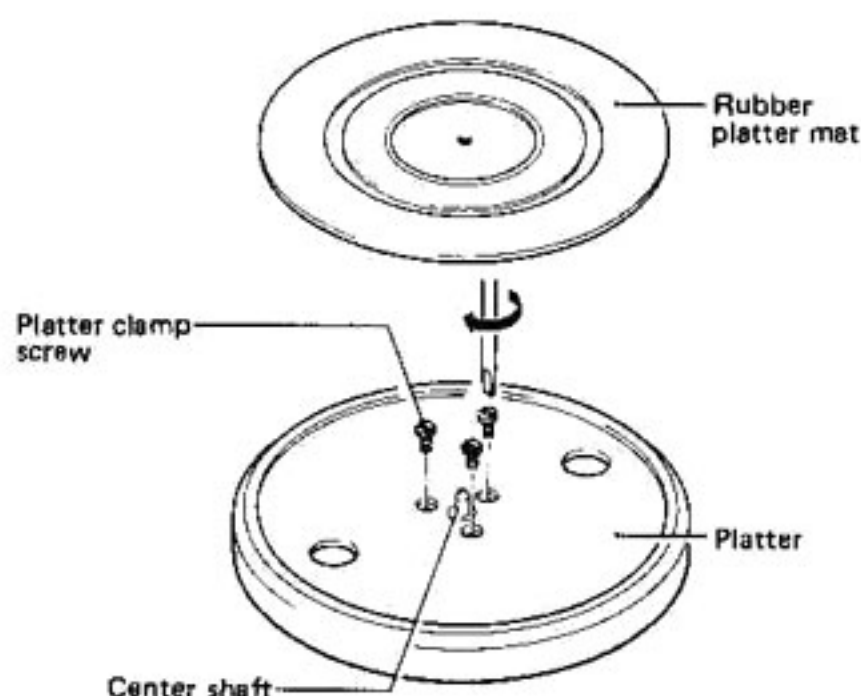

### STEP 7: MOUNTING THE HEADSHELL

Install the cartridge as described on page 5 "ATTACHING THE CARTRIDGE" and attach the headshell to the tonearm as follows:


Insert the headshell into the end of the tonearm, and rotate the locking collar in the direction indicated by the arrow in the figure until it stops. Then secure it.

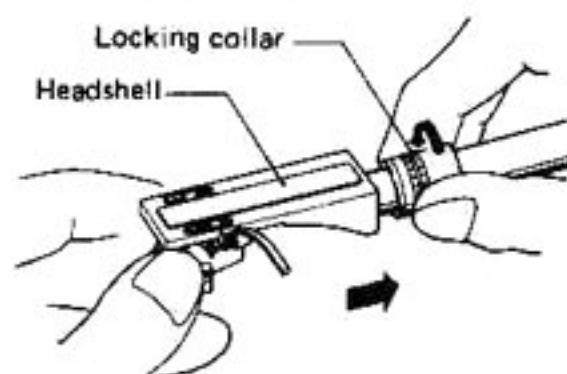

### STEP 8: MOUNTING THE COUNTERWEIGHT

Slip the small size counterweight onto the tracking-force scale ring at the end of the tonearm. Next, adjust the position of the weight so that the clearance between the weight and the tracking-force scale ring comes to 0-1mm (depending on the weight of the cartridge, it may be better to vary this clearance slightly).

Rotate the screw with the accessory screwdriver and tighten it securely.

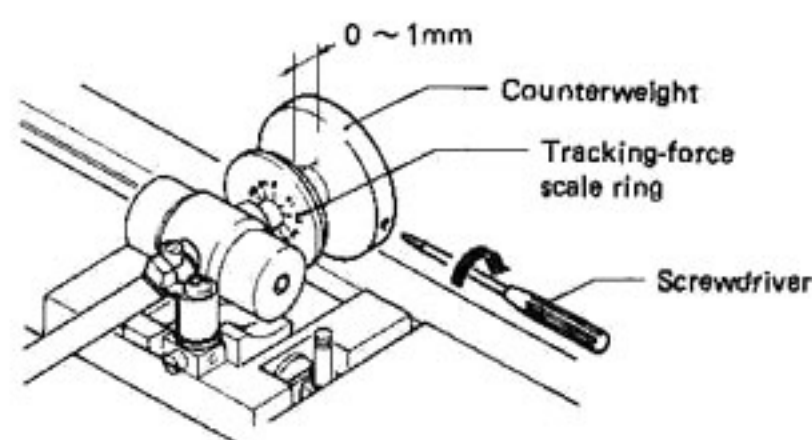

#### NOTES:

- If you plan to use a cartridge weighing more than 14g (such as the Ortofon SPU/GT), mount the accessory large size counterweight.
- Note that the proper tracking force adjustment can not be set unless the counterweight is securely and correctly installed.

### STEP9: MOUNTING THE DUST COVER


To install, insert the hinges of the dust cover into the hinge sockets of the cabinet, and push the dust cover downward.



## STEP 10: ADJUSTING THE HEIGHT OF THE CABINET

Because of the construction of the model's tonearm, the turntable should be installed so that the cabinet is level. If it is not perfectly level, the tonearm will slide to the left or right and so follow the steps below and install it properly.


1. Install the turntable.
2. Place the accessory level on top of the guide bars.

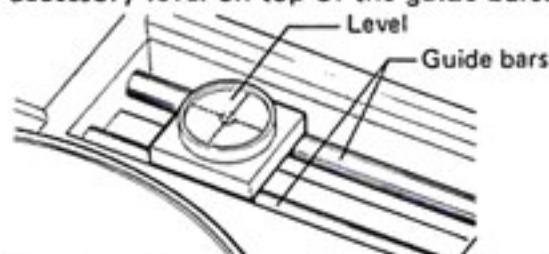

### NOTE:

The PL-L1000 adopts the linear tracking system in which the tonearm moves along two guide bars. Level adjustment of the guide bars is necessary. Be sure to attach the level to the guide bars and adjust before use.

3. Refer to the figure. Adjust the front and back, left and right insulator feet by rotating them so that the air bubble in the level is brought to the center. To rotate the insulators, lift the cabinet up to allow rotation.

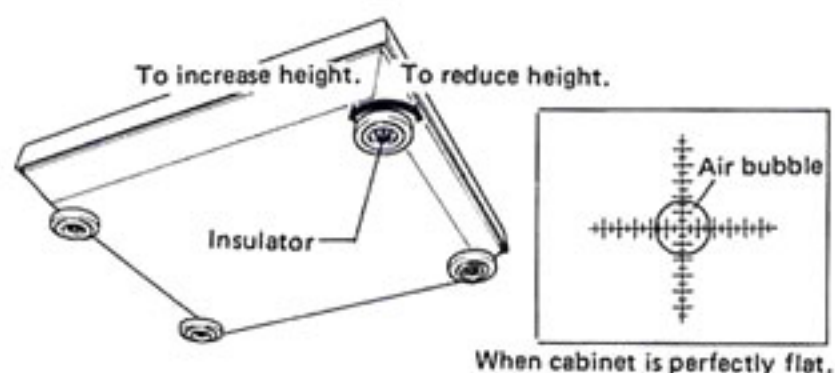

### NOTE:

After adjusting the cabinet height, be sure to remove the level from the guide bar.

## ATTACHING THE CARTRIDGE (Applicable to HET and HBT models only)

You can attach any cartridge to this turntable weighing between 4g and 24g providing that only the accessory headshell is used with it. Follow the procedure outlined below for attaching the cartridge to the headshell.

1. Take out the headshell, cartridge mounting screws, nuts, washers and small screwdriver from the styrene pad. The screws come in three different lengths so choose the screws according to the height of the cartridge you intend to attach.
2. The terminals on the accessory headshell are aligned as shown in Fig. A. Check the location and polarity of each of the cartridge's terminal pins and then connect the lead wires, taking care to get the polarities connected properly.

3. Attach the cartridge loosely to the headshell using the screws, nuts and washers (Fig. A).

Be careful that the cartridge mounting nut does not come into contact with the cartridge body. If the nuts touch the cartridge, hum (buzzing noise) may be generated.

### NOTE:

Do not solder when you connect the lead wires to the cartridge. If the lead wire lugs are loose, use a pair of tweezers or a similar object to pinch in the end lightly.

4. Refer to Fig. B and use the accessory overhang gauge to adjust the overhang so that cartridge stylus tip is positioned over the indicator line of the gauge, and then tighten the cartridge mounting screws. Make sure that the cartridge does not tilt to one side (Fig. C).

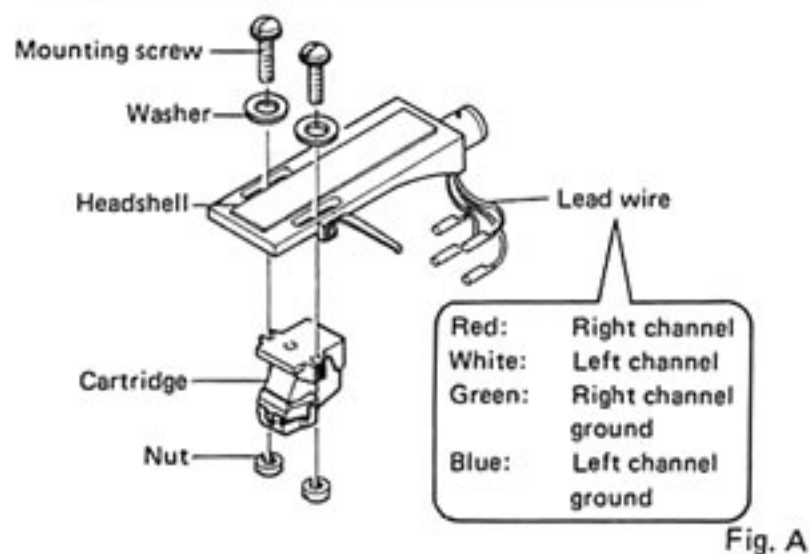


Fig. A


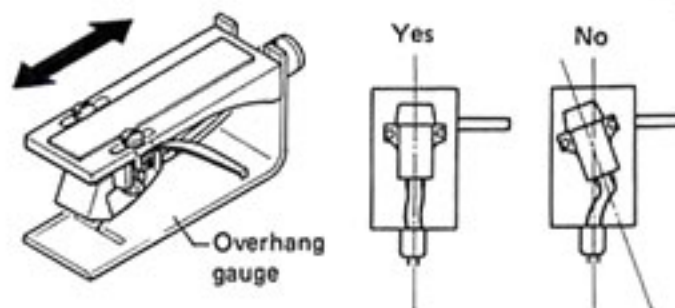


Fig. B

Fig. C

## GUIDE BAR MAINTENANCE

Use the accessory cloth to wipe the guide bars and remove the dust and dirt.

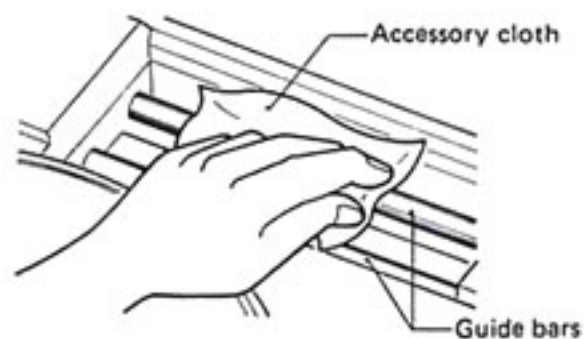

# INSTALLATION

## INSTALLATION PRECAUTIONS

When installing this turntable, make sure that you avoid the following conditions:

Conditions to be avoided	Possible problems caused
(1) Exposure to direct sunlight, high temperatures or high humidity.	(1) Can cause rust or interfere with insulation.
(2) Unstable surfaces.	(2) Will interfere with normal operation of turntable (stylus will jump, etc.).
(3) Dirty or dusty locations.	(3) Can cause scratches.
(4) Exposure to heavy vibrations, such as on the top of speakers.	(4) Can cause feedback.
(5) Proximity to power transformer of the amplifier.	(5) Can cause hum.
(6) Locations where alcohol, insecticides, or flammable substances are frequently used.	(6) Can corrode dust cover or outside of cabinet.
(7) Locations exposed to salt-laden air.	(7) This corrodes the parts and prevents them from operating.

If the turntable is brought into a warm room from previously cold surroundings, or if the room temperature rises suddenly, moisture will form on the operating sections and the turntable will not perform properly.

In a situation like this, leave the turntable in its new environment for about an hour, or try and increase the room temperature gradually, before operation.

## CONNECTIONS TO STEREO AMPLIFIER


### BEFORE CONNECTING, CHECK THE FOLLOWING:

- Switch the power to the amplifier off to prevent damage to the speaker system.
- If you are using a low-output moving coil (MC) cartridge, you will need a special MC transformer or a head amplifier, or a stereo amplifier with a built-in MC amplifier.

*With the S/G model (the model with the PC-600 cartridge, plug the phono cables into the PHONO or PHONO MAG jacks of the stereo amplifier.*


### CONNECTION PROCEDURE

1. Insert the phono cables (white and red) into the PHONO input jacks of the stereo amplifier (white for left channel into L jack, and red for right channel into R jack).
  2. Connect the ground lead with the Y-shaped connector at the end to the ground terminal.
  3. Insert the power plug into the convenience AC outlet of the amplifier or a wall outlet.
- Do not allow the phono cables to stretched taut but give them some slack when connecting them. If they are completely taut, this may give rise to feedback.

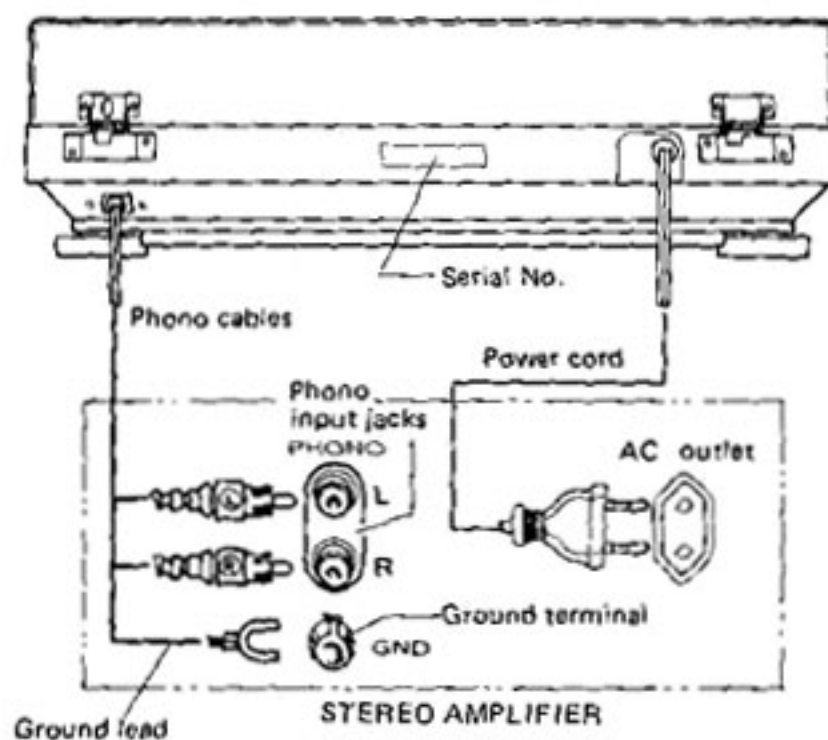



# ADJUSTING THE TONEARM

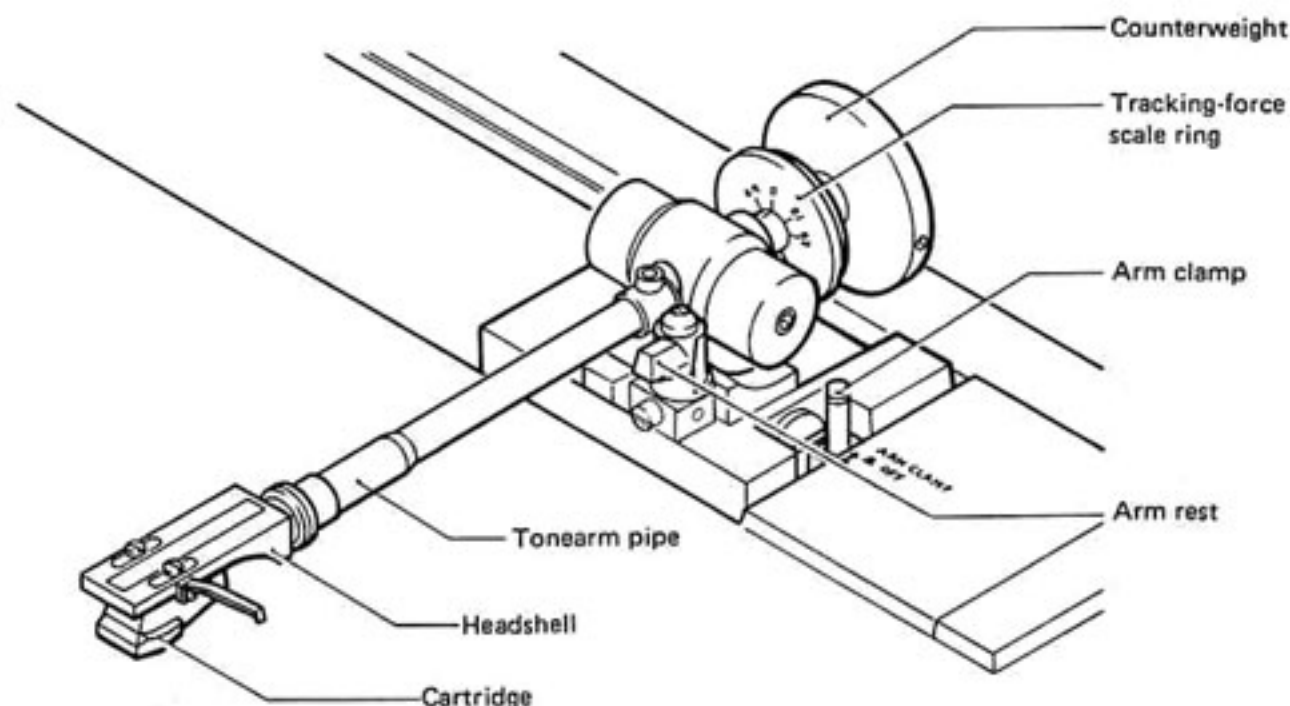


The tonearm adjustments have a great effect on the sound which is reproduced from the records. Proceed with these adjustments after you have completed the assembly, installation and the connections to the stereo amplifier.

Make absolutely sure that you perform the adjustments after securing the tonearm with the clamp. Furthermore, check that the stylus position has been properly adjusted. Especially when the cartridge has been replaced, proceed with the tonearm adjustments after adjusting the stylus tip position following the steps under Headshell mounting on page 5.

## STEP 1: TRACKING FORCE ADJUSTMENT

1. Depress the POWER switch to ON (the UP (▲) indicator of the ARM ELEVATION switch comes on).
2. Rotate the arm rest in the direction of the arrow in the figure. Release the tonearm pipe clamp.

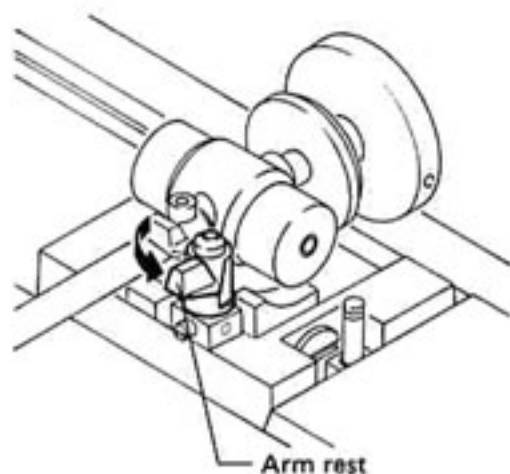


3. Depress the ARM ELEVATION switch to DOWN (the DOWN (▼) indicator comes on).

4. If a stylus cover is mounted on the cartridge, remove it. Hold the headshell with one hand and rotate the counterweight with the other and adjust so that the tonearm does not incline toward the headshell side or counterweight side but remains parallel to the platter as shown in the figure.

### NOTE:


If it is not possible to obtain horizontal balance even by rotating the counterweight, loosen the counterweight's set screw and shift the mounting position to the front or rear.

### Horizontally balanced state

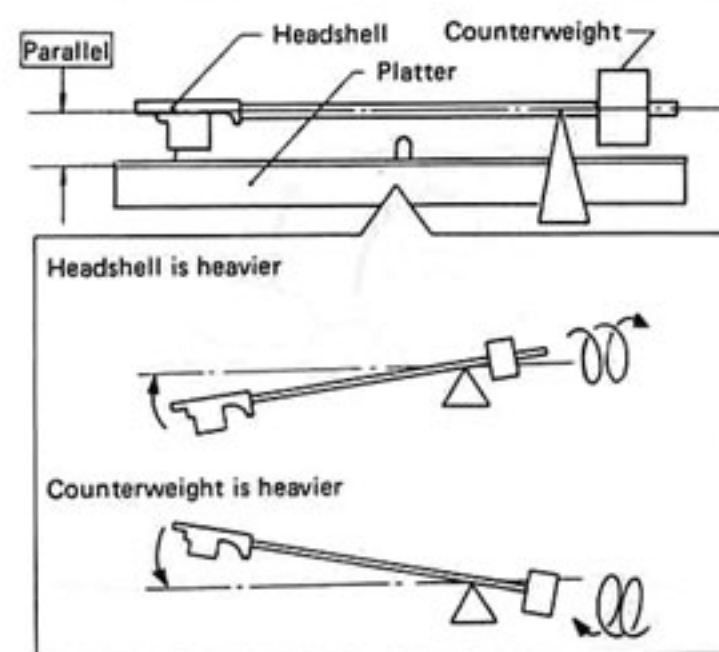




5. Rotate the tracking-force scale ring and set the "0" to the index line of the counterweight shaft. Do not rotate the counterweight since this will throw the cartridge out of horizontal balance and prevent the correct tracking force from being applied.

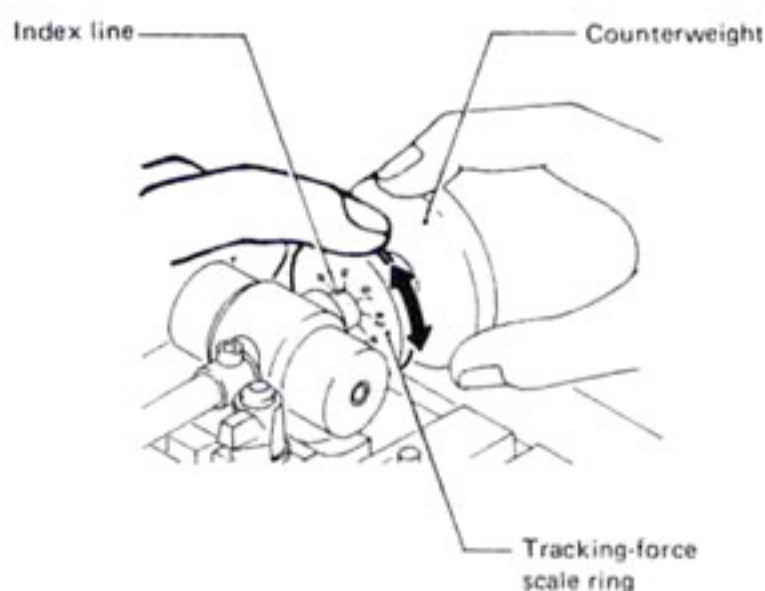

6. Rotate the counterweight in the direction of the arrow in the figure and adjust for the recommended tracking force of the cartridge with the index line on the counterweight shaft. One scale unit on the tracking-force scale ring is equivalent to 0.1g, and when the counterweight is rotated one turn, the tracking force comes to 1g.

When using the large size counterweight, one scale unit is equivalent to 0.15g (0.3g at position 0.2, 0.9g at position 0.6, and an additional tracking force of 1.5g with one turn of the weight).

The PC-600 cartridge that comes with the S/G model has a tracking force of 1.5 grams.

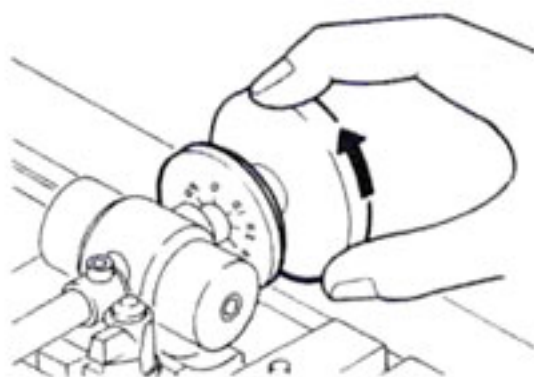



#### NOTE:

When playing records at low temperatures or when playing records that cause the stylus to jump or the reproduced sound is distorted (records where part of the recording level is set at an extremely high level), increase the tracking force slightly to minimize the mistracking.

## STEP 2: TONEARM HEIGHT ADJUSTMENT

If the tonearm and the platter are not both parallel when a record is being played, the cartridge stylus will not come into contact with the grooves on the record at the right angle and this may result in distortion of the reproduced sound. Perform the adjustments as follows;

1. Place a record on the platter.
  2. (1) Raise the arm clamp as in the figure first and then lift the headshell and move it toward the record. The platter will start to move so take care not to allow the stylus to touch the record.
  - (2) Depress the POWER switch and set it to OFF. The platter now stops rotating.
  - (3) Place the stylus on the record.
  - (4) Use a coin or hand to rotate the arm lock screw in the direction (1) of the arrow as in the figure and loosen it. The tonearm will go to its highest position.
  - (5) Move the tonearm up and down (2) as in the figure, adjust it so that it is parallel with the platter, tighten the arm lock screw in the opposite direction to (1) in the figure and secure.
- Use the lines located at 1mm intervals on the front surface of the tonearm base is a guide for adjusting the tonearm.

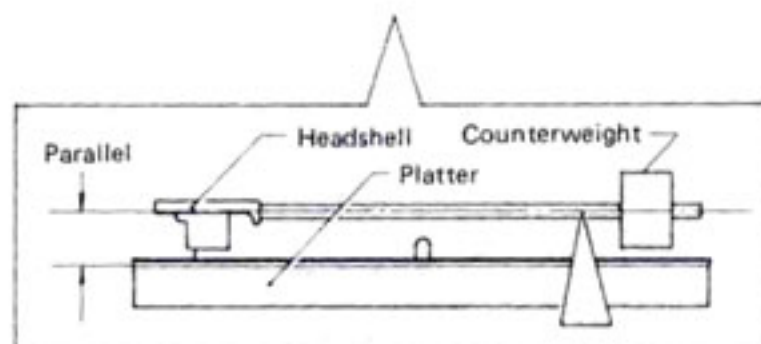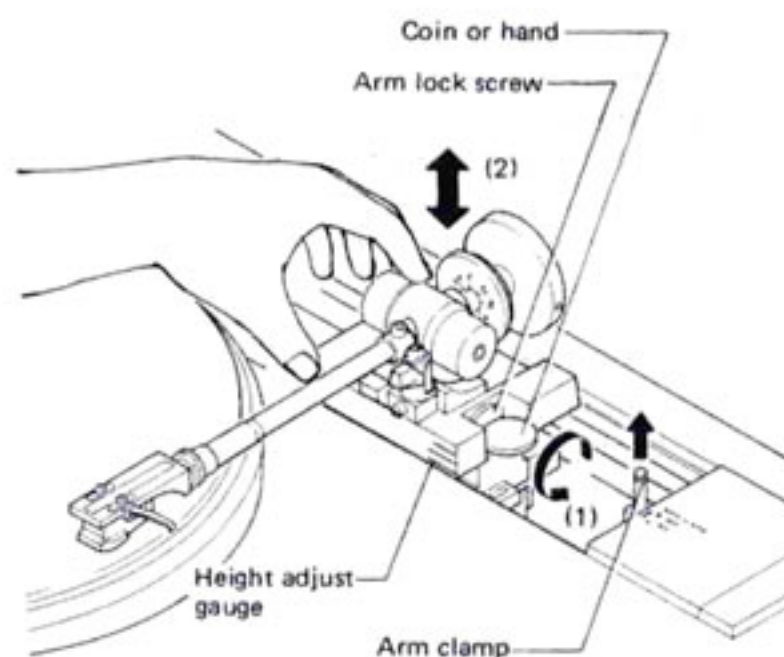





### STEP 3: ARM ELEVATION HEIGHT ADJUSTMENT

Make sure you proceed with the arm elevation adjustment after you have adjusted the tonearm height.

1. Depress the POWER switch and switch on the power. The arm elevation automatically rises.
2. After checking that the arm elevation has risen completely, depress the POWER switch again and switch off the power.
3. Rotate the arm elevation screw in the direction of the arrow as in the figure to loosen it (1), and use the accessory screwdriver to rotate the arm elevation height adjust screw (2). Adjust it so that the clearance between the cartridge stylus and the record is about 8mm (5/16"). This clearance is increased when the arm elevation height adjust screw is rotated clockwise and decreased when rotated counterclockwise.

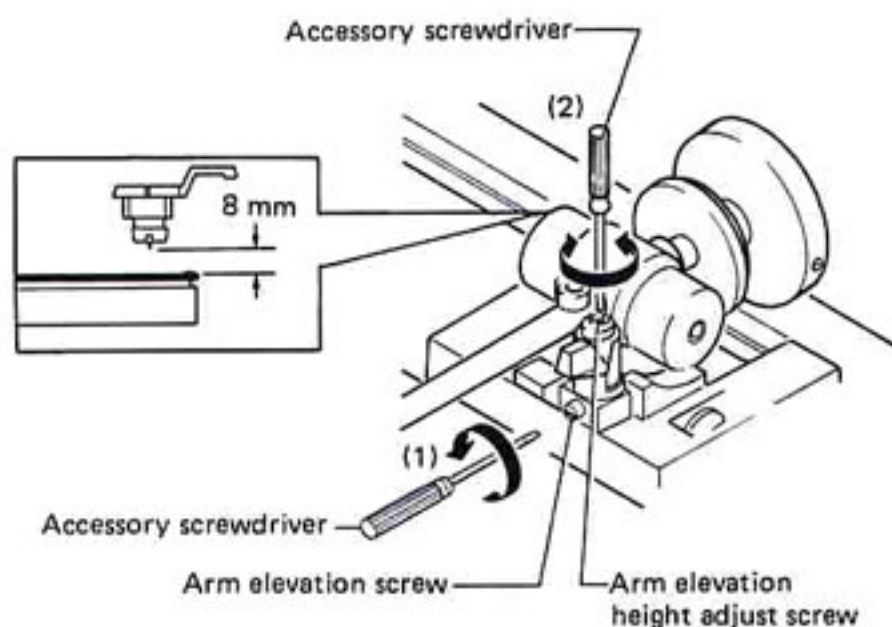


4. As in the figure, check that there is a clearance between the arm elevation and the tonearm pipe. If they are touching, it means that the tonearm height has not been adjusted properly and so re-adjust.

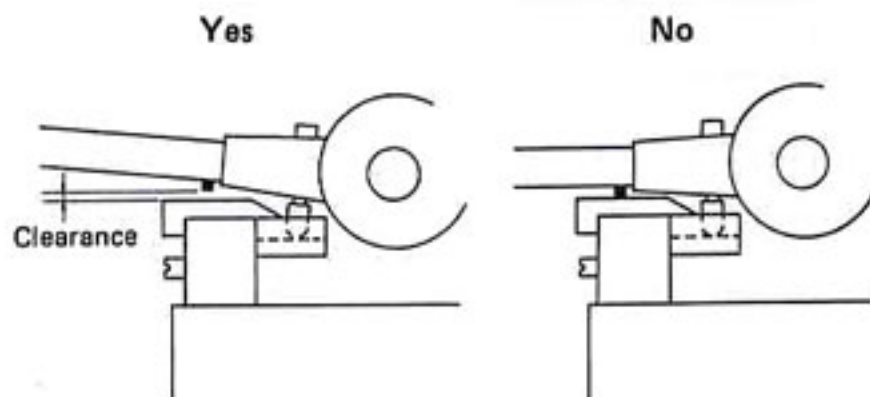


5. Rotate the arm elevation screw to the right and secure.

### STEP 4: OPERATIONS AFTER TONEARM ADJUSTMENTS

1. Lift the arm clamp (1), hold the tonearm body and then move it gently to the right until it stops (2). If the pipe is held instead of the body, this may unnecessarily strain the tonearm and so always take hold of the body.

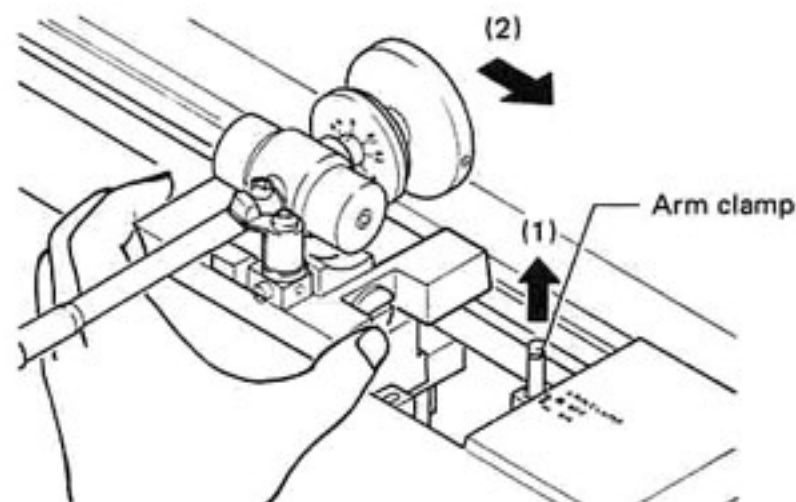


2. As in the figure, push down the arm clamp and secure the tonearm.

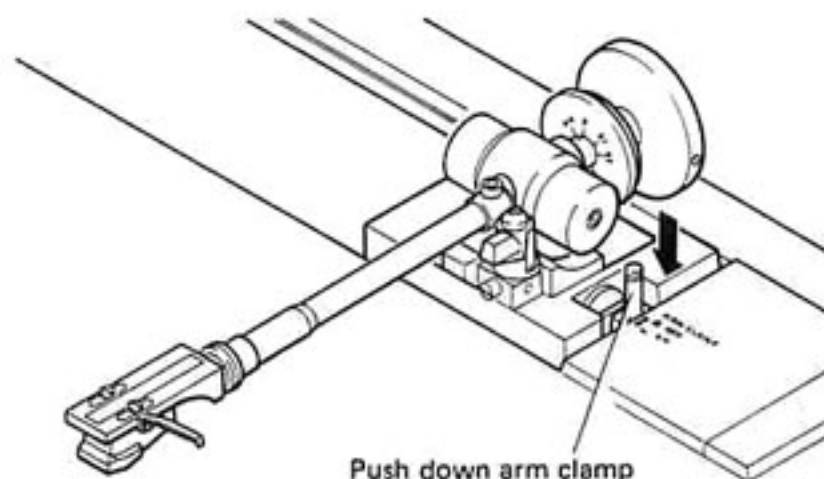

3. Rotate the arm rest and secure the pipe.



# PANEL FACILITIES

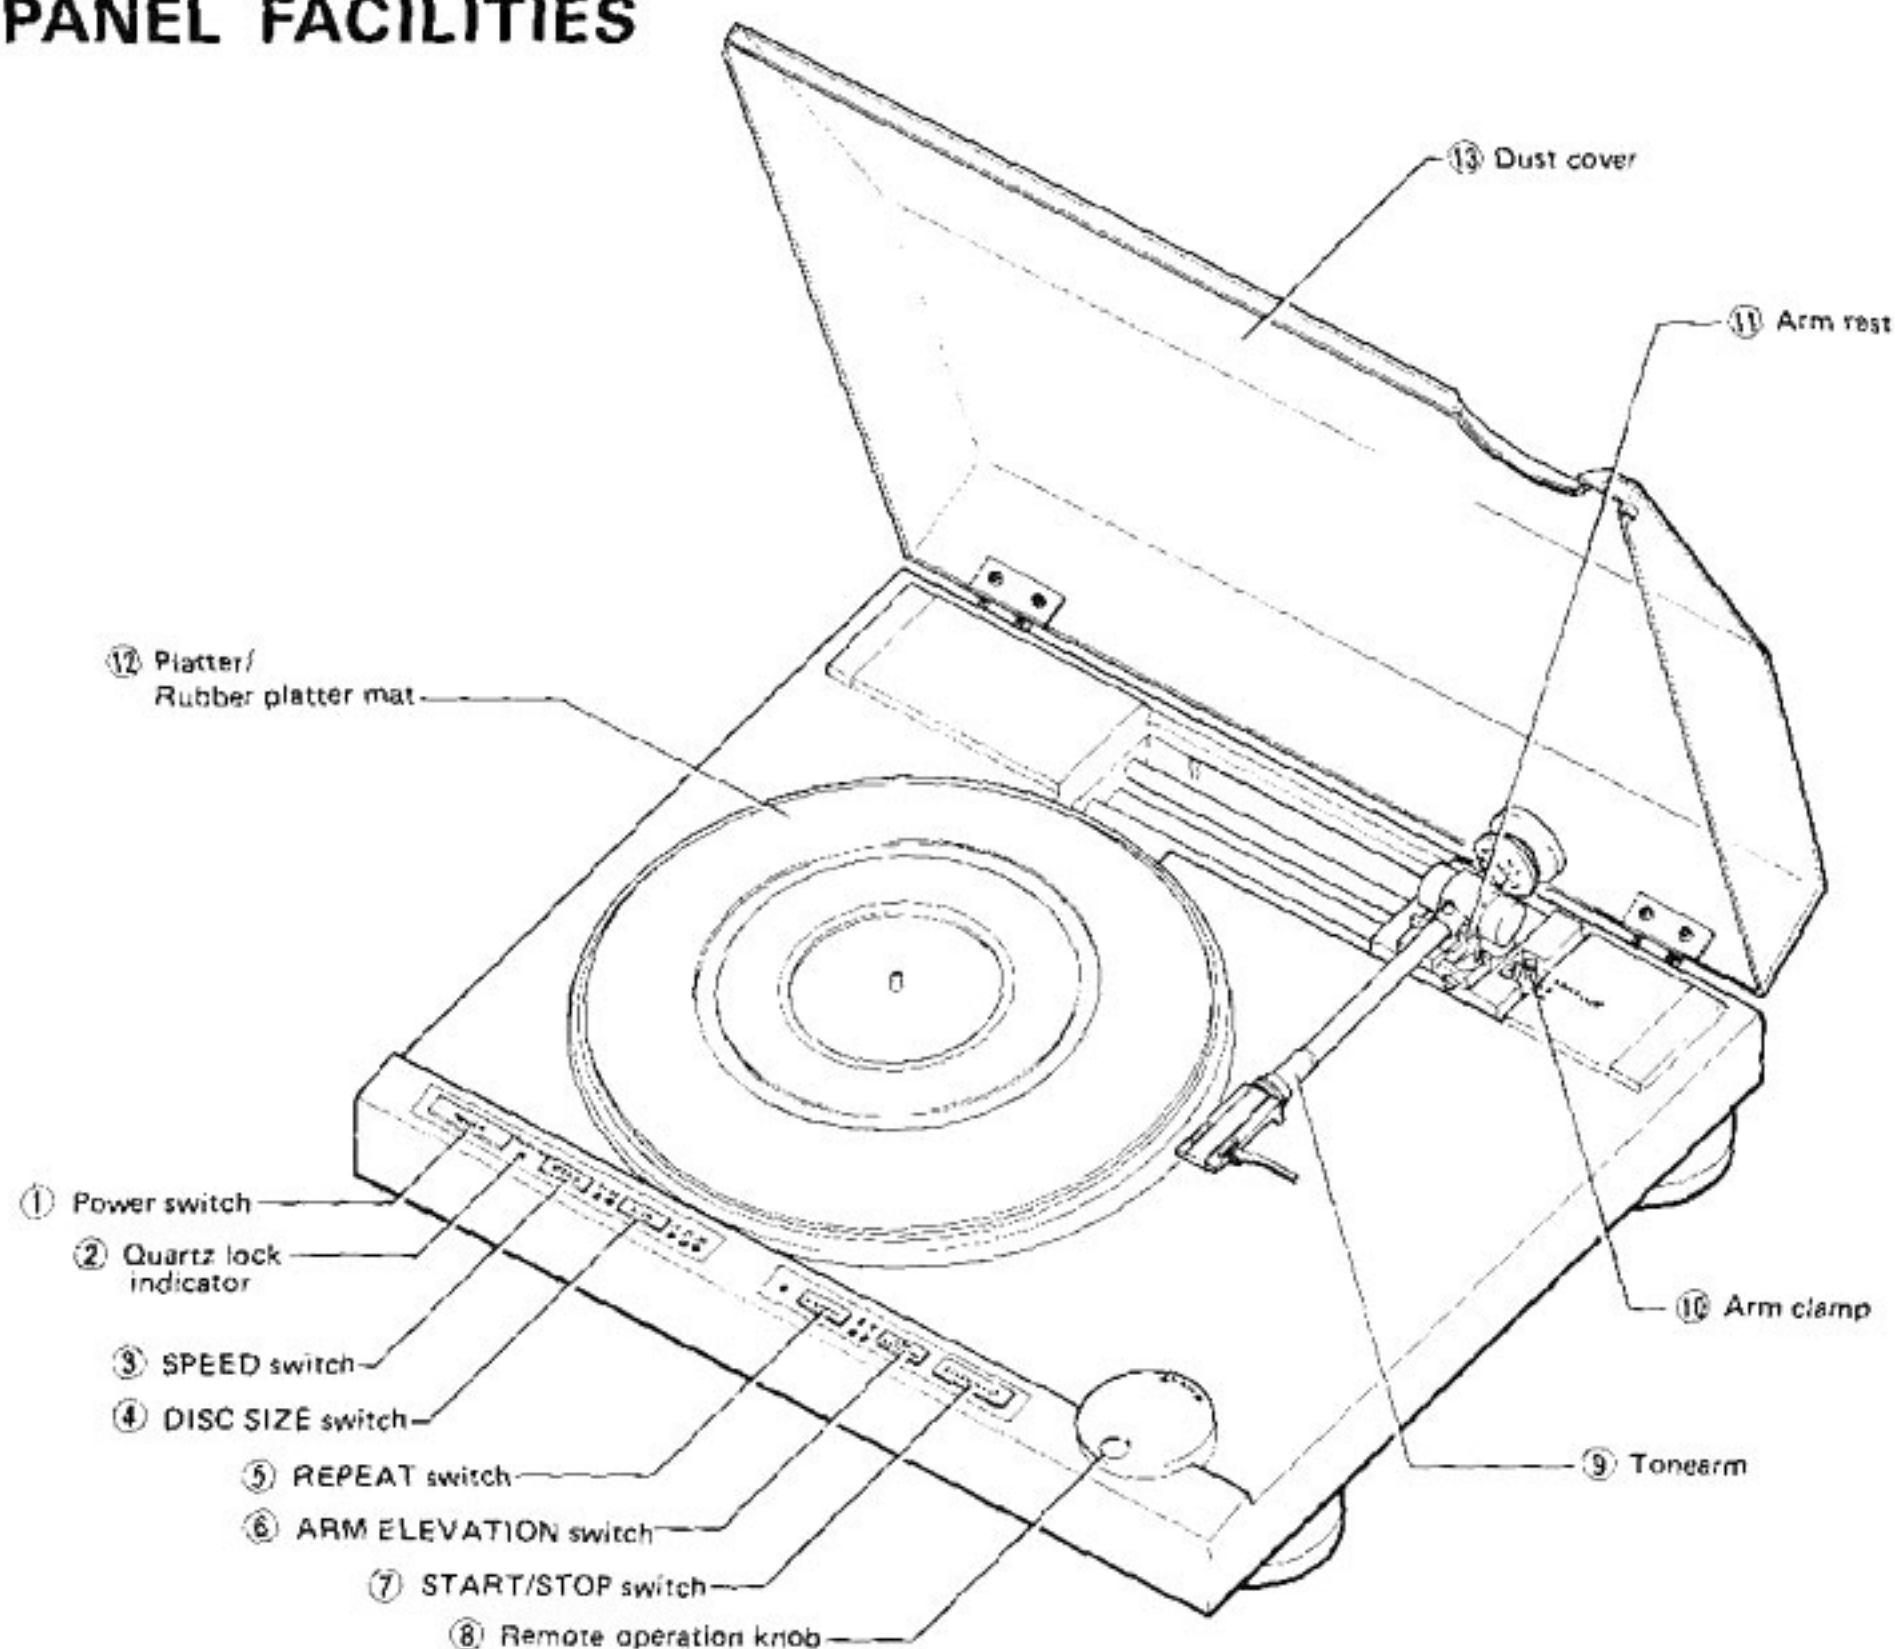

## ① POWER SWITCH

Used to switch on and off the power to the turntable. Power is supplied when the switch is depressed (ON). The SPEED switch indicator (33) comes on. The power is switched off when the POWER switch is released.

### NOTES:

- The platter does not rotate when the tonearm is positioned at the far right even if the switch is depressed and the power supplied.
- With each push, this switch alternates between the ON and OFF positions.
- Keep the POWER switch at the OFF position when you are not using the turntable.

## ② QUARTZ LOCK INDICATOR

This indicator illuminates when the platter is revolving at the specified rate of 33-1/3 or 45 rpm.

### NOTE:

If the platter speed varies, such as when the speed switch is changed from one position to another or when you press momentarily on the platter, the indicator will go off. As the platter revolution returns to the specified speed, the indicator will illuminate again.

## ③ SPEED SWITCH

- 33 . . . . . Set the switch to this position when playing a 33-1/3 rpm record such as an LP. When it is depressed, the 33 indicator lights up, and the platter rotates at a speed of 33-1/3 rpm.
- 45 . . . . . Set the switch to this position when playing a 45 rpm record like an EP. When it is depressed, the 45 indicator lights up, and the platter rotates at a speed of 45 rpm.



#### ④ DISC SIZE SWITCH

Selects the switch that corresponds to the size of the record you want to hear for auto play operation.

12"30 . . . For 30cm records

10"25 . . . For 25cm records

7"17 . . . For 17cm records

- Used to select the record size when depressed. For instance, when the 30cm indicator lights up, depress the switch for the 25cm position, and depress it again for the 17cm position. Depressing the switch once more sets it to the 30cm position.
- When the power switch is turned ON, the turntable will always be set for records with a diameter of 30cm and the corresponding light will come on.

**NOTE:**

This switch will not work if depressed when the tonearm is moving (auto lead-in, auto-return, auto cut).

#### ⑤ REPEAT SWITCH

Press this switch for repeat play. When pressed the indicator will light up, and the record will be played again (refer to page 12 for further details on repeat play). Press this switch again to release it. The indicator will go off and the repeat play function will be released.

**NOTE:**

This switch will not work if depressed when the tonearm is moving (auto-return, auto cut).

#### ⑥ ARM ELEVATION SWITCH

Use this switch to interrupt play temporarily or to perform manual play.

When the DOWN position is depressed the tonearm will descend and when the UP position is depressed the tonearm will rise. These two operations will be performed alternately every time the switch is pressed.

**NOTES:**

- When the POWER switch is set to ON, the tonearm will start in the UP position.
- This switch will not work if depressed when the tonearm is moving (auto lead-in, auto-return, auto cut).
- When the switch is at UP, the auto-return cancelling mechanism is actuated and so there will be no auto-return.

#### ⑦ START/STOP SWITCH

Press this switch for auto play. The platter will start to rotate, the tonearm will automatically move over to the edge of the record and play will begin (auto lead-in).

If this switch is pressed during play, the tonearm will automatically return to the arm clamp position, the platter will stop rotating and play will be suspended (auto cut).

**NOTE:**

This switch will not work if depressed when the tonearm is moving (auto lead-in).

#### ⑧ REMOTE OPERATION KNOB

Used when moving the tonearm by remote control. Rotate counterclockwise to move the tonearm to the left. Rotate clockwise to move the tonearm to the right.

**NOTE:**

When the arm elevation switch is at DOWN or auto lead-in, auto cut and auto-return, the tonearm does not move even when the remote operation is released and the knob rotated.

#### ⑨ TONEARM

The tonearm function is to apply the correct tracking force to the cartridge, maintain this value precisely and allow the stylus to trace the record grooves accurately.

The tonearm can be operated manually with your hand or remotely with the remote operation knob. It is coupled to the motor switch and when it moves across to the record, the platter rotates and it stops when the tonearm is returned to the arm clamp position.

**NOTE:**


When the POWER switch is at OFF, the tonearm cannot be moved by either manual or remote operation. If it is forced at the OFF position, this may result in damage so always remember to set the POWER switch to ON when moving it.

#### ⑩ ARM CLAMP



Used to secure the tonearm.

To secure the tonearm, move it to the right and then push down on the clamp. When you do not intend to use the turntable, secure the tonearm in this way. The tonearm is released when the clamp is raised.

#### ⑪ ARM REST

This secures the tonearm pipe. When playing a record, rotate the arm rest counterclockwise and release the clamp. When not playing a record, set the arm elevation switch to UP (  ) and then rotate the arm rest clockwise and secure the pipe.

**NOTE:**

When the arm elevation switch is at DOWN (  ), the tonearm pipe cannot be secured. Make sure this switch is set to the UP (  ) position.

#### ⑫ PLATTER/RUBBER PLATTER MAT


When the tonearm is moved and power is supplied to the turntable, the platter will start rotating at the set rotation speed. The rubber platter mat stabilizes the records and also absorbs external vibration.

#### ⑬ DUST COVER

Keep this closed unless operating the controls or tonearm, or changing records. This serves to keep dust off of the records during record play. When fully opened and pulled straight up, this dust cover can be removed from the cabinet.



# OPERATION

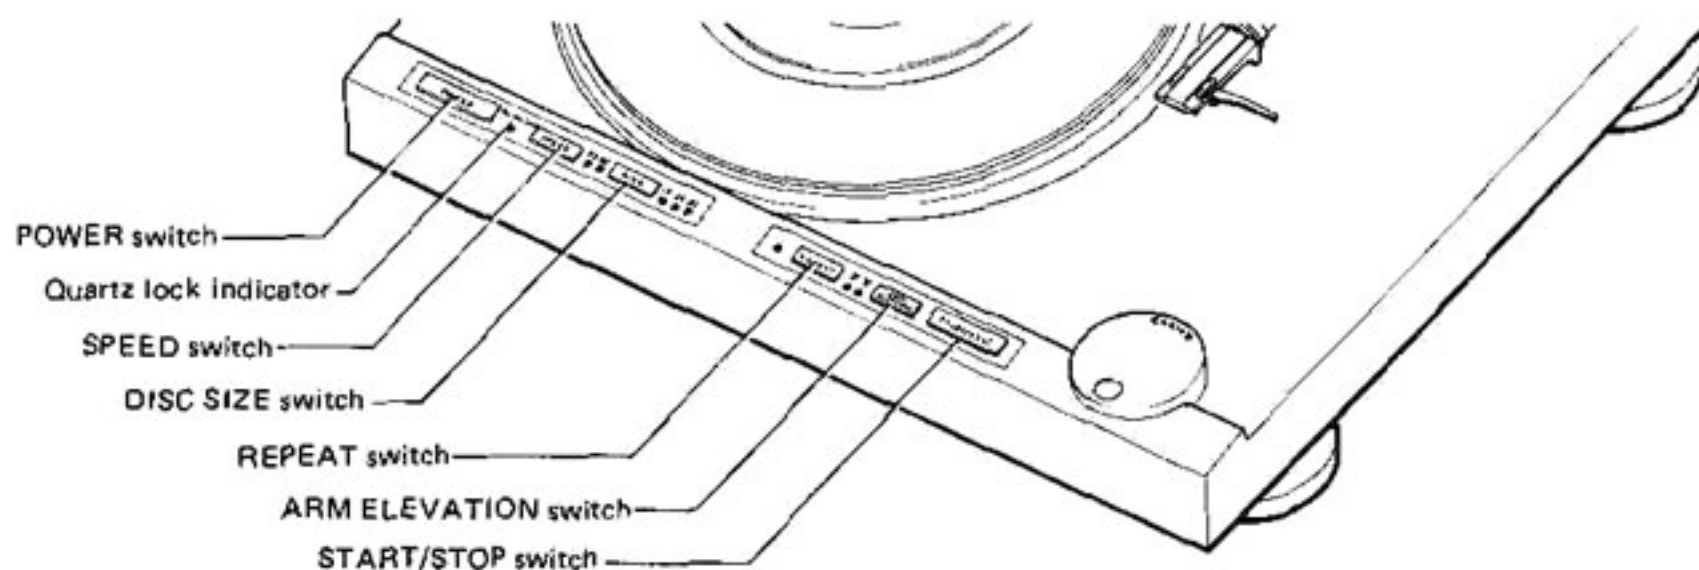

## BEFORE PLAY

Proceed as follows before starting record play.

### Stereo amplifier settings:

1. Set the volume control to its leftmost (minimum) position.
2. Set the power switch to ON.
3. Set the function switch to PHONO.

### Turntable settings:

1. Raise the dust cover and place the record on the platter.
2. Remove the stylus cover from the cartridge.
3. Depress the POWER switch to ON.
4. Select the SPEED switch in accordance with the rated speed of the record (33 or 45 rpm).
5. Rotate the arm rest counterclockwise and release the tonearm pipe clamp.
6. Lift up the arm clamp and release the tonearm.
7. Lower the dust cover.

## AUTO PLAY

### Procedure

1. Select the DISC SIZE switch that corresponds to the size of the record which you have placed on the platter.
2. Press the START/STOP switch. The tonearm moves from the arm clamp position to the lead-in groove on the record, and the platter starts rotating, the stylus will descend gently onto the record and play will commence (auto-lead-in).
3. Adjust the volume and tone to the desired levels using the controls on the stereo amplifier.

### Completion

1. When the last track on the record has been played, the tonearm will rise automatically and return to the arm clamp position. The platter will then stop (auto-return).
2. Secure the tonearm to the arm rest with the clamp.
3. Set the POWER switch to OFF.

### NOTE:

There will be no auto-return operation when the ARM ELEVATION switch is at UP.

## Suspension of play

Proceed as follows if you want to suspend play during a performance.

- Press the START/STOP switch and the tonearm will return automatically to the arm clamp position, and the platter will stop rotating (auto cut).



## REPEAT PLAY

Proceed as follows if you want to listen to the same record again and again:

1. Press the REPEAT switch.
2. Press the START/STOP switch and play will begin.
3. When the last track on the record has been played, the tonearm will rise, return to the first track, descend onto the record, and play will be repeated.

Press the REPEAT switch again to release the repeat play function. The function can also be released by pressing the START/STOP switch and suspending play or by setting the POWER switch to OFF.

## MANUAL PLAY


1. Set the ARM ELEVATION switch to the UP (  ) position. (The  indicator lights up.)
2. Rotate the REMOTE OPERATION knob counter-clockwise and move the tonearm across to the record. (or move the tonearm with your finger under the headshell's finger rest—manual operation.) The platter now starts to rotate.

Remote operation knob



Manual tonearm operation



3. Depress the ARM ELEVATION switch to the DOWN (  ) position. The tonearm descends gently onto the record and play begins.

### NOTE:

When the ARM ELEVATION switch is either in its UP or DOWN position, the tonearm can be moved with a finger.

## Interrupting play and changing tracks

1. Depress the ARM ELEVATION switch and cause the tonearm to rise.
2. Move the tonearm across to the record manually or with the REMOTE OPERATION knob.
3. Depress the ARM ELEVATION switch. The tonearm now descends onto the record and play begins.

## OPERATION PRECAUTIONS

- When the POWER switch is at OFF, do not move the tonearm. Failure to heed this warning may result in a damage.
- Do not set the POWER switch to OFF during play. To set this switch to OFF, always set the ARM ELEVATION switch to UP. If set to OFF with the switch at DOWN, the stylus or record may be damaged when the POWER switch is set to ON again.
- Always clean the stylus both before and after playing a record with a soft brush and make it a rule to clean the records with a good quality cleaner.
- When changing the headshell, clamp the tonearm to the arm rest so that the tonearm shaft is not strained in any way.
- Be careful not to make the turntable vibrate while a record is playing since this can result in damage to the stylus and record.
- Place only one record at a time on the platter. If two or more records are stacked on the platter, the stylus will not make proper contact with the grooves, and this will impair the quality of reproduction.
- Do not disconnect the power cord while the stylus is still in a record groove as this may damage the stylus and record.
- Never obstruct the platter with the hand while it is rotating. This may cause damage.
- Take care not to place metal objects (such as screws) on the rear and under side of the cabinet since the unit may be attracted by the cabinet due to the action of the magnet.
- Take care not to insert a screw or similar object into the hole where the tonearm moves. This will result in a tonearm malfunction or damage.



## MAINTENANCE

### GUIDE BAR MAINTENANCE

When the guide bars are covered with dirt or fingerprints, this may adversely affect the tonearm operation. In cases like this, wipe clean with the accessory cloth. If the dirt is not easily removed, dip a cloth into alcohol and wipe clean.

### CABINET AND DUST COVER

When the cabinet or dust cover becomes dusty or dirty, wipe it clean with a soft dry cloth. Remember that the surfaces can be corroded by furniture wax, thinner, and benzine and also by insecticide spray. The dust cover can be detached and cleaned.

### LUBRICATION


The motor shaft and bearings of this turntable employ oil-less bearings and so there is no need for lubrication. There is no need to lubricate the tonearm bearings, either.

### STYLUS

If the stylus tip is clogged with dust, the reproduced sound quality will be impaired. Use a soft brush to keep the stylus clean at all times. Be careful not to touch the tip since this may damage it. When using stylus cleaner (organic solvent), benzine or thinner to clean the stylus tip, take care not to allow any of the liquid to come into contact with the stylus holder. This may change the material.

### PC-600 STYLUS REPLACEMENT (Applicable to S/G model only)

The life expectancy of the PC-600 stylus tip is 800 ~ 1,000 hours. For the sake of maximum sound quality reproduction, Pioneer recommends replacement within the minimum time limit. The stylus tip is replaced by grasping the stylus holder and pulling it away from the body of the cartridge. The new stylus tip is then inserted by pushing it into the receptacle. The correct replacement tip is the PN-600. This may be obtained at your Pioneer dealer. Pioneer cannot guarantee performance or reliability if another type of stylus is employed.

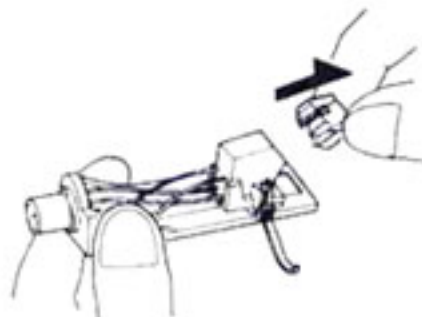

## LINE VOLTAGE SELECTOR SWITCH

The line voltage selector switch is located on the top surface of the cabinet of this turntable. Before your turntable is shipped from the factory, the switch is set to the power requirements of the turntable's destination, check that it is set properly before plugging the power cord into the outlet. If the voltage is not properly set or if you move to an area where the voltage requirements differ, adjust the selector switch as follows:

1. Disconnect the power cord.
2. Provide yourself with a medium-sized screwdriver. Insert the tip of the screwdriver into the groove of the selector switch and turn it so that the power voltage marking of your area points to the white mark by the arrow on the label.

HET model and  
HBT model



S/G model



# FEATURES

## Linear Tracking Tonearm

This turntable comes with a linear tracking tonearm which traces the sound grooves on the record linearly in the same way that the master cutting machine cuts the grooves in the first place. This means that the linear system is superior to conventional offset tonearms in many ways.

- (1) There is no tracking error thus preventing the generation of harmonic distortion.
- (2) In principle, there is no generation of inside force and so the crosstalk and intermodulation distortion are improved and the positioning of the sound images is stabilized.
- (3) The tonearm pipe is linear for optimum lateral balance.
- (4) It is possible to shorten the effective length of the tonearm and so this feature makes for a low equivalent mass and high rigidity. This combination also reduces resonance in the parts and compound resonance.

## Linear Motor, Direct Drive Mechanism

A linear motor is used to drive the tonearm directly, and an optical no-contact servo system is also employed. These systems enhance the signal-to-noise ratio to better than 78dB (DIN-B) making it possible to reproduce at a very high level of fidelity.

## Quartz PLL DD Motor and SHR Bearing Construction

A stable hanging rotor (SHR) type of bearing structure which sets the center of gravity in the rotary shaft to a low degree is utilized along with a direct drive Hall motor. This motor employs a quartz PLL system with superlative load resistance characteristics (220g with tracking force conversion), and indeed, the speed precision of the phonomotor is a high 0.002%. These features, together with the platter with its inertial mass (including rubber mat) of 330 kg.cm<sup>2</sup>, give a wow/flutter (WRMS) of less than 0.013%.

## Electronic Full Auto Mechanism

The model's full auto mechanism is based on optical, and therefore no-contact, detection principles so that force is not needlessly exerted on the tonearm. When the switch is depressed, the tonearm automatically swings over to the record and play begins.

## Manual and remote tonearm control

The tonearm can be moved across to the record track manually as with offset tonearms. In addition, by rotating the *function knob*, it is possible to operate the tonearm remotely by causing it to move to the left or right. In this way, it is easy to bring the tonearm across to the track you want to hear.

## All-electronic Durable Quick Stop Function

The model incorporates an all-electronic brake to bring the platter to a halt instantly. When the tonearm swings back to the arm clamp, a current flows in the opposite direction that the platter is rotating to the motor drive coil and, in an instant, the platter has stopped.

## Low Acoustic Feedback, Vibration-resistant Coaxial Suspension System

The platter and the tonearm are secured to the base board, and the base board is spring-mounted and separated from the cabinet with what Pioneer calls the coaxial suspension construction. This cuts out virtually all of the vibrations transmitted from the floor, and greatly reduces the chances of feedback.



## TROUBLESHOOTING

Sometimes, an operational fault can be mistaken for a malfunction or failure. Check the following points and see if you can find the symptoms of the trouble below before you get in touch with a serviceman. If you cannot locate the symptoms, contact your nearest Pioneer dealer.

Symptom	Possible trouble	Remedy
No sound.	<ol style="list-style-type: none"> <li>1. Phono cables are not connected properly.</li> <li>2. Headshell is not properly attached.</li> <li>3. Cartridge lead wires are loose.</li> <li>4. Amplifier is not being operated properly. (Function switch, tape monitor switch, speaker switches, etc. are not set correctly).</li> </ol>	<ol style="list-style-type: none"> <li>1. Connect cables securely to the PHONO input jacks on the amplifier (see page 6).</li> <li>2. Firmly secure tonearm locking collar (see page 4).</li> <li>3. Attach lead wires inside headshell properly (see page 5).</li> <li>4. Read the operating instructions that come with amplifier.</li> </ol>
Excessive noise.	<ol style="list-style-type: none"> <li>1. Ground lead is not connected.</li> <li>2. Tracking force is not correct.</li> <li>3. Dust or dirt has collected on the stylus tip.</li> <li>4. Dust or dirt has collected on the record.</li> </ol>	<ol style="list-style-type: none"> <li>1. Connect properly to the amplifier's ground terminal (see page 6).</li> <li>2. Refer to tracking force adjustment on page 7.</li> <li>3. Clean the stylus tip with a soft brush.</li> <li>4. Clean the record with a good quality cleaner.</li> </ol>
Sound is distorted.	<ol style="list-style-type: none"> <li>1. Dust or dirt has collected on the stylus tip.</li> <li>2. Tracking force is not correct.</li> <li>3. Stylus is worn.</li> <li>4. Amplifier's tone controls set too high.</li> </ol>	<ol style="list-style-type: none"> <li>1. Clean the stylus tip with a soft brush.</li> <li>2. Refer to tracking force adjustment on page 7.</li> <li>3. Replace with new stylus.</li> <li>4. Set tone controls to lower position.</li> </ol>
Tonearm does not descend with auto play	<ol style="list-style-type: none"> <li>1. ARM ELEVATION lever is set to UP position.</li> <li>2. Tracking force is not correct.</li> </ol>	<ol style="list-style-type: none"> <li>1. Set to DOWN position.</li> <li>2. Refer to tracking force adjustment on page 7.</li> </ol>
Tonearm does not move with auto play.	<ol style="list-style-type: none"> <li>1. Arm clamp is still fastened.</li> </ol>	<ol style="list-style-type: none"> <li>1. Release arm clamp.</li> </ol>
Intermittent sound.	<ol style="list-style-type: none"> <li>1. Tracking force is not correct.</li> <li>2. Stylus is worn.</li> <li>3. Record is scratched or warped.</li> </ol>	<ol style="list-style-type: none"> <li>1. Refer to tracking force adjustment on page 7.</li> <li>2. Replace with new stylus.</li> <li>3. Replace record.</li> </ol>
Tonearm movements is stiff with manual operation.	<ol style="list-style-type: none"> <li>1. Arm elevation height not adjusted properly.</li> <li>2. Arm elevation switch is at DOWN and POWER switch at OFF.</li> </ol>	<ol style="list-style-type: none"> <li>1. Provide clearance between arm elevation and tonearm.</li> <li>2. Set arm elevation switch to UP and POWER switch to ON.</li> </ol>
Tonearm moves by itself.	<ol style="list-style-type: none"> <li>1. Arm elevation height not adjusted properly.</li> <li>2. Cabinet is not level.</li> </ol>	<ol style="list-style-type: none"> <li>1. Provide clearance between arm elevation and tonearm.</li> <li>2. Adjust the cabinet with the insulators and make it perfectly level.</li> </ol>
If you detect any trouble when playing records, the fault may not lie with the turntable but with other hi-fi components. Be sure to check the amplifier, speaker system, and any other electrical equipment which you are using in the vicinity of the turntable.		

## SPECIFICATIONS

### Motor and Turntable

Drive System	Direct-drive
Motor	Quartz PLL Hall motor
Turntable Platter	310mm diam. aluminum alloy die-cast
Inertial Mass	330kg-cm <sup>2</sup> (including platter mat mass)
Speeds	33-1/3 and 45rpm
Wow and Flutter	Less than *0.013% (WRMS) 0.025% (WRMS) 0.035% (DIN)

Values marked with an "\*" designate the wow and flutter for motor, and do not include the cartridge or tonearm load.

Signal-to-Noise Ratio	More than 78dB (DIN-B) (with Pioneer cartridge model PC-600)
-----------------------	---

### Rotational Characteristics

Build-up Time	Within 90° rotation at 33-1/3rpm
Speed Deviation	Less than 0.002%
Speed vs. Load Characteristics	Stable up to 220 grams drag load
Speed Drift	Less than 0.00008%/h at 33-1/3rpm Less than 0.00003%/degree temp. change at 33-1/3rpm

### Tonearm

Type	Linear Motor Direct-drive Static-balance type, Linear-tracking arm
Effective Arm Length	190mm
Overhang	0mm
Usable Cartridge Weight	4g (min.) to 24g (max.)
Arm Height Adjust Range	±3mm
Headshell weight	10.5g

### Subfunctions

Auto lead-in
Auto-return
Auto cut
Quick repeat
Quick play
Quick stop
Stylus pressure direct-readout counterweight
Arm height adjusting device
Cueing device
Free stop hinges

### Semiconductors

ICs	22
Transistors	17
Diodes	16
Hall Elements	3
LED	14
Photo Transistors	5
CdS	1

### Miscellaneous

#### Power Requirements

HET, HBT models	AC220/240V ~ (switchable) 50, 60Hz
S/G model	AC110/120/220/240V ~ (switchable) 50, 60Hz

Power Consumption	35W
-------------------	-----

Dimensions	494(W) x 154(H) x 456(D)mm 19-7/16(W) x 6-1/16(H) x 17-15/16(D) in.
------------	--

Weight	12kg/26lb 8oz
--------	---------------

#### Accessories

EP Adapter	1
Screwdriver	1
Overhang gauge	1
Level	1
Cleaning cloth	1

#### Cartridge mounting parts (HET, HBT models only)

Cartridge mounting screws	6
Cartridge mounting nuts	2
Cartridge mounting washers	2
Cartridge PC-600 (S/G model only)	1
Operating instructions (French and German furnished on models for HET)	1

#### NOTE:

Specifications and design subject to possible modification without notice, due to improvements.