



Deze download wordt u aangeboden door **Pick-upnaalden.nl**

Fazantendreef 17-19

8251 JR Dronten

T: 0321 769022

E: info@pick-upnaalden.nl

W: www.pickupnaalden.com

W: www.pickupnaald.com


Facebook: www.facebook.com/pickupnaalden

Twitter: twitter.com/Pickupnaalden

Google+ : plus.google.com/114738445546162436900



BEOGRAM 1203 and 2000
TYPE 5239 and 5240

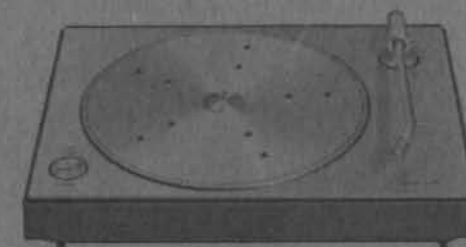

Ryland Huntley

18 OLD BOND STREET, BATH, TEL 4332
RADIO & TELEVISION

BANG & OLUFSEN A/S
DK - 7600 STRUER
DENMARK
TELEPHONE 07 - 85 11 22 TELEX 86529
CABLE ADDRESS BANGOLUF
3538224
d.kr. 7.50
PRINTED IN DENMARK
I/S EKSPRES-TRYKKERIET STRUER 9074
Form. 7184

SERVICE MANUAL



TECHNICAL DATA

	BEOGRAM 1203	BEOGRAM 2000
Type No.	5239	5240
Sound system	Stereo, matrix	Stereo, matrix
Output	2 x 1 mV	2 x 1 mV
Speeds	33-45 rpm	33-45 rpm
Tonearm	Radial	Radial
Pickup cartridge	SP 14 A	SP 10 A
Automatic pickup movement	Yes	Yes
Automatic speed selection	Yes	Yes
Wow and flutter, DIN	< ± 0.15%	< ± 0.12%
Wow and flutter, WRMS	< ± 0.075%	< ± 0.06%
Rumble DIN unweighted	> 35 dB	> 37 dB
Rumble DIN weighted	> 58 dB	> 60 dB
Speed deviation	< 0.1%	< 0.1%
Speed control range	> 6%	> 6%
Dial for speed	Stroboscope 295 mm	Stroboscope 295 mm
Stylus pressure range	0-3.5 gram	0-3.5 gram
Tangential tracking	0.126°/cm	0.126°/cm
Lift system	Mechanical	Mechanical
Antiskating	Inclined channelling inside bearing	Inclined channelling inside bearing
Motor	Asynchronous	Asynchronous
Drive system	Idler wheel and belt	Idler wheel and belt
Turntable	30 cm 1.4 kg	30 cm 1.4 kg
Dust cover	Detachable	Hinged and detachable
Power supply	220 (110) volts	220 (110) volts
Frequency	50 Hz	50 Hz
Power consumption	10 watts	10 watts
Dimensions W x H x D	44 x 11.5 x 33 cm (17,3" x 4,6" x 13,0")	44 x 12 x 33 cm (17,3" x 4,7" x 13,0")
Weight	7.2 kg (15.86 lbs)	7.5 kg (16.52 lbs)

Pick-up	SP 14 A	SP 10 A
Stylus	Spherical diamond	Spherical naked diamond
Radius of curvature	15 µm	15 µm
Frequency range	20-20,000 Hz ± 3 dB 50-16,000 Hz ± 2.5 dB	20-25,000 Hz ± 3 dB 50-16,000 Hz ± 2 dB
Channel separation 1000 Hz	> 20 dB	> 25 dB
400-10,000 Hz	> 15 dB	> 20 dB
Channel difference	< 2 dB	< 2 dB
Intermodulation	< 1%	< 1%
Recommended stylus pressure	2 gram	1.2 gram
Compliance	15 x 10 ⁻⁶ cm/dyne	25 x 10 ⁻⁶ cm/dyne
Effective tipmass	1 mg	0.8 mg
Output mV/cm/sec.	1 mV/47 kohms	1 mV/47 kohms

Subject to change without notice


CONTENTS

Sect. Page

Technical data	1
Disassembly	2
Diagram	3
Adjustments	4
Microswitch for LIFT (ON)	4
"Silent" Switch	4
Relay	4
Motor-voltage Switch	4
Switch for Relay Holding Voltage	4
Rotor	4
Step-cone Pulley	4
Motor, Centering	4
Motor, Height	4
Pickup, Height	4
Pickup Arm, Balance	4
Pickup Arm, Downstroke	4
Pickup, Parallelity	4
Dust Cover, BEOGRAM 2000	4
Parts list	5
Beogram 1203	5
Beogram 2000	5
Modifications	6

ADJUSTMENTS

Microswitch for LIFT (ON)

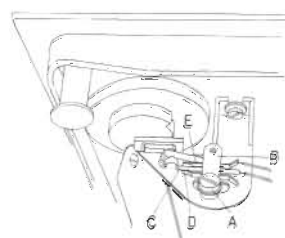


Loosen screw A.

Adjust microswitch B to the point where arm C switches positively from arm D to E and back to D again when the LIFT-button is pressed and thereafter released.

Tighten screw A.


"Silent" Switch

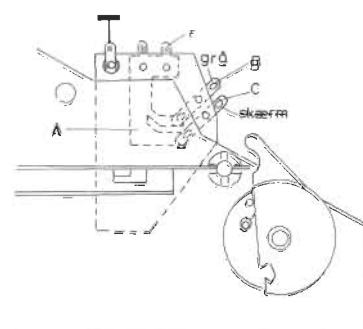

Adjust tags B and C so that on the pickup being raised contact will first be made between A and B (short-circuiting the channels together) and thereafter between A and C (Short-circuiting the signal).

NOTE: Both contact pairs should be open with the pickup lowered.


Relay

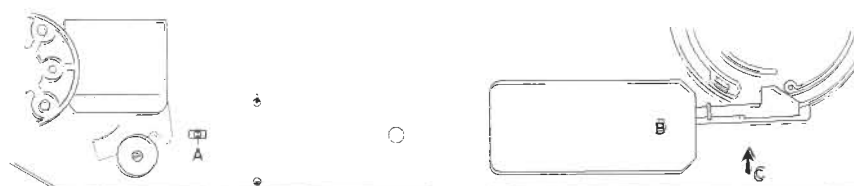

Adjust relay B as far as possible in the direction of arrow C but only to the point where the relay will positively attract the armature when the LIFT button is pressed quickly.

Adjustment is performed with eccentric A, which becomes accessible after removal of the turntable. Eccentric A should be secured with lacquer after adjustment.


Motor-voltage Switch

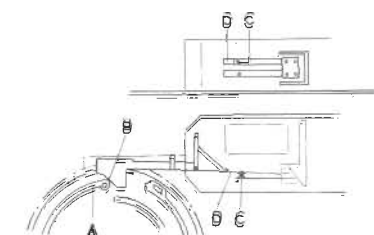

Adjust contact pair C to provide contact when arm B is halfway up on curve segment A when the cam-lifting wheel is rotated manually. Adjustment is performed by bending the tag D through the hole in the relay housing.

NOTE: The relay coil must not be energized while making this adjustment.

Switch for Relay Holding Voltage

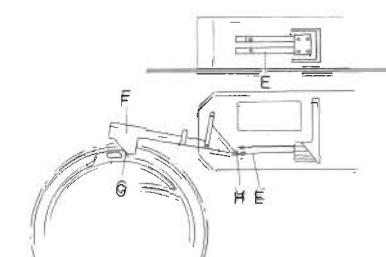


Adjust contact pair E so that relay holding voltage is switched off when arm F is halfway up on cam G.

Adjustment is performed by bending the tag H through the hole in the relay housing.

- Notes:
1. Both contact pairs of the relay should be open when the cam-lifting wheel is in its stop position and the relay is not simultaneously energized from "LIFT".
 2. Both contact pairs of the relay should make contact when the relay coil is energized (from "LIFT") and the cam-lifting wheel is simultaneously in its stop position (arm F in the neutral position).


MOTOR

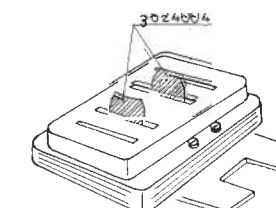

In case the motor has been disassembled it will be necessary to center the rotor. Centering is performed by means of two gauges, supplied together under No 3624004.

The gauges should be inserted from the bottom as shown by the sketch. Thereafter tighten the bolts.

Step-cone pulley

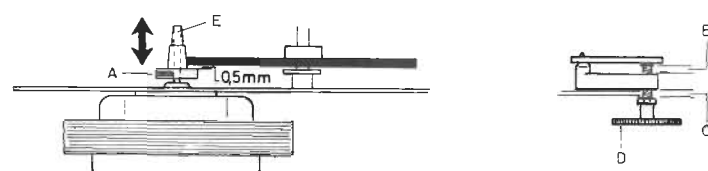


Set record selector at 17 (45 r.p.m.).
Adjust screw D until distances B and C are equal.
Slacken screw A.
Set the step-cone E at the correct speed.
Retighten screw A.





Turn screw D fully in the direction of C towards stop.
If the idler wheel now rests against the collar of the step-cone pulley, slacken locknut F. It is now possible to adjust the position of screw D on the adjusting spindle and thus the position of the idler wheel on the step-cone pulley at maximum speed.
Retighten locknut F.
Check that turntable speed can be varied $\pm 3\%$ in relation to correct speed.

Centering the sub chassis

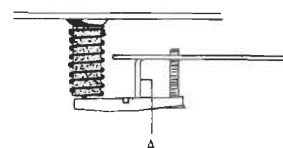

Turn the transport screws counter-clockwise towards stop. Bend leg A so that the distance between turntable and top panel is the same all the way round.

Height of sub chassis

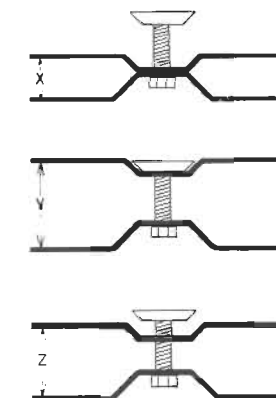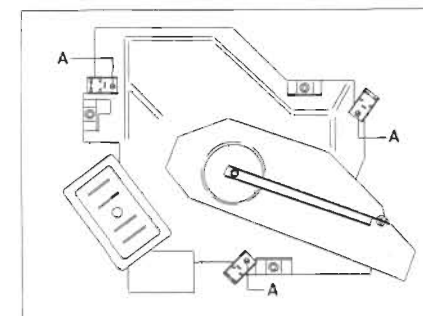

Turn the transport screws counter-clockwise towards stop.
Push the sub chassis hard against the top cover and measure distance X (see drawing).
Pull sub chassis as far away from top panel as possible and measure distance Y.
Adjust the sub chassis by means of screws A (with a standard record weighing 75-100 g on the turntable) so that distance Z is equal to $(X + Y) : 2$.
The height of the turntable in relation to the top cover should be uniform all the way around.
Check that the subchassis moves freely.


Pickup, Height



Lifting screw A is adjusted with the pickup arm raised and the pickup stylus floating between 3 and 6 mm above the turntable's outermost knobs (see sketch).

NOTE: When in the raised position, the pickup must not touch the record when slid in above the latter.

Pickup Arm, Balance

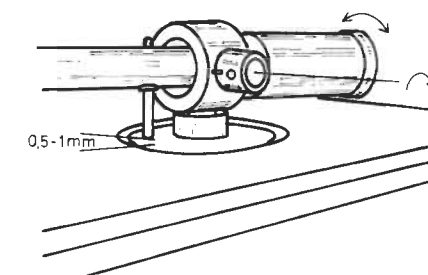

Turn the stylus-force adjustment screw to 0.

Adjust the counterbalance weight so that the pickup arm will be brought into balance with the lifting screw floating between 1/2 and 1 mm above the lifting ring.


Adjustment is performed by rotating the rear rim of the counterbalance weight.

Thereafter adjust stylus force.

Beogram 1203: 2 pond (SP 14 A)

Beogram 2000: 1,2 pond (SP 10 A).


Pickup Arm, Downstroke

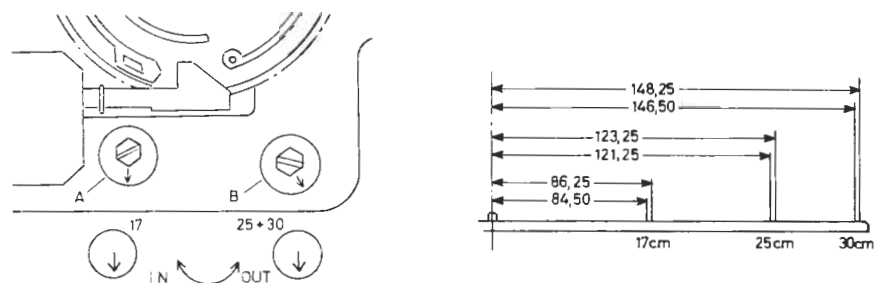

With the record selector at "17", adjust eccentric A so that the pickup when operated by the automatic cueing mechanism will lower into the field marked "17" on the sketch above.

Adjust eccentric B so that the pickup will lower in the field marked "30" with the record selector at "30" and in the field marked "25" with the record selector at "25".

NOTE: Dimensions are given from the centre of the record spindle.

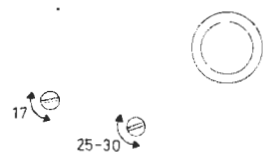

With the base-plate in position, lowering of the pick-up arm can be adjusted through the holes indicated in the base-plate.


Pickup, Parallelity



Loosen screw C.

Turn socket D so that the distances A and B are equal - in other words so that the plane portion of the pickup is parallel with the surface of the record.


Dust Cover, BEOGRAM 2000

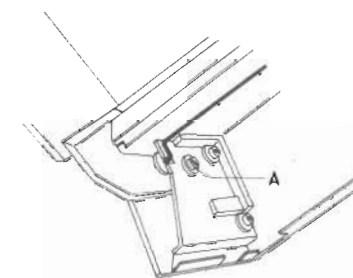

With the screw A in both sides of the cover housing adjust the friction so that the cover can hold itself in all positions within its travel.


PARTS LIST FOR BEOGRAM 1203,
TYPE 5239


1	3164076	Dust cover
2	3950283	Moulding
3	3411521	Cabinet, teak
	3411523	Cabinet, rosewood
	3411524	Cabinet, oak
	3411525	Cabinet, white
4	2628003	Spring
5	2576071	Spacer
6	2510067	Lead holder
7	2013208	Screw 2,84 x 9,52 mm ART 4261
8	3454156	Cabinetbottom
9	2042247	Screw AM 4 x 30 mm din 84, black

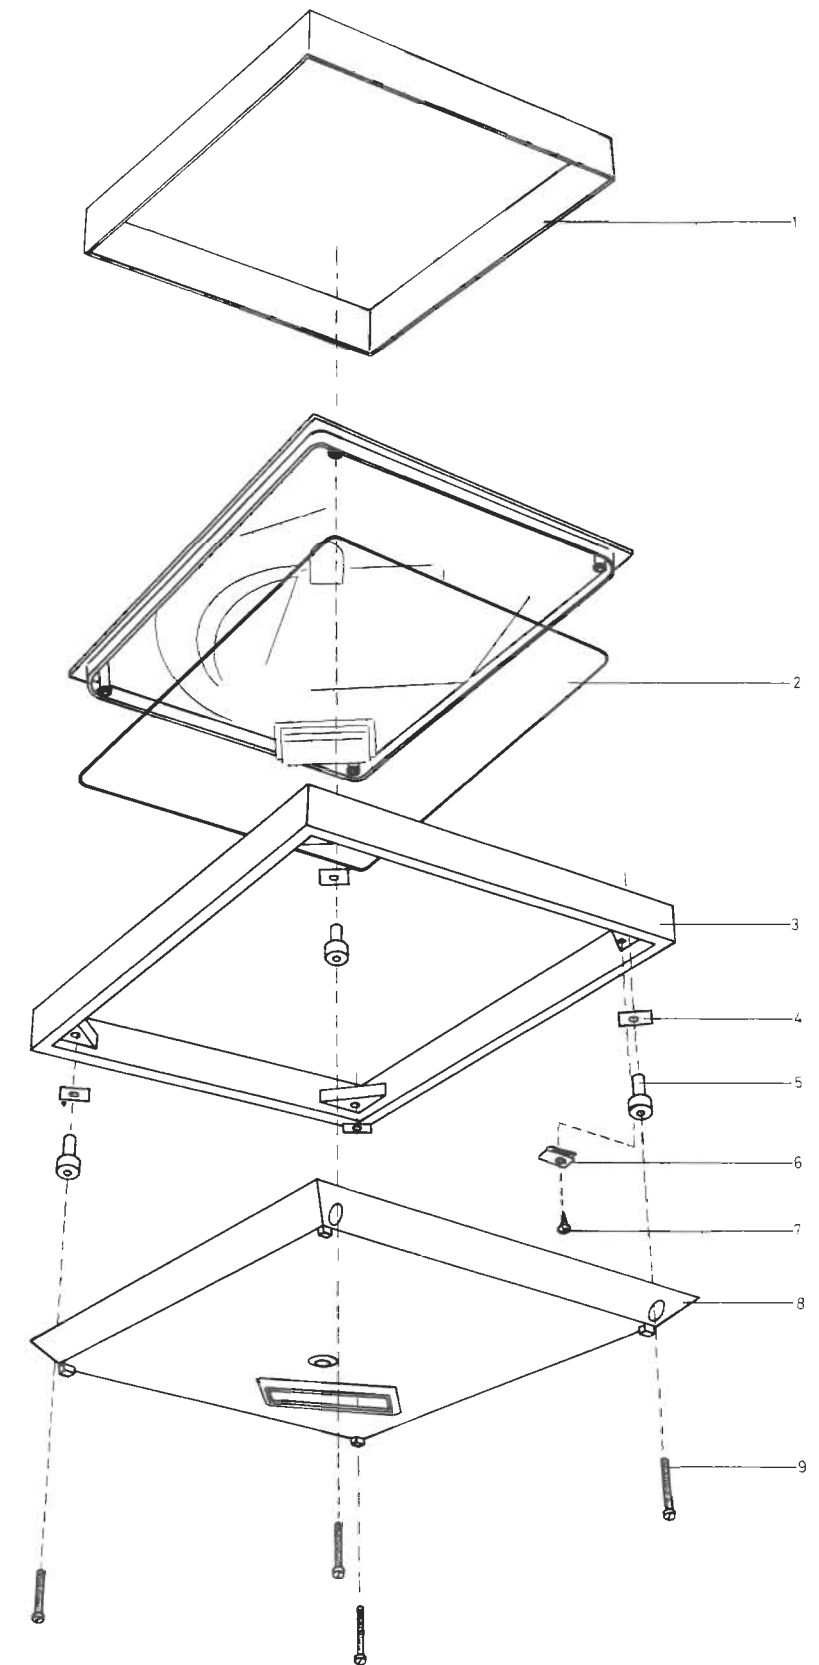

80	2834011	Turntable hub
81	2038220	Screw AM 3 x 12 mm dia 84
82	3150009	Bearing bushing
83	2380013	Nut M3
84	2700010	Gear-wheel
85	2361019	Locking pin
86	2854031	Arm
87	2819073	Spring
88	7600018	Relay
	4200279	Elko 1 µF/250 V
	8300176	Diode
89	3131068	Cover
90	2854032	Arm
91	3131067	Cover
92	2819074	Spring
93	3014025	Friction plate
94	2819075	Spring
95	2395030	Lock disc
96	2938084	Washer 25-30 cm
	2938088	Washer 17 cm
97	3014024	Arm positioning guide
98*	3014026	Arm positioning guide
99	2390002	Circlip
100	2622200	Washer
101	2905052	Adjustment bearing
102	3035020	Plastic foot
103	2622198	Washer
104	2850057	Cueing arm
105	2803005	Eccentric
106	2992048	Pin
107	7600026	Relay
	3947469	High-voltage insulating tape
108	2819076	Holder
109	3017010	Cam-lifting wheel
110	2390050	Circlip
111	2510004	Cable clamp
112	2015200	Screw 3,5 x 6,35 mm ART 4261
113	2012903	Screw
	2625002	Tooth-lock washer
114	2622198	Washer
115	2622198	Washer
116	7459004	Switch contacts
117	2854033	Arm
118	2389039	Nut
119	2812063	Spring
120	3130054	Lifting device
121	2038005	Screw AM 3 x 5 mm din 963
122	2802025	Lifting ring
123	2390052	Circlip
124	2622199	Washer
125	3152105	Ball holder
126	2917015	Ball
127	2938067	Ball guide
128	2938068	Cage
129	2938085	Pick-up bearing
130	2390032	Bearing lock
131	2390065	Circlip
132	3110002	Chassis
	3112149	Middle chassis
133	2390054	Circlip
134	2851067	Coupling
135	2819106	Spring
136	2750012	Clutch disc
137	2819107	Spring
138	2938086	Bearing column
139	2938103	Adjustment collar
140	2850076	Lifting bar
141	2852025	Lifting arm
142	2938087	Pick-up bearing, complete

* Pos. 98: After No. 195800, 3014031 is used

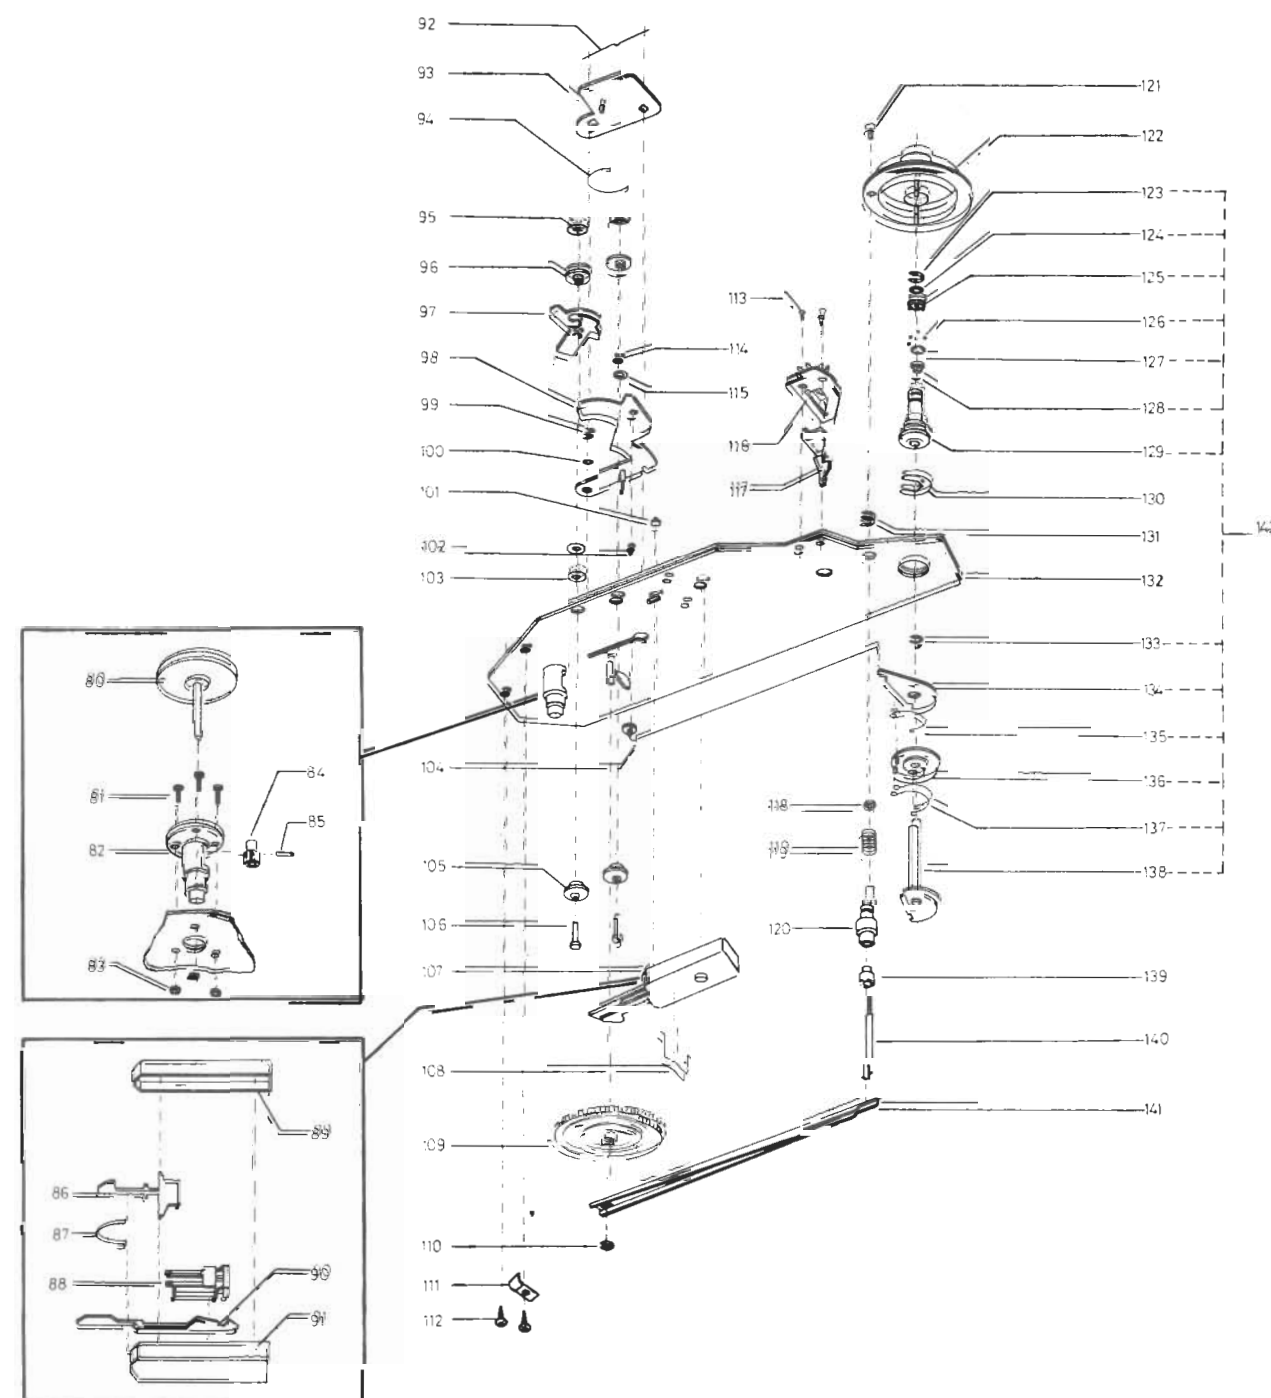

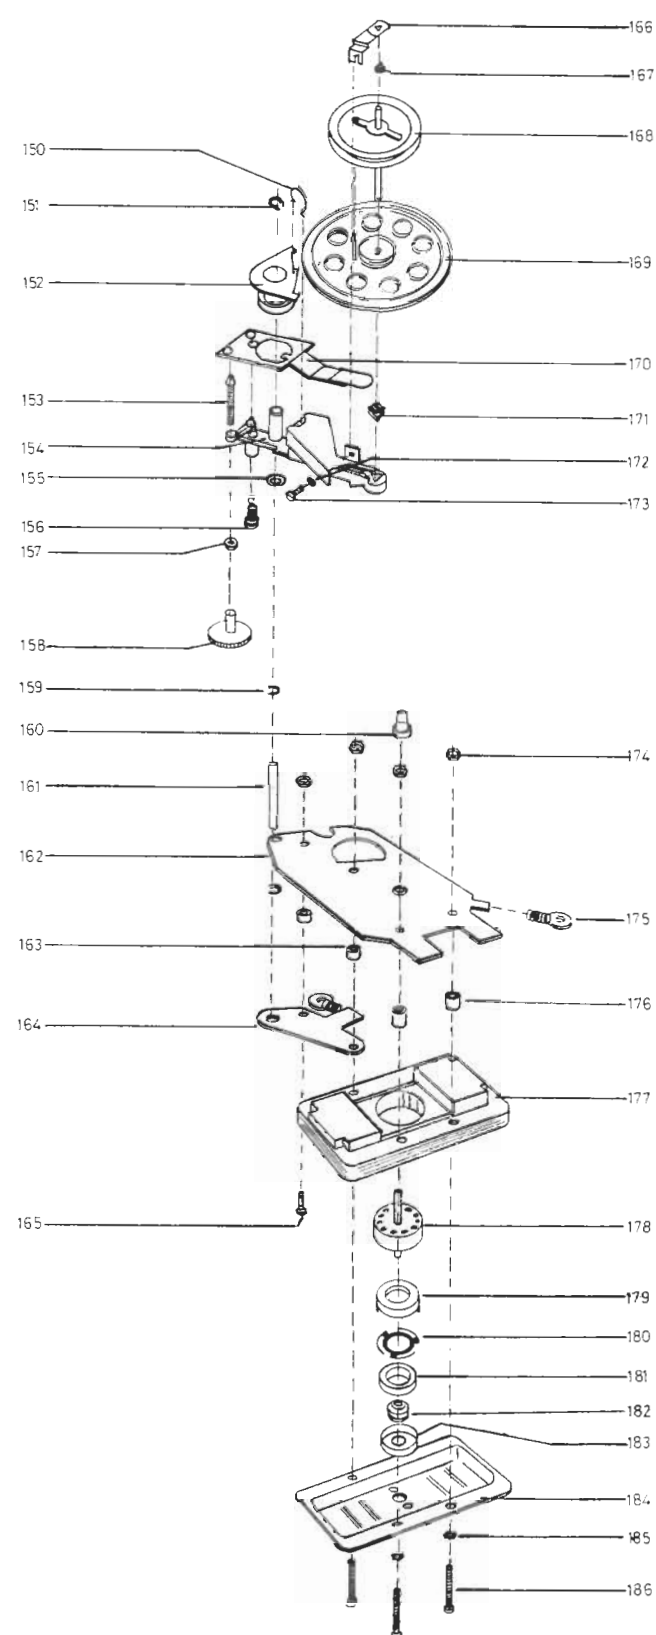

150	2816068	Spring
151	2390015	Circlip
152	3017006	Lifting arm
153	2076703	Vernier speed regulator screw
154	3112099	Gear chassis
155	2622198	Washer
156	2810034	Spring
157	2380012	Nut M3
158	2932040	Adjustment knob
159	2390050	Circlip
160	2804033	Stepped pulley
	2070001	Screw
161	2831020	Shaft
162	3110003	Chassis with bearing
163	2576054	Spacer
164	3110004	Motor bracket
165	2038222	Screw AM 3 x 14 mm din 84
166	3150011	Bearing holder
167	2905032	Bearing
168	2722004	Drive wheel
169	2804012	Idle wheel
170	2854019	Lifting arm
171	2905032	Bearing
172	2622159	Washer
173	2038205	Screw AM 3 x 4 mm din 84
174	2380012	Nut M3
175	2934060	Suspension
176	2576055	Spacer
177	3351002	Stator
178	2871001	Rotor
179	3150015	Race
180	2819055	Spring
181	3912033	Felt washer
182	2905036	Bearing
183	2905059	Bottom bearing
184	3164105	Cover
185	2625002	Tooth-lock washer
186	2038235	Screw AM 3 x 25 mm din 84

PARTS NOT SHOWN

3015002	Record spindle
6270138	Pick-up cable with plug
6271047	Mains lead with plug
3535035	Instruction diagram
3391371	Outer carton
3391319	Top/bottom inserts
3397148	Packing, bottom
3397149	Packing, lid
3397151	Packing, top
3917023	Foam rubber support for pick-up arm
3984208	Oil for bearings in Beogram motor

PARTS LIST FOR BEOGRAM 2000,
TYPE 5240

1	3164201	Tilttable dust cover, complete
8	3454163	Cabinet bottom, complete
20	3458126	Top plate
45	8905425	Pick-up unit SP 10 A
	8905429	Stylus unit SP 10 A
190	3164102	Dust cover
191	2623020	Friction disc
192	3031052	Mounting hardware, left
	3031053	Mounting hardware, right
193	2013008	Screw
194	2389032	Screw
195	2932049	Bushing
196	2389032	Screw
197	3152091	Spring retainer
198	2819053	Spring, left
	2819054	Spring, right
199	2568203	Trim strip



PARTS NOT SHOWN

3010007 Stop for cover


Other parts as in BEOGRAM 1203, type 5239

CABINET BEOGRAM 2000

The cabinet for BEOGRAM 2000 is delivered without holes for stops. The holes are drilled as shown on the drawing which shows the right front corner from above. Corresponding hole is drilled in the opposite cabinet side.

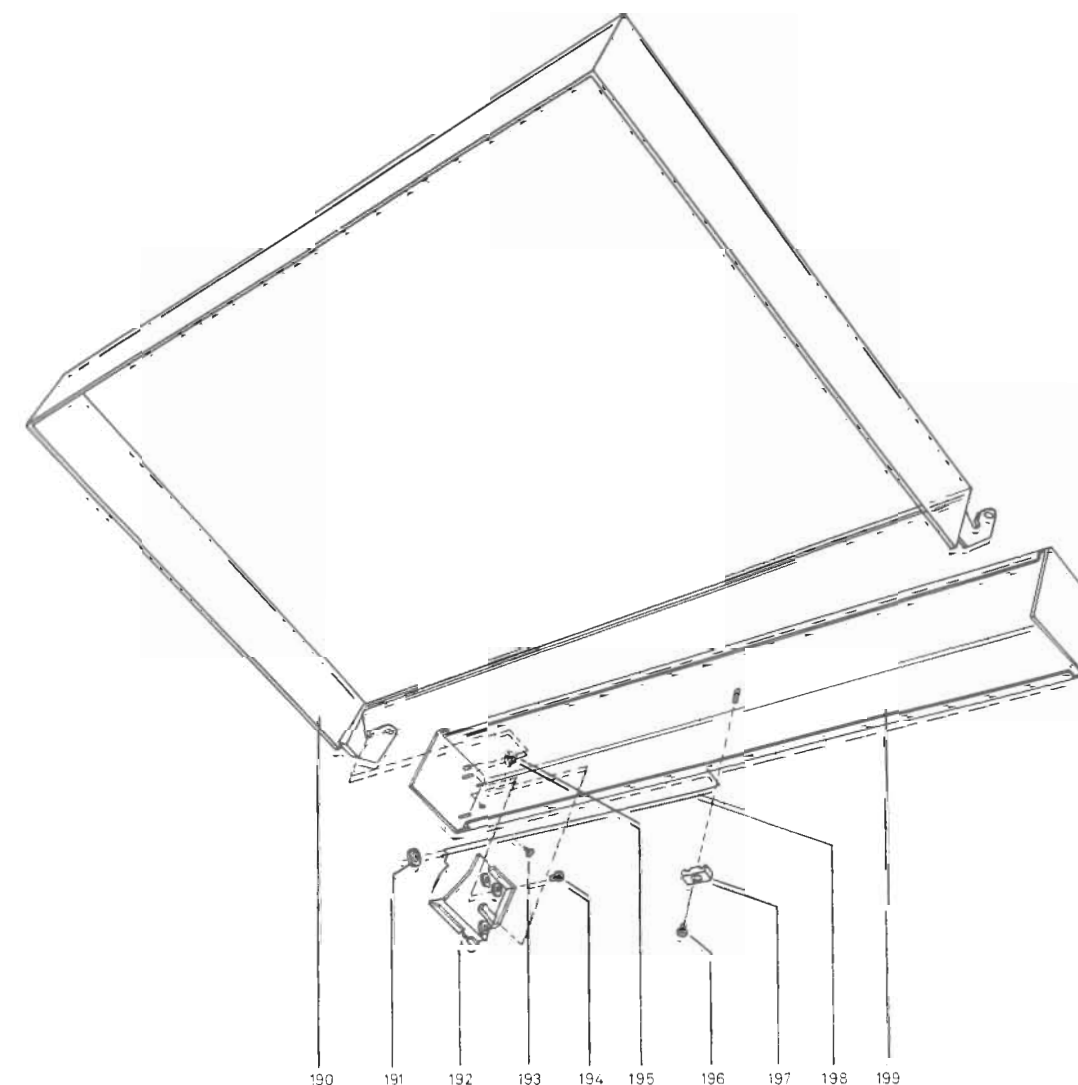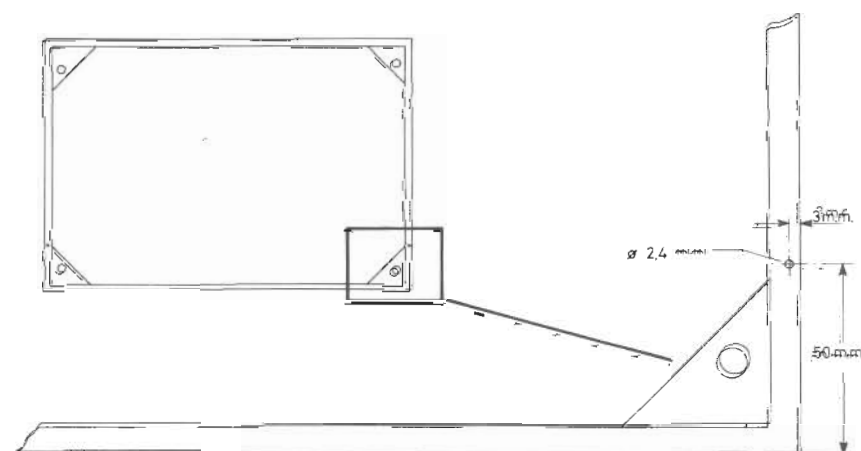

MODIFICATION

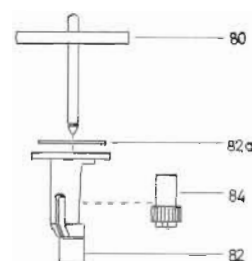

80	2834044	Turntable hub
82	3150037	Bearing bushing
82a	2905060	Bearing (top)
84	2700014	Gear-wheel