



Deze download wordt u gratis aangeboden door Pick-upnaalden.nl

Web : www.pickupnaalden.com
Email : info@pick-upnaalden.nl
Facebook : www.facebook.com/pickupnaalden
Twitter : twitter.com/Pickupnaalden
Google+ : https://plus.google.com/+FCaris_pickupnaalden

SERVICE MANUAL

COMPUTERIZED FULL AUTOMATIC
QUARTZ-SERVO TURNTABLE

SANSUI XR-Q9



SPECIFICATIONS

Type	Two-speed direct-driven
Speeds	33-1/3, 45 rpm
Platter	Aluminum alloy die-cast 350 mm (13-3/4") diameter 1.7 kg (3.74 lbs)
Motor	DC Brushless servo-type (Quartz-servo)
Wow and flutter	Less than 0.022 % (WRMS) Less than 0.015 % (WRMS-read out direct at the FG output)
S/N	Better than 62 dB (IEC-B)
Rumble	Better than 78 dB (DIN-B)
Tonearm	Statically-balanced type
Tonearm length	245 mm (9-11/16")
Overhang	16 mm (5/8")
Optimum cartridge weight	When the headshell supplied is employed 4 ~ 10 g
Dimensions	483 mm (19") W 142 mm (5-5/8") H 420 mm (16-9/16") D
Weight	11.6 kg (25.5 lbs) net 13.6 kg (30 lbs) packed
Power consumption	25 W

•The power voltage is adjusted to the one of the area where you bought the unit.

Specifications of the cartridge (applicable only to the units with cartridge)

Model SV-101

Type	Dual magnet
Frequency response	10 ~ 20,000 Hz
Output voltage	2.5 mV per channel (1,000 Hz, 35.4 mm/sec)
Load impedance	47 kΩ
Tracking force	2 g
Stylus	0.6 mil, diamond spherical (SN-101)


*Design and specifications subject to change without notice for improvements.

*In order to simplify the explanation illustrations may sometimes differ from the originals.

Sansui

SANSUI ELECTRIC CO., LTD.

1. BLOCK DIAGRAM

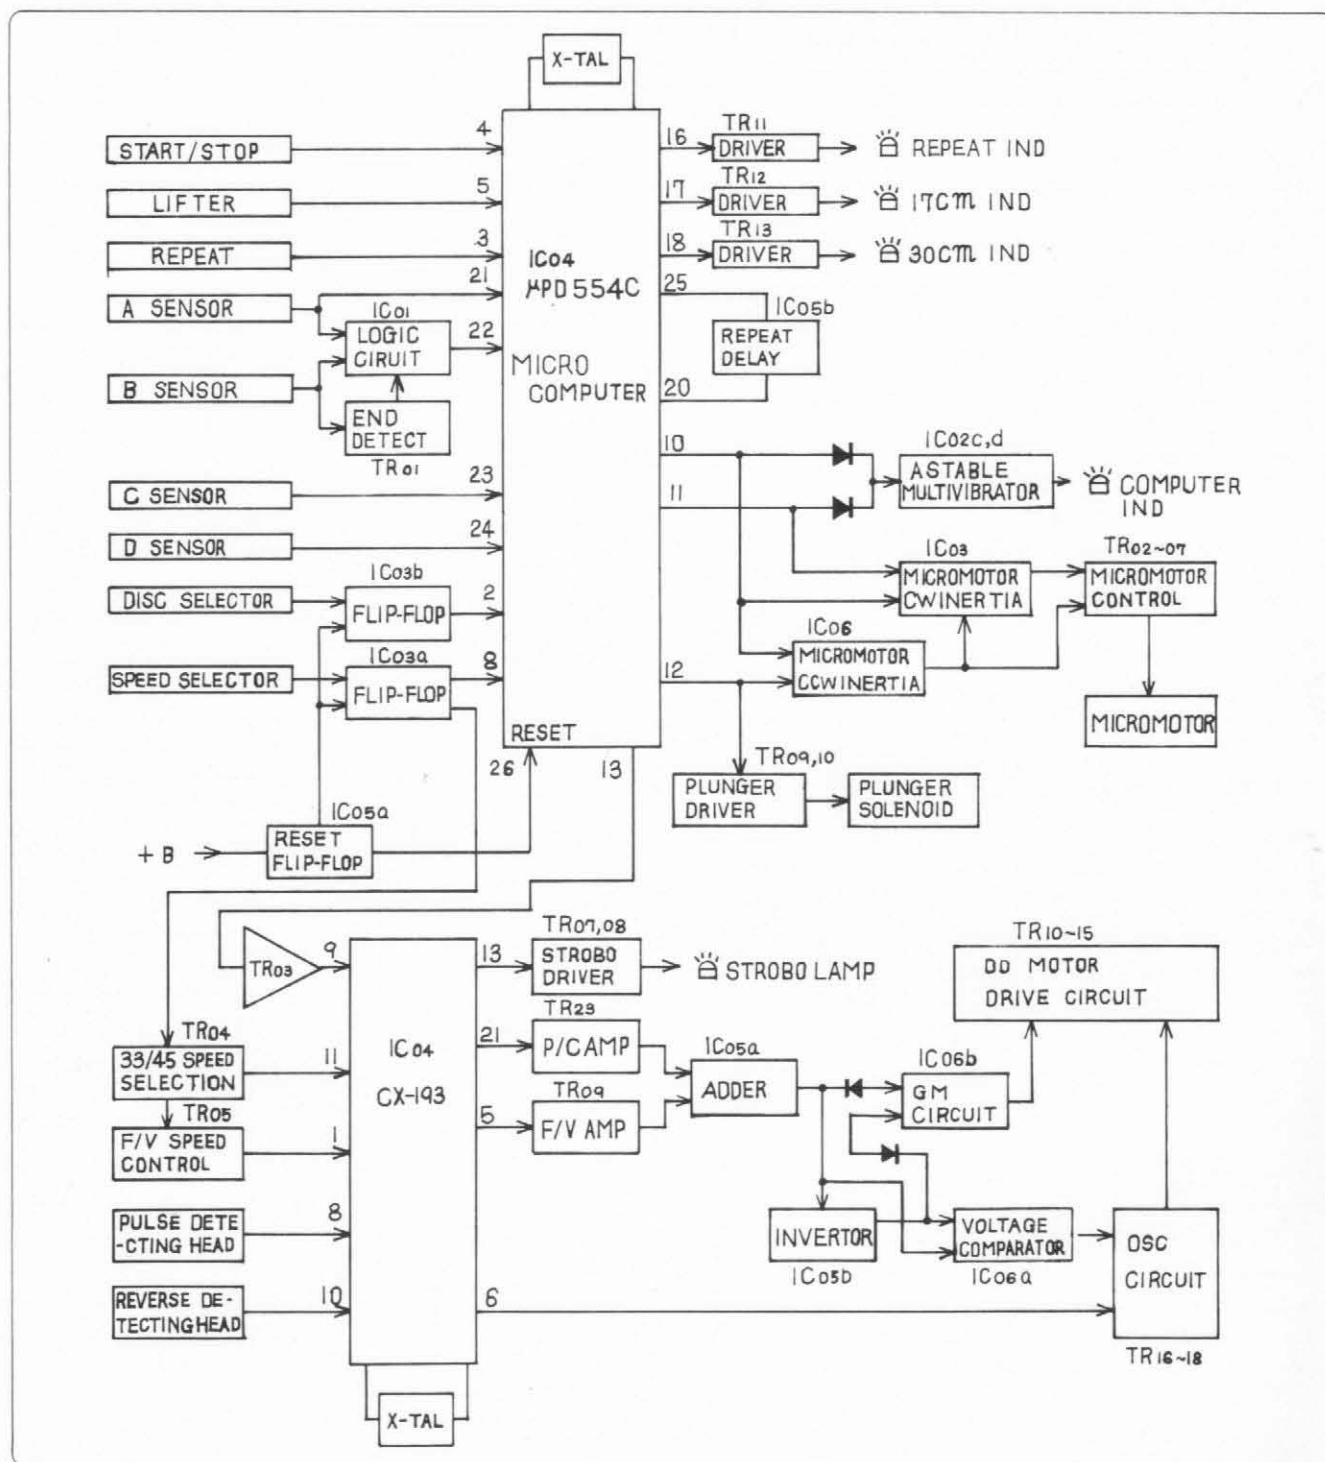

2. OPERATIONS

2-1. General

This automatic turntable uses a microcomputer in the same way as FR-D4/FR-Q5; accordingly, the DD motor start/stop operation and the tone arm operation are automatically controlled. A new lifter function (the lifter can be moved up and down independently in all operations) is provided in addition to the functions of FR-D4/FR-Q5. Also, a newly-developed normal/reverse torque servo circuit is

used in the DD motor servo system, in order to keep the revolution speed constant at all times against various load fluctuations by providing a high rate servo control. In addition to these operation features, the automatic turntable is of a howling-proof floating structure type, thereby improving the sound quality in association with a light-weight, Dyna-optimum-balanced-straight tonearm.

2-2. Operation of Each Section

- Concerning the automatic mechanism assembly, the arm position sensor, and the lifter position sensor, refer to description on "Operation 2-2" in Service Manual for FR-D4/D4K.
- The XR-Q9 control circuit can be divided into two sections:
 - a microcomputer and the peripheral circuits which mainly control the tonearm, and
 - a servo circuit which controls the DD motor.

A) Microcomputer and the peripheral circuits

1. Microcomputer

The microcomputer μ PD554C decides the required motions of the tonearm and DD motor, basing on signals applied to the input ports (Pins 2 ~ 5, 8, and 21 ~ 24), and outputs control signals to the output ports (Pins 16 ~ 18, and 10 ~ 13) in accordance with programs previously stored in the microcomputer. Fig. 2-1 shows the rough relationship between the microcomputer input/output ports and the functions; Fig. 2-2 shows a timing chart of the microcomputer input/output.

As is better understood, the microcomputer becomes active; that is, the circuits connected to each pin begin to operate, if the output port potential is H.

2. Microcomputer peripheral circuits

Since the microcomputer peripheral circuits begin to operate if the output of microcomputer is H, it is necessary that all the pins other than Pin 18 (30 cm indicator) are at L level in the initial state.


Therefore, when the power switch is turned ON, a reset pulse is given to Pin 26 (RES) of the microcomputer through the IC_{05a} (RESET Flip-Flop) so that the output ports may be changed to L level. Fig. 2-3 shows the truth table and a block diagram of the flip-flop. The reset pulse from the IC_{05a} is also applied to the IC_{503a} and b on the S-0038 to reset these ICs. The IC_{503a} and b (S-0038) are also flip-flops, the truth table and a block diagram of which are shown in Fig. 2-4.

If the IC₀₃ is reset, the Q output (Pins 1 and 13) changes to L, and $\bar{Q}$ output (Pins 2 and 12) H. Pin 13 of the IC₀₃ is connected to the input port C ϕ (Pin 2) of the microcomputer; therefore, the 30 cm indicator comes on by setting this level to L. Pin 2 of the IC₀₃ is reset to H when the power switch is turned ON, and is connected to

Fig. 2-1 Port and Function of Microcomputer

	Pin No.	Port	Function
INPUT	2	C ϕ	A pulse from disc size selector is input through IC _{03b} (flip-flop) to distinguish record sizes.
	5	C3	A pulse from lifter switch is input to move arm lifter up and micromotor.
	4	C2	A pulse from start/stop switch is input to operate tonearm and DD motor in accordance with microcomputer program.
	3	C1	A pulse from repeat switch is input to initialize microcomputer program and to operate the set again, when tonearm returns after record performance completion.
	8	D2	A pulse from speed selector is input through IC _{02a} (flip-flop) to decide record rev. speed.
	22	A1	A signal from B sensor is input through record end detector circuit (TR ₀₇) and logic circuit to distinguish whether or not tone arm is at a lead-out position on a record disc.
Auto Mechanism	23	A2	A signal from C sensor is input to distinguish whether or not lifter comes down completely.
	24	A3	A signal from D sensor is input to distinguish whether or not lifter is completely risen.
OUTPUT	16	F ϕ	If repeat SW is depressed, output voltage changes to H level to drive TR ₁₁ and to make repeat indicator come on.
	17	F1	If disc size selector is depressed and disc size is set to 17 cm, output voltage changes to H level to drive TR ₁₂ and to make 17 cm disc size indicator come on.
	18	F2	If disc size selector is depressed and disc size is set to 30 cm, output voltage changes to H level to drive TR ₁₃ and to make 30 cm disc size indicator come on.
	10	E ϕ	If this terminal voltage changes to H level, micromotor is rotated counterclockwise by CW/CCW inertia prevention circuit and micromotor drive circuit. At the same time, IC ₀₂ (astable multivibrator) makes computer indicator blink, informing that tonearm or arm lifter is in operation.
	11	E1	If this terminal voltage changes to H level, micromotor is rotated clockwise by CW/CCW inertia prevention circuit and micromotor drive circuit. At the same time, IC ₀₂ (astable multivibrator) makes computer indicator blink, informing that tonearm or arm lifter is in operation.
	12	E2	If this terminal voltage changes to H level, TRs 09 and 10 (plunger drive circuit) operate to actuate plunger. At the same time, micromotor is rotated clockwise by CW/CCW inertia prevention circuit and micromotor drive circuit.
	13	E3	If start/stop SW is depressed or when tonearm returns after record performance completion, a start/stop pulse is output from this terminal to DD motor control circuit.

Fig. 2-2 Microcomputer Timing Chart

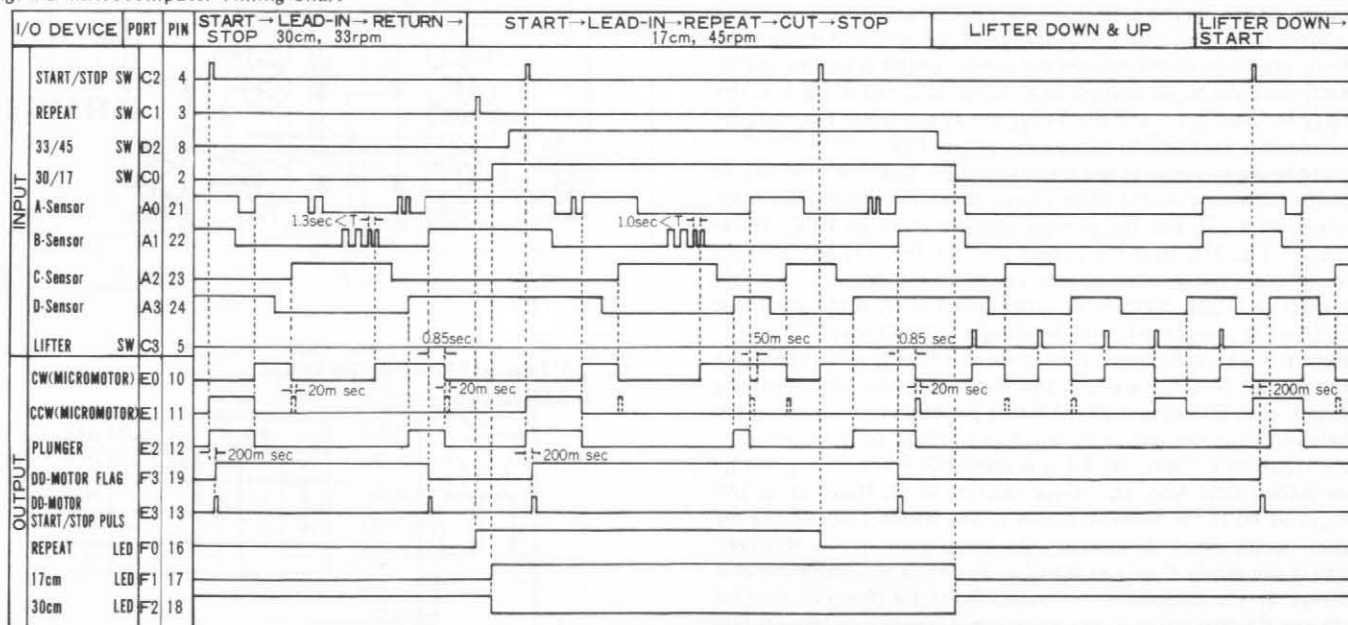

B) Servo circuit

Forming a loop as shown in Fig. 2-6, the servo circuit for controlling the DD motor is of a speed and phase control system in which speed control using a F/V (frequency-voltage) converter and phase control using a quartz oscillator are combined together. Also, by using the inverter (IC_{05b}) and the voltage comparator (IC_{06a}), the TR₁₆ is switched so that a reverse torque may be generated in case when the DD motor rotates at more than the rated revolution speed (33 or 45 rpm) or is stopped from the rated revolution speed.

1. Quartz servo system and CX-193 operation

Fig. 2-7 shows a block diagram of the CX-193. While the DD motor is rotating at the rated speed, speed detecting pulses are generated by the pulse detecting heads (L₇₀₁ and L₇₀₂) depending upon the magnetic pole on the interior surface of the turntable. In this case, the signal generated from the L₇₀₁ lags the signal generated from the L₇₀₂ by a phase angle of 90°.

The speed detecting pulse generated from the L₇₀₁ is supplied to Pin 8 of the CX-193 through a limiting amplifier. In the CX-193 is generated a pulse synchronized with the input speed detecting pulse by a trigger pulse generator. Next, the pulse is divided into a pulse given to the F/V (frequency-voltage) converter and sample & hold circuit, and a pulse given to the phase comparator. In the phase comparator, the phase of the trigger pulse fed from the pulse detecting head is compared with that of the reference pulse (533.3 Hz at 33 rpm, and 720 Hz at 45 rpm) obtained by dividing a quartz oscillator output (3.6864 MHz), and the compared output is given to the IC_{05a} (adder) after being smoothed by a low-pass filter as shown in Fig. 2-9.

On the other hand, in the F/V converter, a Triangular waveform signal (2), as shown in Fig. 2-8 (e), the peak voltage of which is proportional to the revolution speed, is generated depending on the trigger pulse. When the trigger pulse is applied, the sample & hold circuit samples the F/V converter signal, and holds the signal until the next trigger pulse is applied, converting a signal shown in Fig. 2-8 (e) into a servo signal shown in Fig. 2-8 (f). The servo signal thus obtained is given to the IC_{05a} (adder) through a low-pass filter. In the adder are added the output from the F/V converter and sample & hold circuit and the output from the phase comparator, in order to apply them to the next stage IC_{06b} (current amplifier). In the current amplifier are controlled the collector currents of the TR₁₀ and TR₁₂, in proportion to the adder output, in order to control the DD motor.

Fig. 2-7 Internal Block Diagram of IC

● CX-193

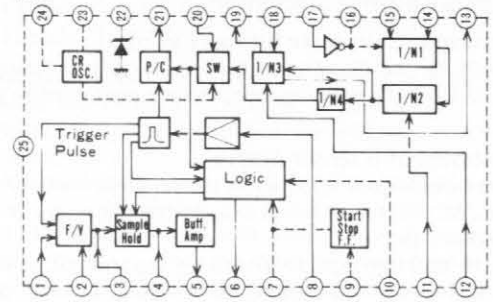


Fig. 2-8 Waveforms generated in F/V Converter

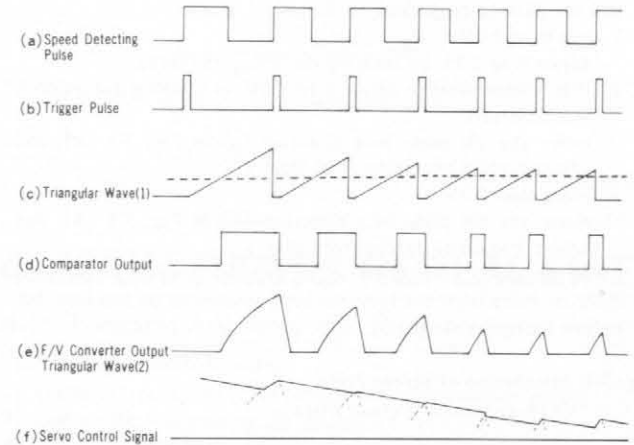


Fig. 2-6 Construction of Quartz-Servo System


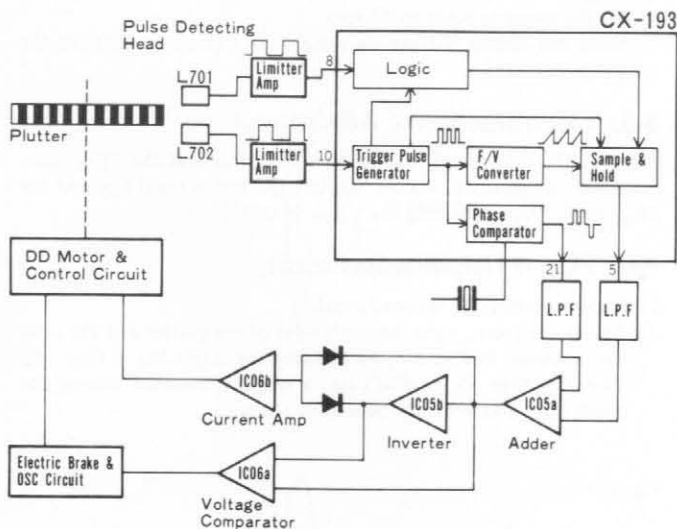



Fig. 2-9 Operation of Phase Comparator

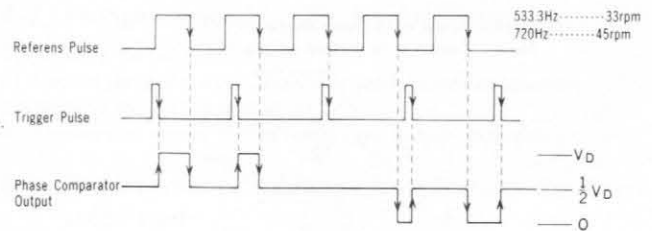

the input port D2 (Pin 8) of the microcomputer through the inverter; accordingly, this input port changes to L. Also, since Pin 1 of the IC₀₃ is connected to the IC₀₄ (CX-193) through the TR₀₄ and TR₀₅, the revolution speed of the DD motor is preset. The output of Pin 1, through the inverter at the same time, turns the TR₁₉ and TR₂₁ ON, thereby making the 33/45 indicator come ON. Therefore, when the power switch is turned ON, the microcomputer is reset, and the IC₀₃ presets the turntable to an initial state of 33 rev., 30 cm disc if the tonearm is on the rest.

Fig. 2-3 Internal Block Diagram of IC

● TC4528BP

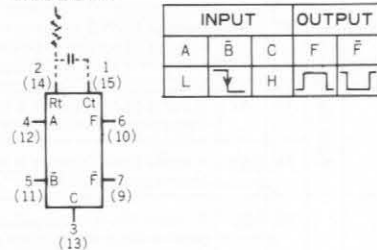

3. Micromotor control circuit and CW/CCW inertia prevention circuit

When the power switch is turned ON, the CW/CCW inertia prevention circuit and the micromotor control circuit are in the states as shown in Fig. 2-4 by using symbols (H), (L) or ON, OFF.

The counterclockwise revolution of the micromotor corresponds to the tonearm lead-in motion (plunger solenoid: ON) and lifter-down motion (plunger solenoid: OFF); the clockwise revolution corresponds to the tonearm lead-out motion (plunger solenoid: ON) and lifter-up motion (plunger solenoid: OFF). Therefore, when the start/stop switch is depressed and the tonearm leads in, the micromotor must rotate counterclockwise.

As is clearly shown in Fig. 2-2 (microcomputer timing chart), if the start/stop switch is depressed, the microcomputer output ports E1 (Pin 11) and E2 (Pin 12) are set to H level and, therefore, the plunger solenoid is turned ON, the revolution of the micromotor being transmitted to the tonearm. Also, since the output port E1 (Pin 11) is connected to Pin 8 of the IC₀₃ in the inertia prevention circuit, and E2 (Pin 12) is connected to Pin 1 of the IC_{06a}, if the output ports E1 (Pin 11) and E2 (Pin 12) are set to H level, each gate output of the inertia prevention circuit changes as follows: IC_{06a} changes to H, IC_{03d} to L, IC_{06c} to H, IC_{06d} to H, and IC_{06b} to H. Thus, the TR₀₂ of the micromotor control circuit is kept to be ON. Also, since the IC_{03a} changes to L, IC_{03b} to L, and IC_{03c} to L, the TR₀₃ is turned OFF and the TR₀₄ and TR₀₇ are turned ON, thus the micromotor beginning to rotate counterclockwise.

If the tonearm comes to the lead-in position, next the lifter comes down. In order that the lifter comes down, the micromotor must rotate clockwise and the plunger solenoid must go OFF. Therefore, in Fig. 2-2, after the output port E1 (Pin 11) has been set to H (the micromotor rotates counterclockwise), E0 (Pin 10) changes to H (the micromotor rotates clockwise), at the same time E2 (Pin 12) changes to L, and the plunger solenoid goes OFF.

Since the microcomputer output port E0 (Pin 10) is H and E1 (Pin 11) and E2 (Pin 12) are L in this state (while the lifter is coming down), each gate output of the inertia prevention circuit changes as follows: IC_{06a} changes to H, IC_{03d} to L, IC_{06c} to H, IC_{06d} to H, and IC_{06b} to L. Thus, the TR₀₂ is turned OFF and TRs₀₆ and TR₀₅ are turned ON. Also, the IC_{03a} changes to H, IC_{03b} to L, and IC_{03c} to H. If the tonearm comes to the lead-in position and the lifter comes down completely, the micromotor stops. However, even if the sensor C detects the lifter-down end position and makes change of the microcomputer output ports E0 (Pin 10), E1 (Pin 11) and E2 (Pin 12) to L, the micromotor cannot stop immediately

from a state of the normal revolution because of micromotor inertia. Unless the micromotor stops immediately, this may cause malfunctions such that the lifter rotates excessively so that the sensor operates unstably or such that the lifter cannot come down to the end. Therefore, in order to prevent these malfunctions, it is necessary to stop the micromotor immediately when the lifter comes down to the end. For this reason, a CW inertia prevention circuit is provided to flow a current in such a way that an instant counterclockwise torque will be generated in the micromotor.

When the lifter comes down completely and the lead-in movement is finished, each gate output of the inertia prevention circuit changes as follows: IC_{06a} changes to H, IC_{03d} to L, IC_{06c} to H, IC_{06d} to H, and IC_{06b} to H. Thus, the TR₀₂ is turned ON, and the TRs₀₆ and TR₀₅ are turned OFF. Accordingly, no current flows to rotate the micromotor clockwise. In addition, since the IC_{03a} changes from H to L, the C₃₅ begins to discharge and the Pin 5 of the IC_{03b} stays L only during the period of time determined by a time constant of C₃₅×R₆₁ and a threshold voltage of IC_{03b}.

As a result of this, the IC_{03b} output changes to H for an instant and the IC_{03c} output also changes to L for an instant; that is, the TR₀₃ is turned OFF and the TRs₀₇ and TR₀₄ are turned ON only during the period of time determined by the C₃₅ and R₆₁, thus an instant counterclockwise micromotor torque being generated to prevent the motor from rotating clockwise; that is, to prevent the motor inertia.

Fig. 2-4


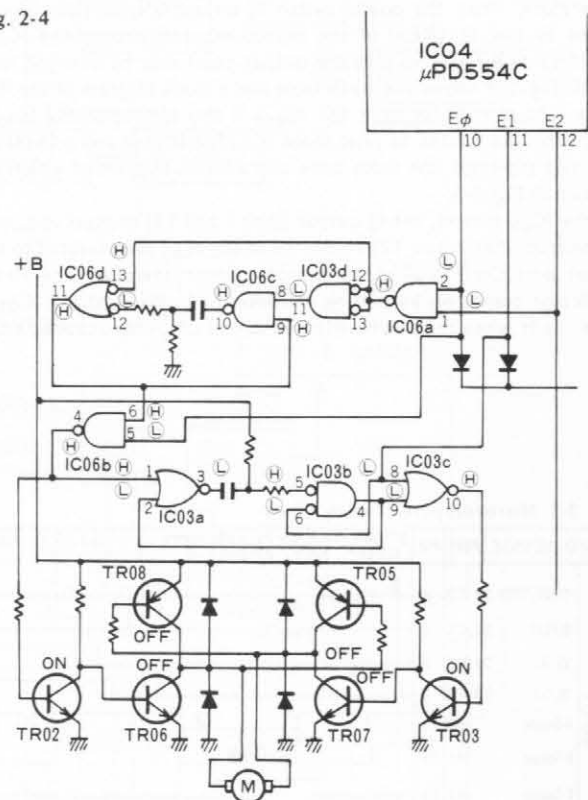


Fig. 2-5 Internal Block Diagram of IC

● MSM4013

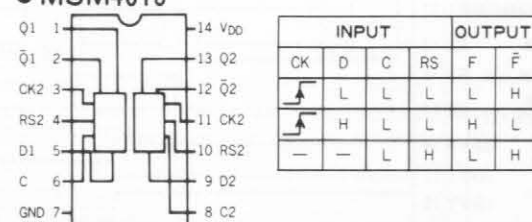

3. ADJUSTMENTS

3-1. Auto-Return Adjustment

1. Adjustment of slit plate fitting position

Temporarily fix the slit plate to the tonearm axle as illustrated in Figs. 3-1 (A) and (B) with the tonearm kept positioned on the arm rest.

2. Adjustment of B sensor output

- 1) Connect oscilloscope leads across the TP₀₁ and the GND and set the DC/AC selector switch to DC and the test ranges to 1V/div. and 1 msec./div.
- 2) With the tonearm kept positioned on the arm rest, first rotate the VR₀₂ (S-0048) clockwise, next slowly rotate it counter-clockwise, and then stop it just before an increase in the TP₀₁ voltage is saturated. In this case, set the TP₀₁ voltage so as to be 3.8V or more.
- 3) Set the oscilloscope test ranges to 1V/div. and 0.1 sec./div. Bring the tonearm to the lead-in groove portion on a record by hand, and slowly move it right and left so that it may take about 2 seconds to pass the slit C in Fig. 3-1 (B) through between the LED and the phototransistor.
- 4) If the TP₀₁ output is a sine wave without any clipping distortion and the peak-to-peak value is:
 1. less than 2.2V,
adjust it to 2.2V by rotating the VR₀₂ (S-0048).
 2. if it is impossible to adjust it to 2.2V, or clipping distortion is still observed,
move the slit plate in a direction (a) in Fig. 3-1 (A), and adjust it again beginning from step 1.
 3. more than 2.2V,
move the slit plate in a direction (b) in Fig. 3-1 (A), and adjust it again beginning from step 1.
- 5) After the above adjustment, make sure that the TP₀₁ voltage is 3.8V or more with the tonearm kept positioned on the arm rest, before fixing the slit plate.

Fig. 3-1 Installation of Screen Plate


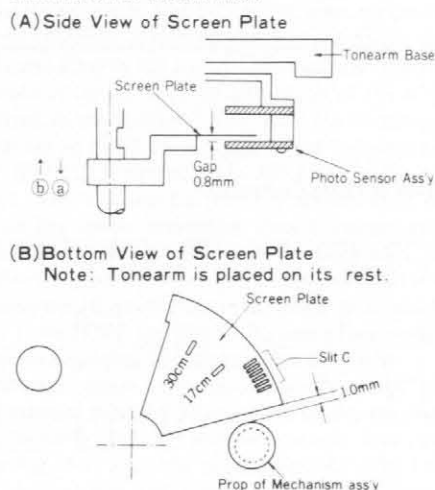


Fig. 3-2 Output Waveform Adjustment on B-Sensor



3-2. Lead in Adjustment

By using 30 cm and 17 cm sized records having a narrow lead-in groove portion, actually carry out the lead-in operation. Adjust the adjust cam (49) (See Exploded View of Mechanism Ass'y on Page 11) so that the stylus tip may come down to the middle of the lead-in groove. Be sure that the slit plate is fit to the tonearm as shown in Figs. 3-1 (A) and (B). In this case, if the stylus point is required to be led-in outside, rotate the adjust cam clockwise.

3-3. Repeat Adjustment

By using 30 cm and 17 cm sized records having a narrow lead-in groove portion, actually carry out the repeat operation. Adjust the VR₀₁ (S-0046) so that the stylus tip may come down to the middle of the lead-in groove portion.


3-4. Rev. Speed Adjustment (PLL adjustment)

Note: 1) Make sure to carry out the speed adjustment at 45 rpm before carrying out the speed adjustment at 33 rpm.
2) Make sure to carry out the adjustment with a rubber sheet on.

A. How to adjust with an oscilloscope

- 1) Connect oscilloscope leads across the TP₀₂ of S-0038 and the GND, and set the test ranges to 2V/div. and 0.5 msec./div.
- 2) Set the speed selector to 45 rpm.
Adjust the oscilloscope waveform to the one shown in Fig. 3-3 (A) by rotating the VR₀₂ (S-0038). In this case, make the pulse width as narrow as possible.
- 3) Set the speed selector to 33 rpm.
Adjust the oscilloscope waveform to the one shown in Fig. 3-3 (A) by rotating the VR₀₁ (S-0038).

Fig. 3-3

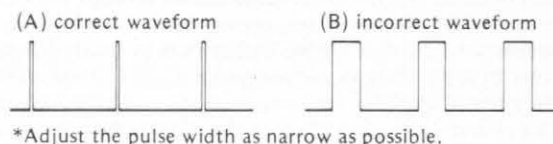

B. How to adjust without an oscilloscope

- 1) Set the speed selector to 45 rpm.
Bring the strobo pattern movement to a stop, by rotating the VR₀₂ (S-0038).
- 2) Set the speed selector to 33 rpm.
Bring the strobo pattern movement to a stop, by rotating the VR₀₁ (S-0038).


3-5. Electronic Brake Adjustment

Connect DC volt meter leads across the TP₀₄ and the TP₀₅, then make the set operate. Adjust the voltage across the TP₀₄ and the TP₀₅ to 0.55V, by rotating the VR₀₃ (S-0038).

3-6. Platter Height Adjustment

- 1) Place the turntable set horizontally.
- 2) Adjust the front, right, and left sides of the platter and the cabinet as shown in Fig. 3-4, by rotating the screw No. 8 (See Top View on Page 9). In this case, a height difference among the front, right and left must be within 1 mm.


Fig. 3-4

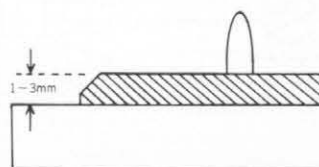

3-7. Lifter Height Adjustment

Adjust the lifter plate and the arm rest as shown in Fig. 3-5, by rotating the screw (B) (See Top View on Page 9).


Fig. 3-5

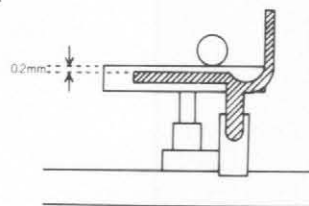

3-8. Gap Adjustment between TA Drum and Clutch Plate (2)

When the automatic mechanism assembly parts such as the tonearm assembly, slit plate, TA drum, or clutch plate are replaced with new ones, adjust a gap between the TA drum and the clutch plate so as to be 0.3 to 0.5 mm as shown in Fig. 3-6. (It is possible to assemble the arm base with the automatic mechanism assembly installed in the cabinet.)

Fig. 3-6

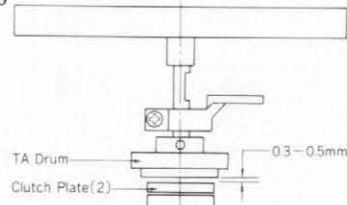


3-9. Gap Adjustment between Pulse Detecting Head and Platter (Fig. 3-7)

Note: Adjust the gap when the pulse detecting head Ass'y or the platter is replaced with a new one.

Put an appropriate spacer between the pulse detecting head and the platter, and install the head with screws so that the gap may become 0.35 mm. (The three sheets of this Service Manual paper cover are approximately 0.35 mm in thickness.)

Fig. 3-7

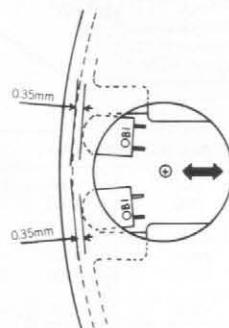


3-10. Phase Adjustment between Pulse Detecting Heads (Fig. 3-8)

Note: The pulse detecting head Ass'y is supplied as to be adjusted the distance between the heads (L701, 702).

Avoid to carry out this adjustment without dual trace oscilloscope.

- 1) Connect oscilloscope across TP09 and GND, then make the set operate.
- 2) Adjust the pulse detecting head adjusting screw, that the signal generated from L701 may lag signal generated from L702 by a phase angle of 90°.

Fig. 3-8

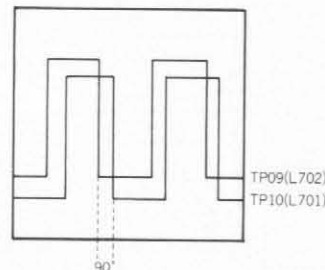

4. MAIN PARTS REPLACEMENT

4-1. Tonearm Assembly (55) Replacement

- 1) Remove the bottom plate.
 - 2) Loosen three screws (7) to remove the mechanism assembly.
 - 3) Loosen the fixing screw (35) to remove the TA drum.
 - 4) Loosen the screw (37) to remove the slit plate assembly.
 - 5) Remove the lead wire attached to the tonearm.
 - 6) Remove a string of the inside force canceler (54).
 - 7) Loosen the fastening nut to extract the tonearm.
- * In installing the slit plate assembly, and TA drum assembly, refer to Figs. 3-1 (A) and (B), and Fig. 3-6.

4-2. Plunger Assembly (16) Replacement

- 1) Remove the bottom plate.
- 2) Loosen three screws (7) to extract the mechanism assembly.
- 3) Remove the E type washer (11).
- 4) Loosen two screws (15) to remove the plunger assembly.


4-3. Replacement of Circuit Board under the Console Panel

- 1) Remove the bottom plate.
- 2) Loosen three console panel fastening screws A, and remove the console panel to take off the circuit boards on the reverse side. (Refer to the bottom view on Page 9).

5. PARTS LOCATION & PARTS LIST

5-1. S-0037 Control Circuit Board (Stock No. 13004901)

Conductor Side

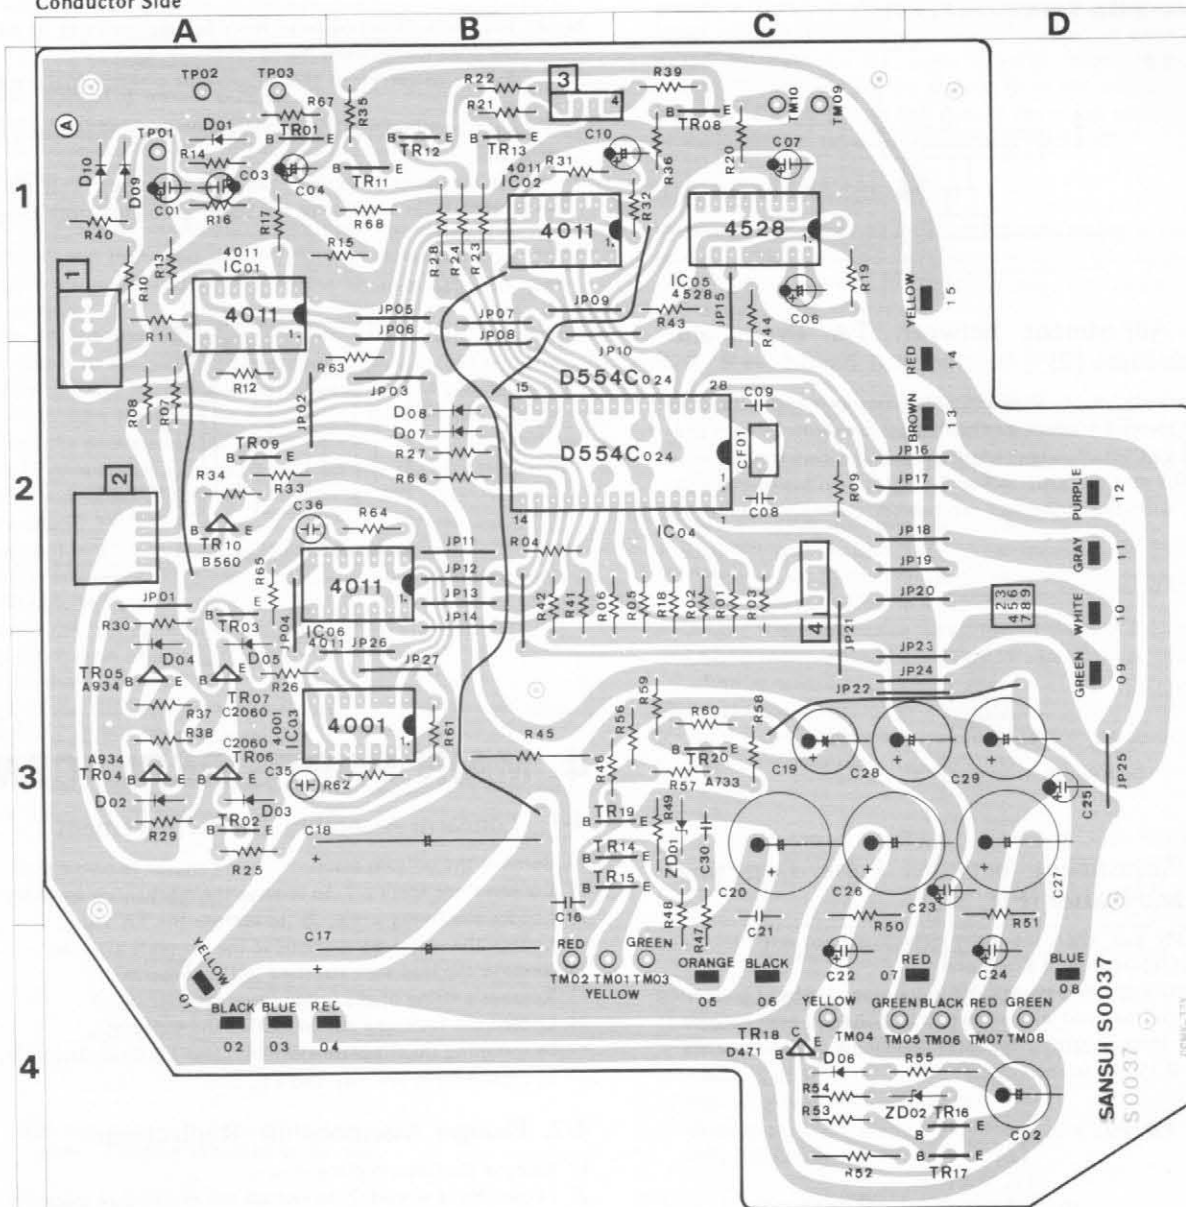

•Since some of capacitors and resistors are omitted from parts lists in this Service Manual, refer to the new Common Parts List for capacitors & resistors.

•As the stock number in the parts list on this service manual is indicated in 8 digit to differ from ordinary 7 digit, please be careful when ordering parts.


Parts List

Parts No.	Stock No.	Description
•Transistor		
TR01	03059501	2SC945 Q
TR02	03059501 ~ 3	2SC945 Q, P, K
TR04	03012200, 1	2SA934 P, Q
TR06	03069100, 1	2SC2060 P, Q
TR08	03059501 ~ 3	2SC945 Q, P, K
TR10	03033601, 2	2SB560MP E, F
TR11	03059501 ~ 3	2SC945 Q, P, K
TR16	03059502, 3	2SC945 P, K
TR18	03085901, 2	2SD471 L, K
TR19	03059501, 2	2SC945 Q, P
TR20	03006800, 1	2SA733-2 P, Q
TR24	03059502, 3	2SC945 P, K

Parts No.	Stock No.	Description
•IC		
IC01A	03604000	MSM4011
IC01C	03604100	TC4011P
IC01D	07106900	MSM4011BRU
IC03A	03609500	MSM4001RS
IC03D	03610500	TC4001BP
IC04	03610400	μPD554C-024
IC05	03612900	TC4528BP
CF01		
	09300700	Ceramic Filter
•Diode		
D01	03111600	1S2473D
D02	03111600	1S2473D
D06	03103400	10D1

Parts No.	Stock No.	Description
D07	03111600	1S2473D
D09	03111600	1S2473D
•Zener Diode		
ZD01	03166300	RD5.1E
ZD02	03164300	RD7.5E B
VS01	03401200	VD1212
R45	00190800	560Ω 2W N.I.R.
R55	00141000	33Ω 1W N.I.R.
C10	00306800	1μF 50V E.B.
C17	00283400	470μF 50V E.C.
C35	00306800	1μF 50V E.B.

5-2. S-0038 Servo Circuit Board (Stock No. 13000901)

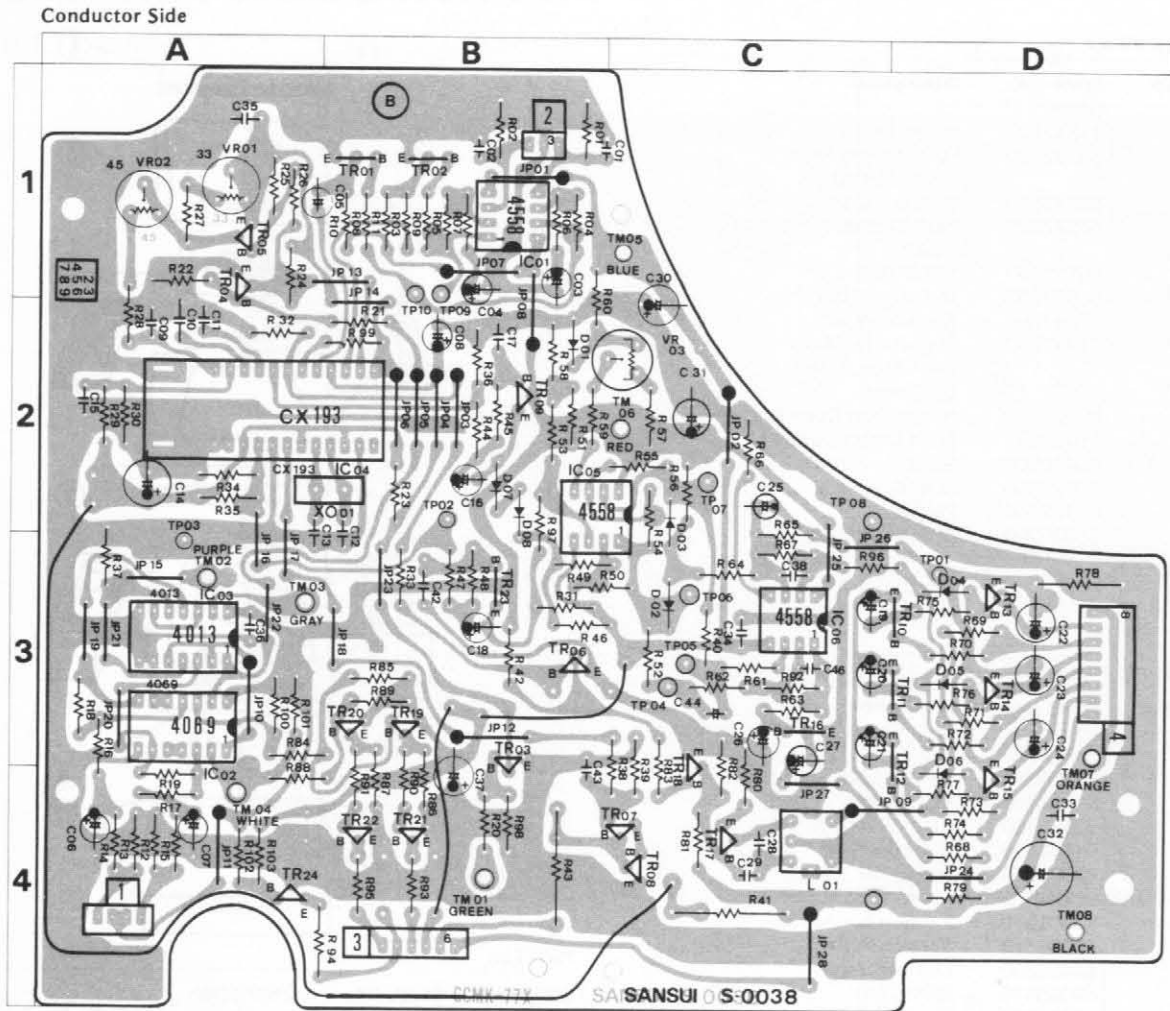

Parts List


Parts No.	Stock No.	Description
•Transistor		
TR01	03059501 ~ 3	2SC945 Q, P, K
TR05	03005100, 1	2SA733A P, Q
TR06	03059501 ~ 3	2SC945 Q, P, K
TR08	03069100, 1	2SC2060 P, Q
TR09	03059501 ~ 3	2SC945 Q, P, K
TR10	03006800, 1	2SA733-2 P, Q
TR13	03085901, 2	2SD471 L, K
TR16	03059501, 2	2SC945 Q, P
TR21	03006800, 1	2SA733-2 P, Q
TR23	03059501, 2	2SC945 Q, P
•IC		
IC01	03607700	NJM4558D
IC02	03605700	MSM4069
	07107600	TC4069BP

Parts No.	Stock No.	Description
IC03	03611700	MSM4013RS
	07107500	TC4013BP
	07107000	MSM4013BRU
IC04	03612800	CX-193
IC05	03607700	NJM4558D
XO01	09300600	NC-18C, Quartz
•Diode		
D01	03111600	1S2473D
R27	00208900	47Ω 1/4W M.R.
R28	00202600	150kΩ 1/4W M.R.
R41A	00147500	270Ω 2W N.I.R.
R43	00142800	56Ω 1W N.I.R.

Parts No.	Stock No.	Description
R78	00140300	2.2Ω 1W N.I.R.
R94	00149800	56Ω 2W N.I.R.
C05	00306800	1μF 50V B.P.
C38	00380300	10000pF 50V C.C.
C44	00306800	1μF 50V B.P.
L01	42905000	OSC Coil
VR01A	10343100	Volume 47kΩ (B)
VR03	10350700	Volume 1kΩ (B)

5-3. S-0042 Indicator Circuit Board (Stock No. 13002501)

Conductor Side

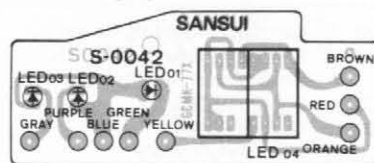


Parts List

Parts No.	Stock No.	Description
LD01	03194500	LED
LD02, 03	03190600	LED
LD04	03194600	LED

5-4. S-0047 Power Supply Circuit Board <1>

(Stock No. 13002901)

Conductor Side

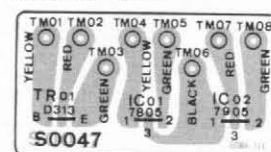


Parts List

Parts No.	Stock No.	Description
•Transistor		
TR01	03065401 ~ 3	2SC1986 Q, Y, G
•IC		
IC01	03609200	FS7805M
IC02	03613900	FS7905M

5-5. S-0043 Power Supply Circuit Board <2>

(Stock No. 13003101)

Conductor Side

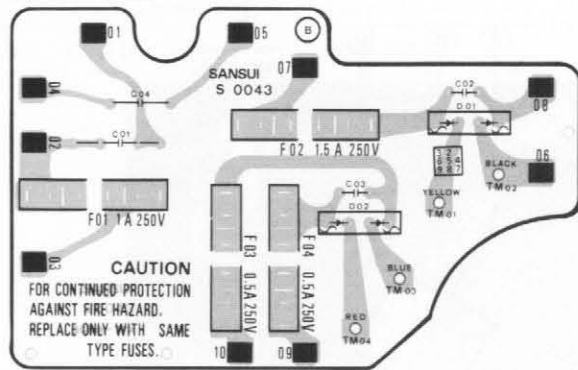


Parts List

Parts No.	Stock No.	Description
•Diode D01	03117000	RB-152
C01	00351200	0.033μF 250V F.C. XX
C01	00379300	0.033μF 125V F.C. CSA
C02	00407800	0.047μF 100V F.C.
F01	04322200	AC Fuse 1A 250V
F02	04322300	AC Fuse 1.5A 250V
F03	04322100	AC Fuse 0.5A 250V
F04	04322100	AC Fuse 0.5A 250V

•The circuit boards, S-0039, S-0040, S-0041, S-0045, S-0046 & S-0048 are not supplied as the assembled, the individual parts on the circuit boards, however are provided for orders.

5-6. S-0039 Start/Stop SW Circuit Board

Conductor Side

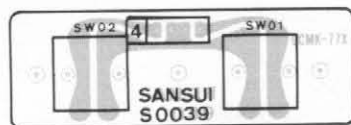


Parts List

Parts No.	Stock No.	Description
S01	11907000	Switch

5-7. S-0040 Repeat Circuit Board

Conductor Side

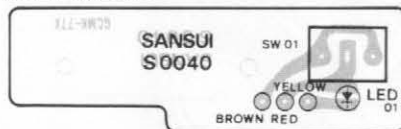


Parts List

Parts No.	Stock No.	Description
LD01A	03192900	LED
S01A	11320900	Push Switch

5-8. S-0041 33/45 reb Selector Circuit Board

Conductor Side

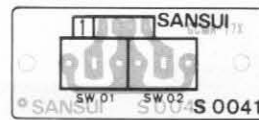


Parts List

Parts No.	Stock No.	Description
S01B	11320900	Push Switch

5-9. S-0045 Strobo Circuit Board

Conductor Side

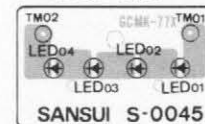


Parts List

Parts No.	Stock No.	Description
LD01	03194400	LED

5-10. S-0046 Repeat Delay Circuit Board

Conductor Side

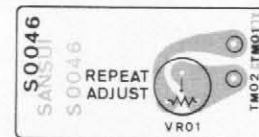


Parts List

Parts No.	Stock No.	Description
VR01B	10343700	Volume 470kΩ (B)

5-11. S-0048 B-Sensor Circuit Board

Conductor Side

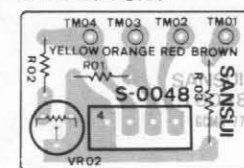

Parts List


Parts No.	Stock No.	Description
VR02	10353500	Volume 4.7kΩ (B)

• Abbreviations


C.R. Carbon Resistor	E.L. Low Leak Electrolytic Capacitor
S.R. Solid Resistor	E.B. Bi-Polar Electrolytic Capacitor
Ce.R. Cement Resistor	E.BL. Low Leak Bi-Polar Electrolytic Capacitor
M.R. Metal Film Resistor	Ta.C. Tantalum Capacitor
F.R. Fusing Resistor	F.C. Film Capacitor
N.I.R. Non-Inflammable Resistor	M.P. Metalized Paper Capacitor
C.C. Ceramic Capacitor	P.C. Polystyrene Capacitor
C.T. Ceramic Capacitor, Temperature Compensation	G.C. Gimmic Capacitor
E.C. Electrolytic Capacitor	

6. OTHER PARTS

6-1. Top View

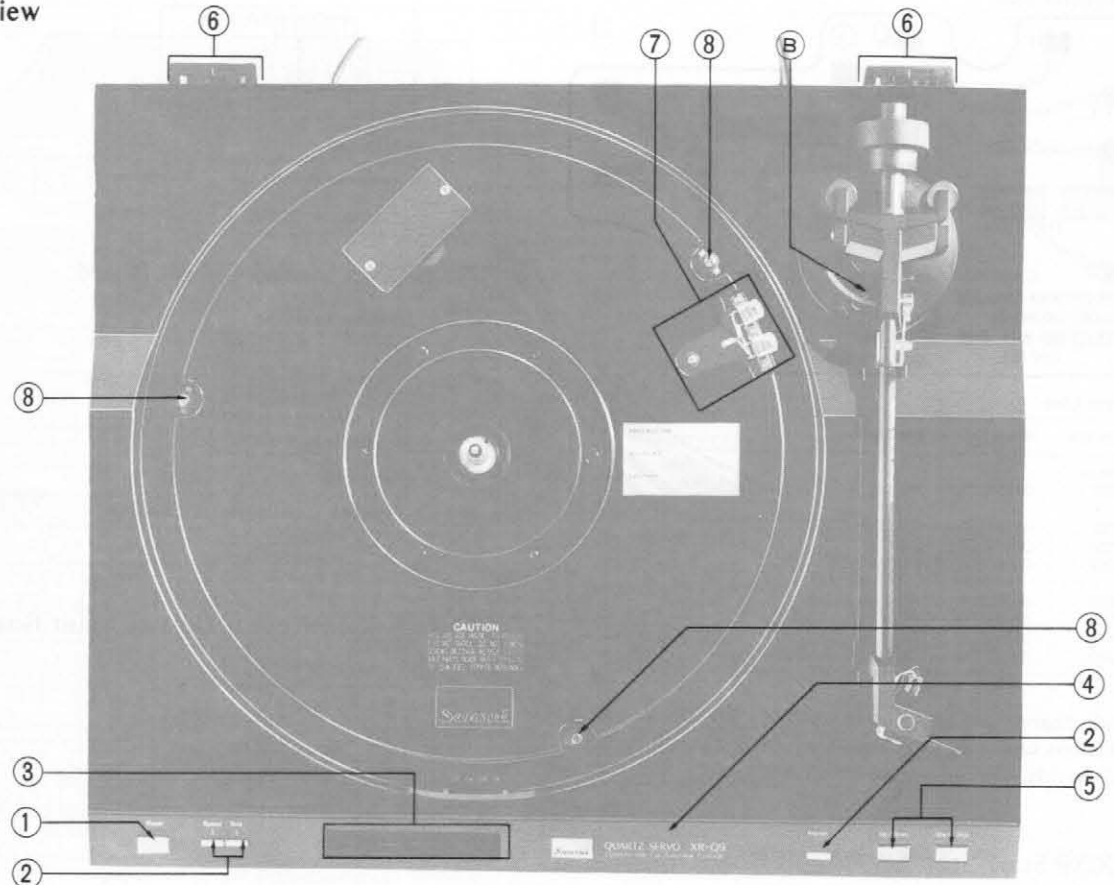

6-2. Bottom View

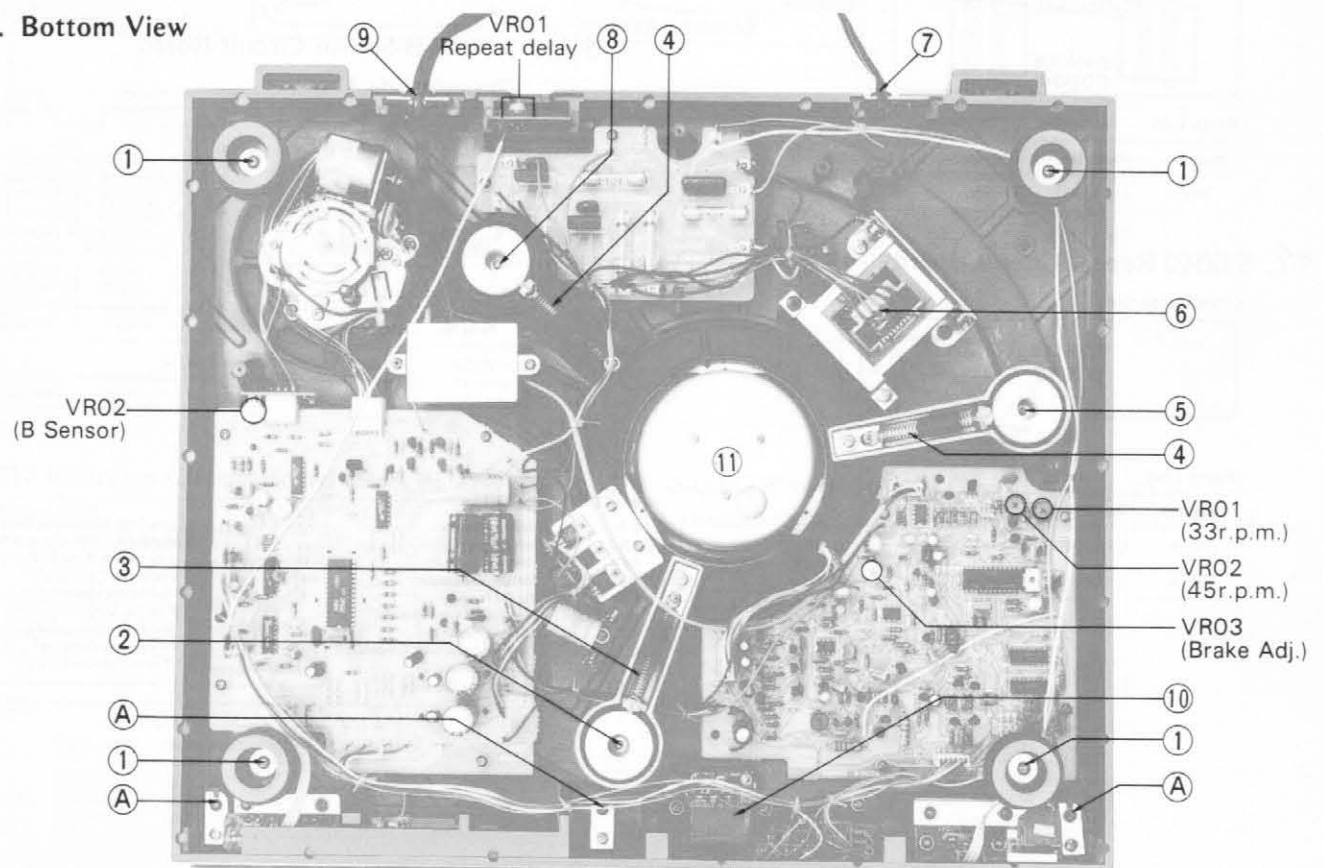

Parts List <Top View>

No.	Parts No.	Stock No.	Description
1		11312100	Power Switch
		53222100	Push Button Ass'y, Power, Switch
2		53922600	Button Guide
		53222300	Push Button, speed, size repeat
3		56120400	LED Plate
		53627700	Indicator Glass
4		53627600	Console Panel
5		71021500	Push Button Ass'y, Start/Stop, Lifter Up/Down
6		69035700	Hinge, Dust Cover
7		18009801	Pulse Detecting Head
8		00449900	Shipping Screw
		70122500	Dust Cover
		61122600	Platter
		55030200	Rubber Mat


Parts List <Bottom View>

No.	Parts No.	Stock No.	Description
1		55122210	Leg
		55221000	Felt Mat, leg
		51832400	Felt Washer
		51628900	PT Type Screw, M4 x 10
2		55122300	Damper Sheet
		69035510	Spring (B)
3		55221000	Floating Damper
		13001510	Tension Spring (B)
4		69035310	Tension Spring
		55122300	Damper Sheet
5		69035410	Spring (A)
		55221000	Floating Damper
6	PT01	40033500	Power Transformer XX
		40033502	Power Transformer
7		38004700, 1	AC Cord
		39106000	Strain Relief
8		55122300	Damper Sheet
		69035610	Spring (C)
9		55221000	Floating Damper
		13015200	Output Cord
10		13016300	Strain Relief
		54420500	Strobo Miller
11		43207300	DD Motor

• Note

As to C.S.A., B.S., ES, and xx marked in the Parts Lists, note the followings:
 C.S.A. Parts used in the unit which is applicable to Canada under industrial standards.
 B.S. Parts used in the unit which is applicable to British under industrial standards.
 E.U. Parts used in the unit which is applicable to Sweden, Denmark, Norway, Finland, West Germany, and Switzerland under industrial standards.
 XX Parts used in the unit which is applicable to other countries excepting mentioned above.

7. PACKING LIST

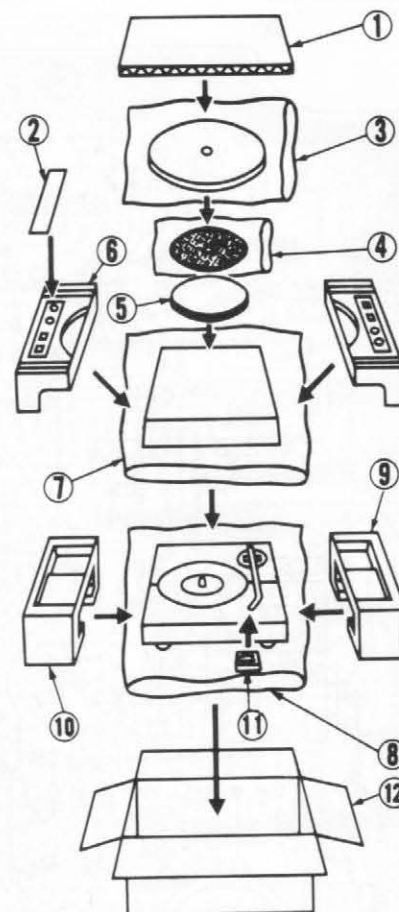


Parts List


Part No.	Stock No.	Description
1	90123900	Corrugated Board
2	90226600	Plastic Sheet
3	91166000	Polyethylene Bag, platter
4	91165200	Polyethylene Bag, rubber mat
5	90124000	Corrugated Board, platter
6	90227300	Inner Packing, (upper)
7	91166140	Polyethylene Bag, dust cover
8	91122700	Polyethylene Bag, turntable unit
9	90227400	Inner Packing, (Right)
10	90227500	Inner Packing, (Left)
11	90227900	Arm Packing
12	90029800	Carton Case

8. ACCESSORY PARTS LIST

Stock No.	Description
52432200	Cartridge Mounting Gauge
13010800	Cartridge Ass'y SV-101 XX (Including stylus, fixing screws)
13010900	Stylus SN-101 XX
13012300	45 rpm Adaptor
13022900	Main Weight Ass'y
92052300	Operating Instructions

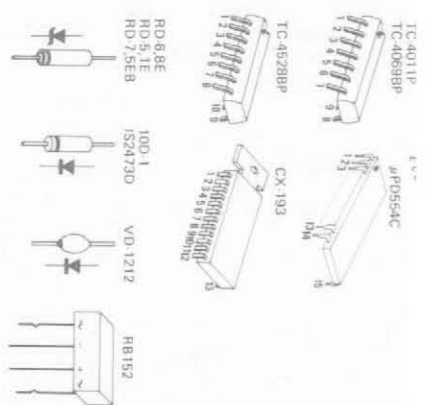

9. SCHEMATIC DIAGRAM

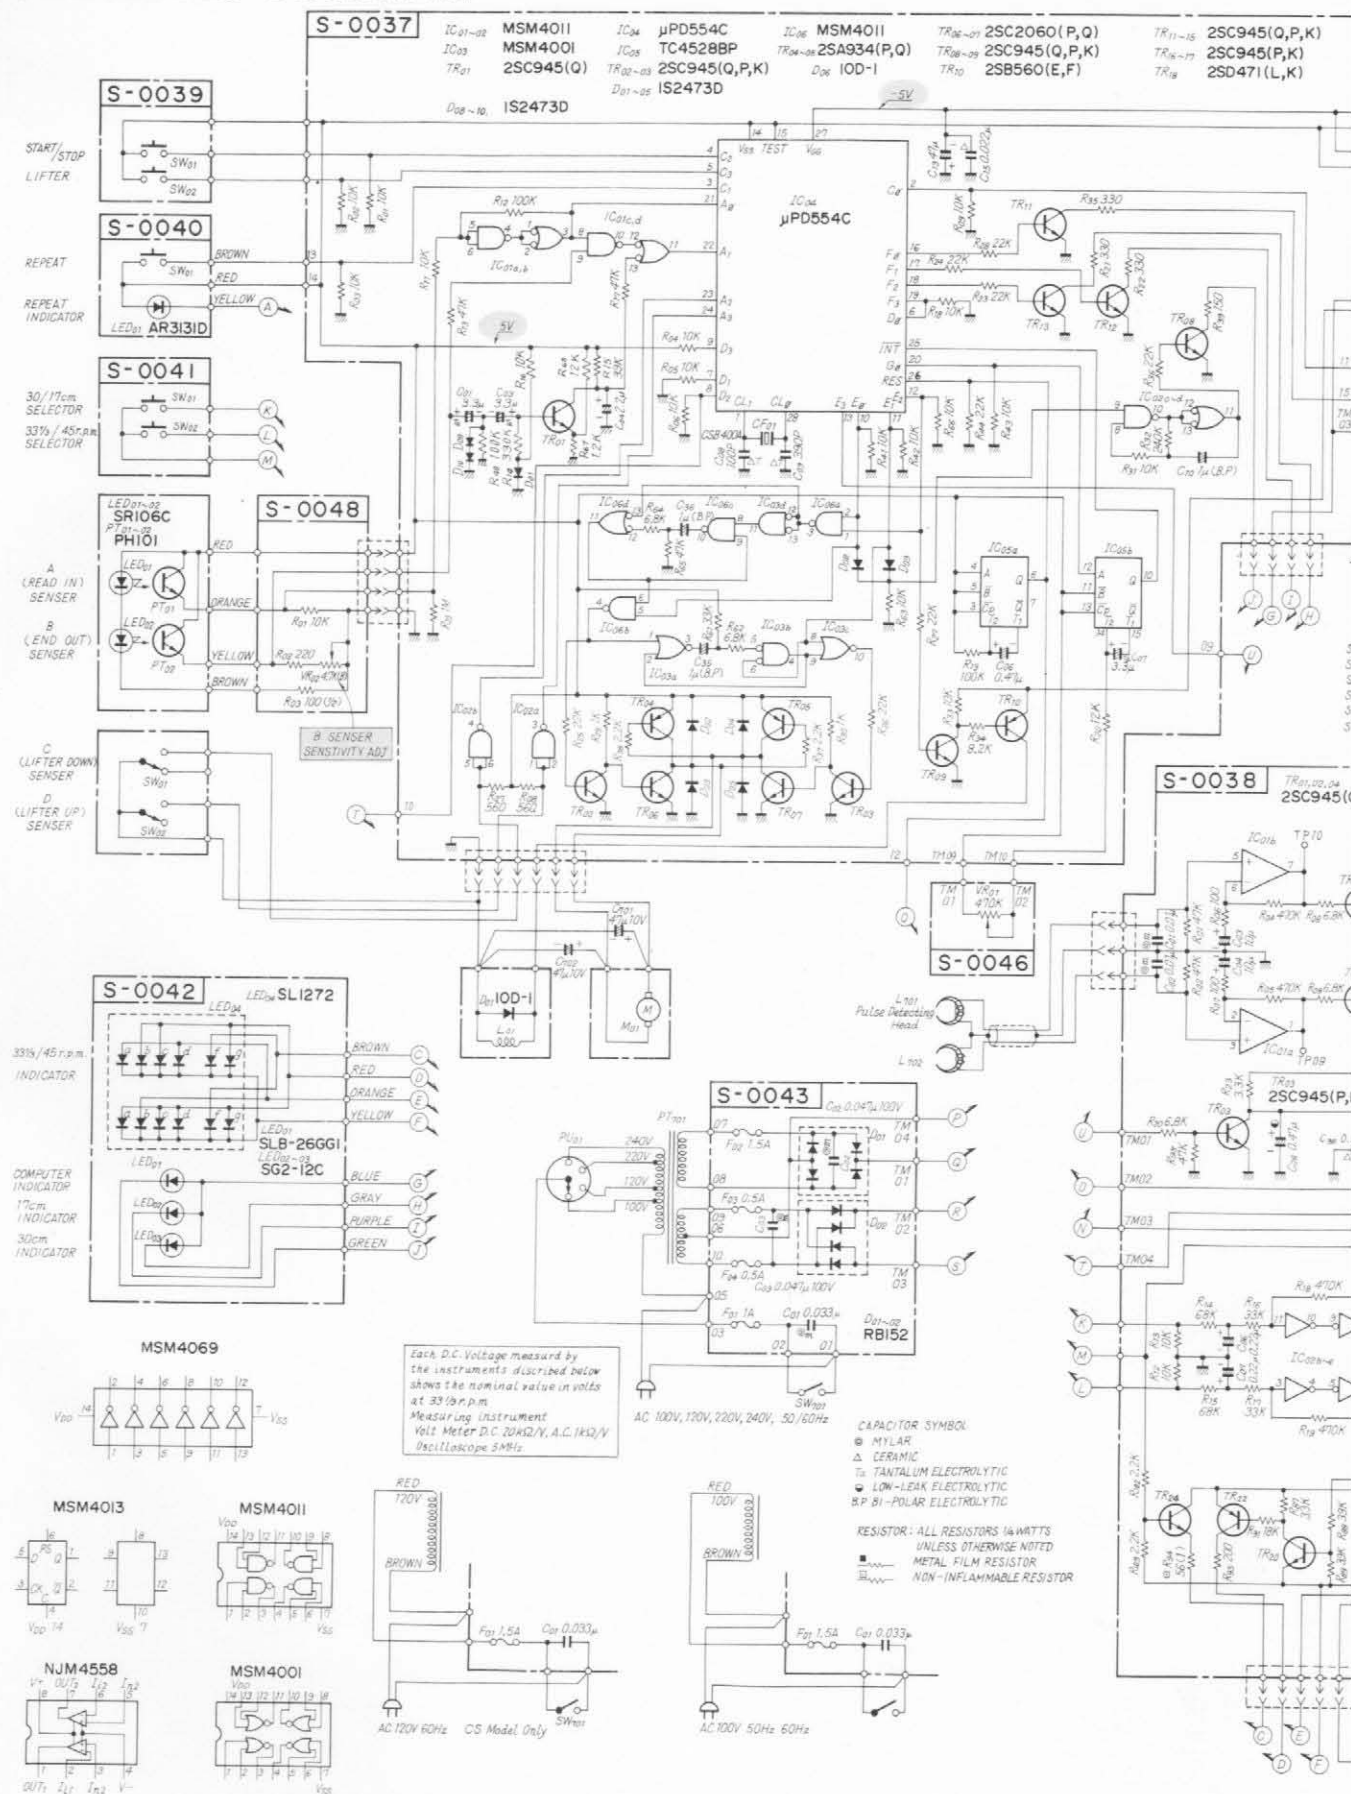


10. EXPLODED VIEW OF MECHANISM Ass'y & PARTS LIST

(Auto Mechanism Ass'y: Stock No. 18009200)

Parts List

No.	Parts No.	Stock No.	Description
1		00436500	P Type Screw, M2 x 4
2		43206400	Micro Motor Ass'y
3		55029800	Rubber Cushion
4		60322310	Drive Belt
5		00488900	E Type Washer, D1.5
6		13024800	Worm Gear Ass'y (Worm Gear, Shaft E Type Washer)
7		07104600	Tapping Screw M4 x 40
8		51823300	S Type Washer M4 x 14
9		00436500	P Type Screw M2 x 4
10		61423700	Friction Disc
11		00489000	E Type Washer D2.0
12		51831700	Damping Washer (2)
13		64220810	Clutch Plate (2)
14		64220700	Clutch Plate (1)
15		00440900	PT Type Screw Type 2.3 x 8
16		43402400	Plunger Solenoid Ass'y
17		00489400	E Type Washer, D5.0
18		60020700	Gear (2)
19		51831500	Thrust Washer
20		51831600	Damping Washer (1)
21		60020600	Gear (1)
22		51832300	CS Ring, M5.0
23		60020810	Gear (3)
24		51825700	Thrust Washer, M4 x 0.5
25		61423000	Friction Pulley
26		00436600	P Type Screw, M2 x 16
27		11602700	Micro Switch
28		11602700	Micro Switch
29		00489000	E Type Washer, D2.0
30		65122000	Lifter Guide
31		00489000	E Type Washer, D2.0
32		60125400	Lifter Cam
33		69034100	Tension Spring (1)
34		70721310	Brakeshoe Ass'y
35		51623300	SC Type Screw, M3 x 5
36		65121900	TA Drum
37		00440900	PT Type Screw 3 x 8
38		13024600	Screen Plate Ass'y
39		51628800	P Type Screw M2.5 x 10
40		77900100	Photo Sensor Ass'y
41		51831800	CR Ring M2.4
42		51832000	Thrust Washer 2.5 x 0.5
43		69034200	Tension Spring (2)
44		65030000	Sensor Mounting Arm
45		50624800	Lid
46		00463600	H Type Nut M3 x 2.4
47		60125600	Adjusting Cam (2)
48		51832100	Wave Washer, M4
49		62025710	Adjusting Cam Shaft
50		51823300	Thrust Washer 4.0 x 0.25
51		13022700	Lifter Plate Ass'y
52		13022800	Lifter Ass'y (Lifter Plate Ass'y, Cylinder, Elevation Spring, Absorber Spring, Lifter Chip Adjusting bar)
53		13022500	Arm Rest Ass'y (Arm Rest, Clamp, Clamp Fixing Screw, Fixing Screw)
54		13022600	IFC Ass'y (Weight, Bar (long), Bar (short), Thread, Washer, Screw, Thread Hanger)
55		13022000	Tonearm Ass'y
56		13022900	Main Weight Ass'y
57		13023000	Balance Weight Ass'y
58		13022100	Head Shell (A) Ass'y
59		13022200	Mounting Screw Ass'y
60		13022400	Head Shell (B)
		13022300	Lead Wire (cartridge)
		13010800	Cartridge Ass'y XX

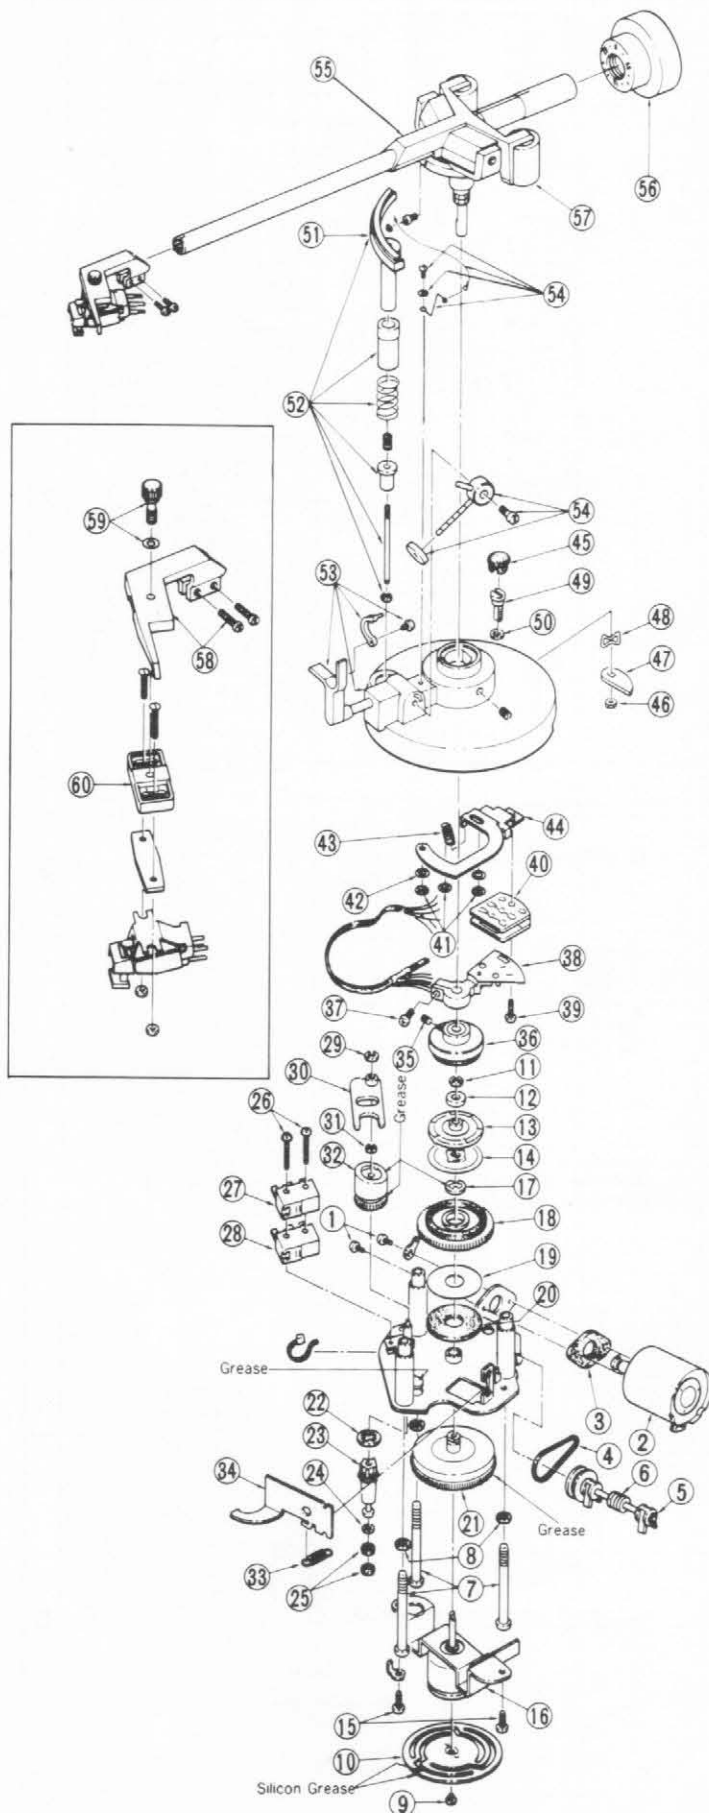

Sansui

SANSUI ELECTRONICS CORPORATION: 1250 Valley Brook Ave. Lyndhurst, N.J. 07071 U.S.A.
333 West Alondra Blvd. Gardena, California 90247 U.S.A.

3036 Koapaka St. Honolulu, Hawaii 96819 U.S.A.
SANSUI AUDIO EUROPE N.V.: North Trade Bldg (9th floor) Noorderlaan 133-Bus 1, 2030 Antwerp, Belgium
SNASUI AUDIO EUROPE S.A.: Arabella center, 6 Frankfurt AM Main, Lyoner Strasse 44-48, West Germany

SANSUI ELECTRIC COMPANY LTD.: 14-1, Izumi 2-chome, Suginamiku, Tokyo 168 Japan PHONE: (03) 323-1111/TELEX: 232-2076


(SM148)

Printed in Japan (200330M)

1. PARTS LOCATION & PARTS LIST

1-1. S-0079 TA Control Circuit Board (Stock No. 13067301)


Component Side

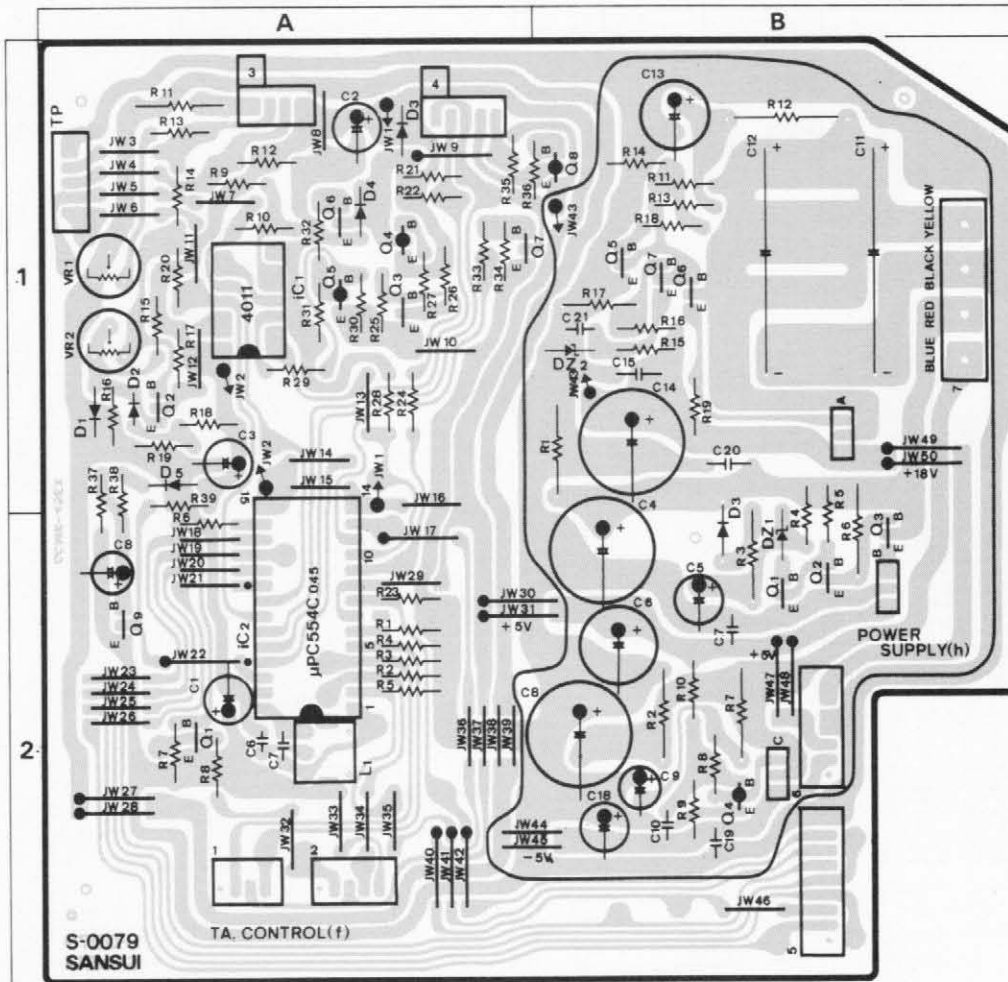

Parts List

Parts No.	Stock No.	Description	Parts No.	Stock No.	Description	Parts No.	Stock No.	Description
●Transistor								
fQ1	07194800, 1	2SC1815 Y, GR	hQ2	07194800, 1	2SC1815 Y, GR	fd4	03111600	1S2473D
	or 03059501 ~ 3	2SC945 Q, P, K		or 03059501 ~ 3	2SC945 Q, P	fd6	03103400	10D1
fQ2	07194800, 2	2SC2603 E, F	hQ3	03085901, 2	2SC2603 E, F	hd3	03103400	10D1
	07194800, 1	2SC1815 Y		or 03069101, 2	2SC2060 Q, R	●Zener Diode		
fQ3	or 03059501	2SC945 Q	hQ4	07194700, 2	2SC2061 Q, R	hdZ1	03164100	RD6.8E B
	07194800, 1	2SC1815 Y, GR		or 07197001, 2	2SA1015 Y, GR	hdZ2	03166300	RD5.1E
	or 03059501 ~ 3	2SC945 Q, P, K	hQ5	or 07299601, 2	2SA733A Q, P	●Coil		
fQ4	or 07299701, 2	2SC2603 E, F		07194800, 1	2SA1115 E, F	fL1	42306100	AM IF Coil
fQ5	07254800, 1	2SA854 Q, R	hQ6	07194800, 1	2SC1815 Y, GR	●Semi-variable Resistors		
	or 07206800, 1	2SA952 M, L		or 03059501 ~ 3	2SC945 Q, P, K	fVR1	10351100	4.7kΩ (B)
fQ6	07194700, 1	2SA1015 Y, GR	hQ7	or 07299701	2SC2603 E, F	fVR2	10351500	22kΩ (B)
	or 07970001, 2	2SA733A Q, P		03059301	2SC1211 D	●Resistors		
fQ7	or 07299601, 2	2SA1115 E, F		or 03062801	2SC1735 D, E	hR12	00190800	560Ω 2W N.I.R.
	07254900, 1	2SC1741 Q, R		07194800, 1	2SC1815 Y, GR	hC11	00283400	470μF 50V
	or 07206900, 1	2SC2001 M, L		or 03059501 ~ 3	2SC945 Q, P, K	hC12	00283400	470μF 50V
fQ8	07194800, 1	2SC1815 Y, GR	●ICs					
	or 03059501 ~ 3	2SC945 Q, P, K	fIC1	07207200	MB84011BM			
fQ9	or 07299701, 2	2SC2603 E, F	fIC2	or 03604100	TC4011P			
	03012200 ~ 2	2SA934 P, Q, R		07260600	μPD554C			
	or 07260000 ~ 2	2SA935 P, Q, R	●Diodes					
hQ1	07194800, 1	2SC1815 Y, GR	fd1	03111600	1S2473D			
	or 03059501 ~ 3	2SC945 Q, P, K	fd2	46079300	MV-13			
	or 07299701, 2	2SC2603 E, F	fd3	03111600	1S2473D			

1-2. S-0083 Motor Control Circuit Board (Stock No. 13067301)

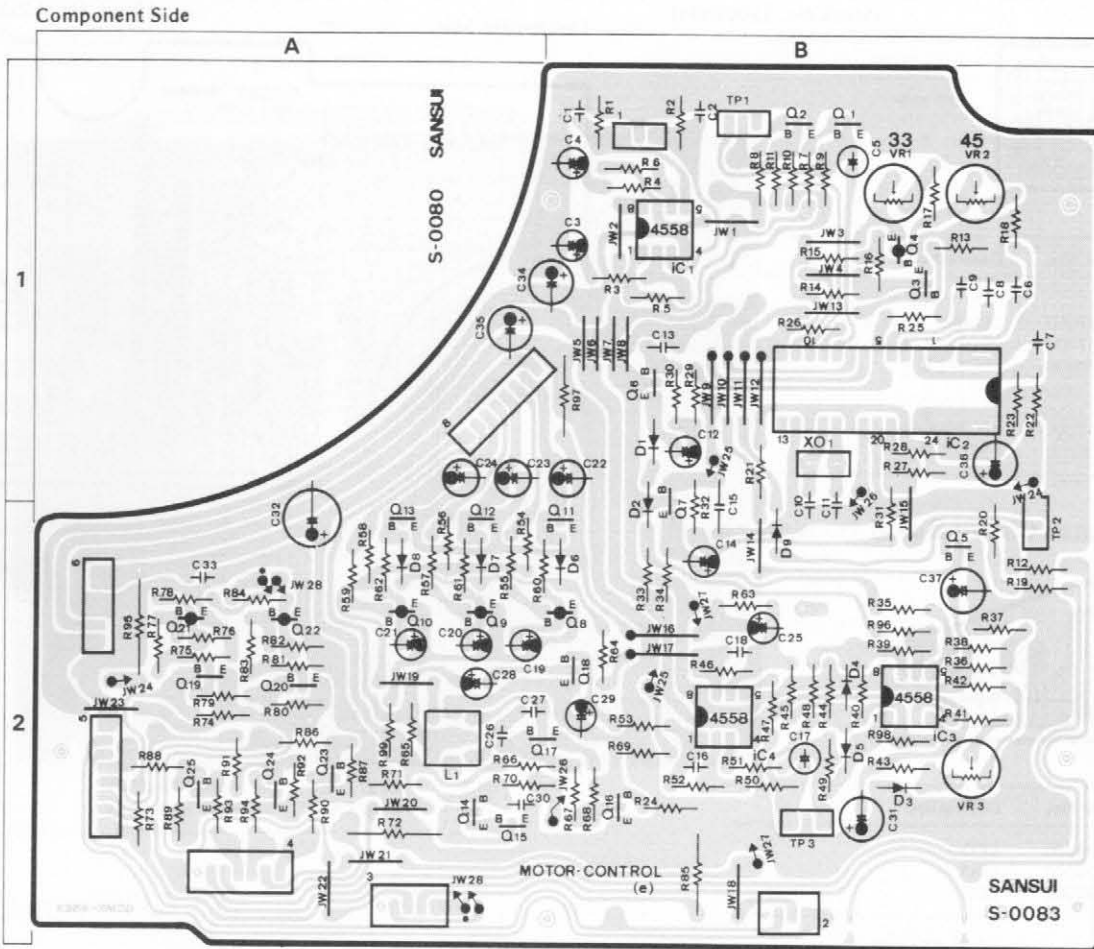


Parts List

Parts No.	Stock No.	Description	Parts No.	Stock No.	Description	Parts No.	Stock No.	Description
●Transistors								
eQ1	07194800, 1	2SC1815 Y, GR	eQ14	07194800, 1	2SC1815 Y, GR	●ICs		
or 03059501 ~ 3		2SC945 Q, P, K	or 03059501 ~ 3		2SC945 Q, P, K	eIC1	03607700	NJM4558D
or 07299701, 2		2SC2603 E, F	or 07299701, 2		2SC2603 E, F	eIC2	03612800	CX-193
eQ2	07194800, 1	2SC1815 Y, GR	eQ15	03069100 ~ 2	2SC2060 P, Q, R	eIC3	03607700	NJM4558D
or 03059501 ~ 3		2SC945 Q, P, K	or 07262800 ~ 2		2SC2061 P, Q, R	eIC4	03607700	NJM4558D
or 07299701, 2		2SC2603 E, F	or 03085901, 2		2SD471 L, K	eXO1	09300600	Quartz Element
eQ3	07194800, 1	2SC1815 Y, GR	eQ16	07194800	2SC1815 Y, GR	●Diodes		
or 03059501 ~ 3		2SC945 Q, P, K	or 03059501 ~ 3		2SC945 Q, P, K	eD1 ~ 9	03111600	1S2473D
or 07299701, 2		2SC2603 E, F	or 07299701, 2		2SC2603 E, F	●Resistors		
eQ4	07194700, 1	2SA1015 Y, GR	eQ17	07194800, 1	2SC1815 Y, GR	eR17	00208900	47kΩ 1/4W M.R.
or 07197001, 2		2SA733A Q, P	or 03059501 ~ 3		2SC945 Q, P, K	eR18	00202600	150Ω 1/4W M.R.
or 07299601, 2		2SA1115 E	or 07299701, 2		2SC2603 E, F	eR72	00190700	56Ω 2W N.I.R.
eQ5	07194800, 1	2SC1815 Y, GR	eQ18	07194800, 1	2SC1815 Y, GR	eR85	00183700	56Ω 1W N.I.R.
or 03059501 ~ 3		2SC945 Q, P, K	or 03059501 ~ 3		2SC945 Q, P, K	eR95	00188400	270Ω 2W N.I.R.
or 07299701, 2		2SC2603 E, F	or 07299701, 2		2SC2603 E, F	eR97	00181500	2.2Ω 1W N.I.R.
eQ6	07194800	2SC1815 Y, GR	eQ19	07194800	2SC1815 Y, GR	●Capacitors		
or 03059501 ~ 3		2SC945 Q, P, K	or 03059501 ~ 3		2SC945 Q, P, K	eC5	00306800	1μF 50V E.B.
or 07299701, 2		2SC2603 E, F	or 07299701, 2		2SC2603 E, F	eC6	46024900	0.01μF 50V P.C.
eQ7	07194800, 1	2SC1815 Y, GR	eQ20	07194800, 1	2SC1815 Y, GR	eC17	00306800	1μF 50V E.B.
or 03059501 ~ 3		2SC945 Q, P, K	or 03059501 ~ 3		2SC945 Q, P, K	eC33	00382800	22000μF 50V C.C.
or 07299701, 2		2SC2603 E, F	or 07299701, 2		2SC2603 E, F	eL1	42905000	OSC Coil
eQ8	07194700, 1	2SA1015 Y, GR	eQ21	07194700, 1	2SA1015 Y, GR	●Semi-variable Resistors		
or 07194700, 1		2SA1015 Y, GR	or 07197001, 2		2SA733A Q, P	eVR1	10343100	Volume 47kΩ (B)
or 07197001, 2		2SA733A P, Q	or 07299601, 2		2SA1115 E, F	eVR2	10343100	Volume 47kΩ (B)
eQ10	07194700, 1	2SA1015 Y, GR	eQ22	07194700, 1	2SA1015 Y, GR	eVR3	10350700	Volume 1kΩ (B)
or 07197001, 2		2SA733A Q, P	or 07197001, 2		2SA733A Q, P			
or 03085901, 2		2SD471 L, K	or 07299601, 2		2SA1115 E, F			
eQ11	03085901, 2	2SD471 L, K	eQ23	07194800, 1	2SC1815 Y, GR			
or 03069101, 2		2SC2060 Q, R	or 03059501 ~ 3		2SC945 Q, P, K			
or 07262801, 2		2SC2061 Q, R	or 07299701, 2		2SC2603 E, F			
eQ12	03085901, 2	2SD471 L, K	eQ24	07194800, 1	2SC1815 Y, GR			
or 03069101, 2		2SC2060 Q, R	or 03059501 ~ 3		2SC945 Q, P, K			
or 07262801, 2		2SC2061 Q, R	or 07299701, 2		2SC2603 E, F			
eQ13	03085901, 2	2SD471 L, K	eQ25	07194800, 1	2SC1815 Y, GR			
or 03069101, 2		2SC2060 Q, R	or 03059501 ~ 3		2SC945 Q, P, K			
or 07262801, 2		2SC2061 Q, R	or 07299701, 2		2SC2603 E, F			

1-3. S-0081 Power Supply Circuit Board <1> (Stock No. 13067801)

Component Side

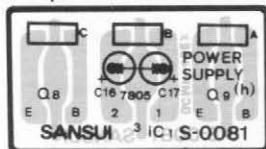


Parts List

Parts No.	Stock No.	Description
●Transistors		
hQ8	07287000~2	2SB862 C, D, E
hQ9	07287100~2	2SD1147 C, D, E
	or 03070400	2SC1983
●IC		
hIC1	07183500	μPC78M05H
	or 03609200	FS7805M

1-4. S-0088 Indicator Circuit Board (Stock No. 13067801)

Component Side

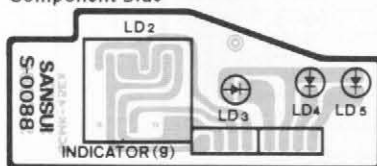

Parts List

Parts No.	Stock No.	Description
gLD2	03194600	LED
gLD3	03194500	LED
gLD4, 5	03190600	LED

● The circuit boards, S-0082, S-0084, S-0085, S-0086 & S-0087 are not supplied as the assembled, however the individual parts on the circuit boards are provided by orders.

1-6. S-0082 Start/Stop, UP/DOWN SW. Circuit Board

Parts List

Parts No.	Stock No.	Description
gS2, 3	11907000	Push Switch


1-7. S-0087 Repeat Circuit Board

Parts List

Parts No.	Stock No.	Description
gLD1	03192900	LED
gS1	11320900	Push Switch

1-5. S-0089 Power Supply Circuit Board <2> (Stock No. 13067901)

Component Side

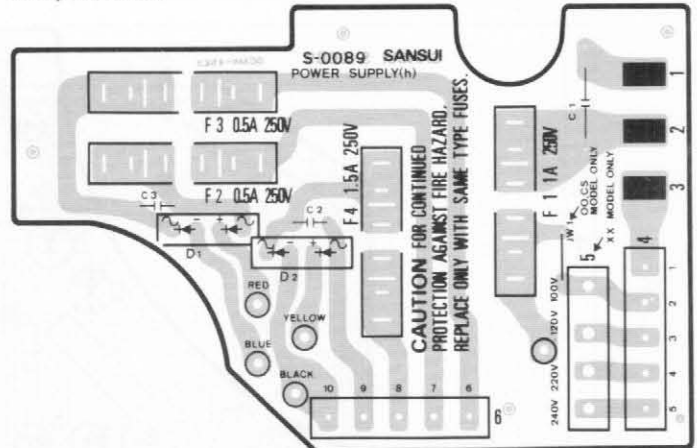

Parts List

Parts No.	Stock No.	Description
●Diode		
hD1, 2	03117000	RB-152
●Capacitors		
hC1	00386000	10000pF 150V C.C.
hC2, 3	00407800	0.047μF 100V M.C.
●Fuses		
hF1	04322200	AC Fuse 1A 250V
hF3	04322100	AC Fuse 0.5A 250V
hF4	04322300	AC Fuse 1.5A 250V

1-8. S-0084 Speed & Disc Size Selector Circuit Board

Parts List

Parts No.	Stock No.	Description
gS4, 5	11320900	Push Switch


1-9. S-0086 Strobo Indicator Circuit Board

Parts List

Parts No.	Stock No.	Description
gLD6 ~ 9	03194400	LED

2. OTHER PARTS


2-1. Top View

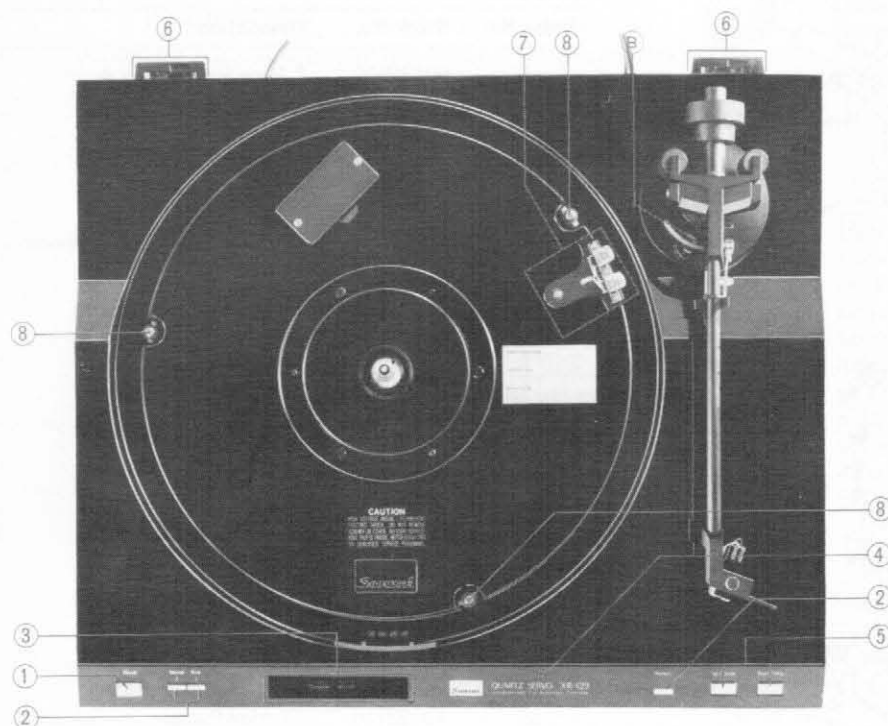

Parts List

Index No.	Stock No.	Description
1	07204000	Power Switch
	53222200	Push Button
2	53922600	Button Guide
	53222300	Push Button, speed, size, repeat
3	56120400	LED Plate
	53627700	Indicator Glass
4	53627610	Console Panel
5	71021500	Push Button Ass'y start/stop, lifter, UP/DOWN
6	69035700	Hinge, dust cover
7	45030400	Pulse Detecting Head
8	00449900	Shipping Screw
	70122500	Dust Cover
	61122620	Platter
	55030200	Rubber Mat


2-2. Bottom View

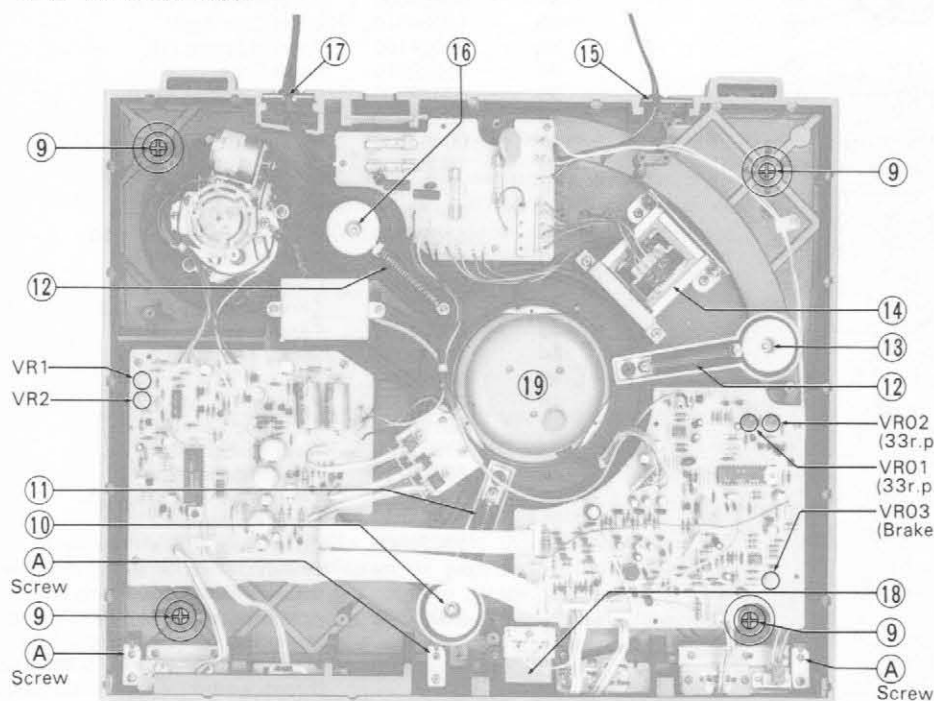

Parts List

Index No.	Stock No.	Description
9	55122210	Leg
	55221100	Felt Mat, leg
	51832400	Felt Washer
	08320500	PT Type Screw, M4 x 10
10	55122300	Damper Sheet
	69035520	Spring (B)
	55030400	Floating Damper
11	69034200	Tension Spring (B)
12	69035310	Tension Spring (A)
13	55122300	Damper Sheet
	69035420	Spring (A)
	55030400	Floating Damper
14	15003501	Power Transformer
15	38004700	AC Cord
	39106000	Strain Relief
16	55122300	Damper Sheet
	69035620	Spring (C)
	55030400	Floating Damper
17	38103610	Output Cord
	13016300	Strain Relief
18	54420500	Strobo Miller
19	43207300	D.D. Motor

3. EXPLODED VIEW AND PARTS LIST

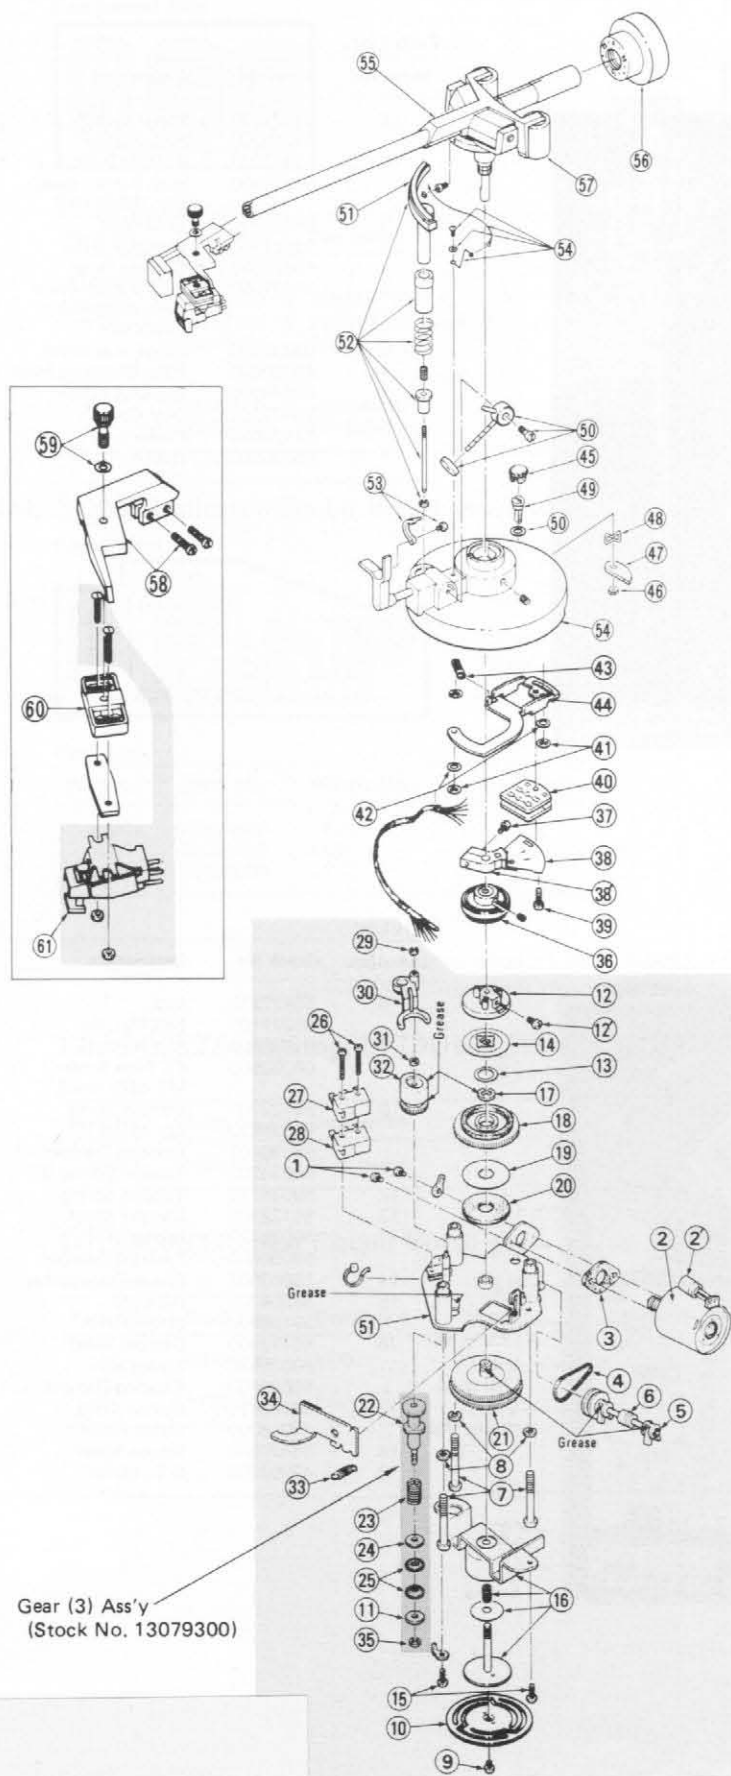

Parts List

Index No.	Stock No.	Description
1	00436500	P Type Screw, M2 x 4
2	43206400	Micro Motor Ass'y
2'	00304000	47 μ F 10V B.P.
3	55029810	Rubber Cushion
4	60322310	Drive Belt
5	00488900	E Type Washer, D1.5
6	13011110	Worm Gear Ass'y (worm gear, shaft, E type washer)
7	07104600	Tapping Screw, M4 x 40
8	51823300	S Type Washer, M4 x 14
9	00436500	P Type Screw, M2 x 4
10	61423710	Friction Disc
11	13033510	Washer, friction pulley
12	13034010	Clutch Plate (2)
12'	13044700	Tapping Screw, M3 x 6
13	13021800	P Type Washer, M7 x 11
14	13072700	Clutch Plate (1)
15	00454500	PT Type Screw, 3 x 8
16	07266100	Plunger Solenoid Ass'y
17	00489400	E Type Washer, D5.0
18	60020710	Gear (2)
19	51831500	Thrust Washer
20	51831610	Damping Washer
21	13033800	Gear (1)
22	13033910	Gear (3)
23	13033600	Spring, friction
24	00466500	P Type Washer, M3 x 8
25	13033710	Friction Pulley
26	08320400	P Type Screw, M2 x 16
27	11602700	Micro Switch
28	11602700	Micro Switch
29	00488900	E Type Washer, D1.5
30	13034610	Lifter Guide
31	00489000	E Type Washer, D2.0
32	13064510	Lifter Cam Ass'y
33	69034100	Tension Spring (1)
34	64020310	Brake Shoe
35	00468900	E Type Washer, D2.0
36	65121930	TA Drum Ass'y
37	00454500	PT Type Screw, M3 x 8
38	13069700	Screen Plate
38'	65030100	Screen Plate Base
39	00436500	Tapping Screw, M2 x 4
40	07209700	Photo Sensor Ass'y
41	51831800	CS Ring, M2.4
42	51832000	Thrust Washer, 2.5 x 0.5
43	69034200	Tension Spring (2)
44	65030010	Sensor Mounting Arm
45	50624800	Lid
46	00463600	H Type Nut, M3 x 2.4
47	60125600	Adjusting Cam (2)
48	51832100	Wave Washer, M4
49	62025710	Adjusting Cam Shaft
50	51823300	Thrust Washer, 4.0 x 0.25
51	13022700	Lifter Plate Ass'y
52	13022800	Lifter Ass'y (Lifter Plate Ass'y, cylinder, elevation spring, absorber, spring, lifter chip adjusting bar)
53	13022500	Arm Rest Ass'y (Arm Rest, clamp, clamp fixing screw, fixing screw)
54	13022600	IFC Ass'y (Weight, long & short bars, thread, washer, screw, thread hanger)
55	13022000	Tonearm Ass'y
56	13022900	Main Weight Ass'y
57	13023000	Balance Weight Ass'y
58	13022100	Headshell (A) Ass'y
59	13022200	Mounting Screw Ass'y
60	13022400	Headshell (B)
61	13010800	Cartridge Ass'y SV-101
	13022300	Lead Wires for Cartridge

5. ADJUSTMENTS

* About operations, and adjustments unlisted in this bulletin, refer to the XR-Q9 Service Manual. Repeat adjustment is not necessary.

5-1. Adjustment of Screen Plate Installation Position


Adjust the position whenever the tonearm is replaced. With the tonearm placed on the arm rest, install the screen plate to the tonearm shaft, as shown in Figs. 5-1 (A) and (B).

5-2. Adjustment of B Sensor Output


A. Output level adjustment

- 1) Connect the + terminal of an oscilloscope to point (Y) of S-0079 and - terminal to (Z) in schematic diagram on page 6 and set the selector switch DC/AC to DC, then the test ranges 2 V/div. and 10 msec./div.
- 2) Shift the tonearm by hand to the lead-out groove on the disc and slowly move the tonearm right and left in such a way that it takes about two seconds for the slit C (Fig. 5-1) to pass through between the LED and the phototransistor.

Fig. 5-1 Installation of Screen Plate
(A) Side View of Screen Plate

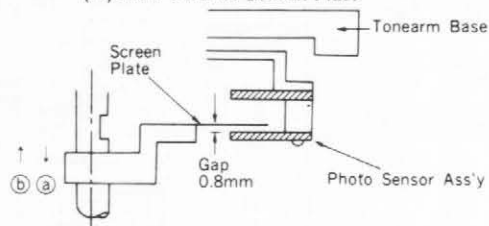


(B) Bottom View of Screen Plate
Note: Tonearm is placed on its rest

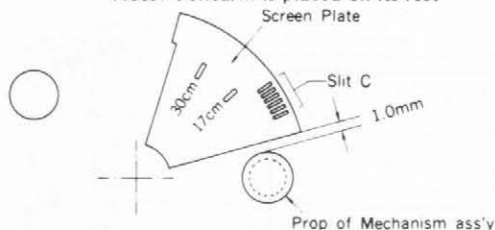

- 3) During this movement, adjust the output level by rotating the volume, B sensor sensitivity adj., VR1 of S-0079 so as to be set between 4.5 and 8 V without any distortion of the waveform as shown in Fig. 5-2.

Fig. 5-2 Output Waveform Adjustment on B-Sensor




- 4) If it is impossible to adjust the output level to 4.5 ~ 8 V, reduce the gap between the screen plate and photo sensor ass'y to 0.8 mm or less as shown in Fig. 5-1.

B. Duty ratio adjustment of output pulse waveform

- 1) Connect an oscilloscope across point (X) of S-0079 board and GND in schematic diagram on page 6, then set the selector switch to DC and the test ranges to 2 V/div., 0.1 sec./div.
- 2) Shift the tonearm by hand to the lead-out groove on disc, then slowly move the tonearm right to left in such a way that it takes about two seconds for the slit C (Fig. 5-1) to pass through between the LED and the phototransistor.
- 3) During this movement, adjust the duty ratio of the output pulse waveform by rotating the volume, record end sensitivity adj., VR2 on S-0079 as shown in Fig. 5-3.

Fig. 5-3



* Adjustments unlisted

Lead-in, Platter height, Lifter height, Gap between TA drum & Clutch plate (2) also between Pulse Detecting Head & Platter.

5-3. Revolution Speed Adjustment (PLL Adj.)


Note: 1) Perform 45 rpm speed adj. first, then adjust 33 rpm re speed.

- 2) For this adj., put a rubber sheet on the platter.

A. How to adjust with an oscilloscope

- 1) Connect oscilloscope leads across point (R) and (S) (GND) of TP on S-0083 in schematic diagram of this issue, then set the test ranges to 2 V/div. and 0.5 msec./div.
- 2) Set the speed selector to 45 rpm.
Adjust the waveforms on the scope to one (A) shown in Fig. 5-4 by rotating eVR2, 45 rpm PLL adj., (S-0083); in this case, make pulse width as narrow pitch as possible.
- 3) Set selector switch to 33 rpm.
Adjust the pulse waveforms to one (A) shown in Fig. 5-4 as well by rotating eVR1, 33-1/3 rpm PLL adj., (S-0083).

Fig. 5-4



* Adjust the pulse width as narrow as possible.

B. How to adjust without an oscilloscope

- 1) Set the speed selector to 45 rpm.
Bring the strobo-pattern to standstill by rotating eVR2 (S-0083)
- 2) Set the speed selector to 33 rpm.
Bring the strobo-pattern to standstill as well by rotating eVR (S-0083).

5-4. Electronic Brake Adjustment


Connect two leads from volt-meter across points (V) and (W) of TP in schematic diagram on page 6, then make the set operate. Adjust the voltage value between (V) & (W) to 0.55 V rotating eVR (S-0083).

5-5. Phase Adjustment between two Pulse Detecting Heads

Note: The pulse detecting heads is supplied as heads' ass'y with completely adjusted distance between them (eMH1, eMH2). Avoid performing this adjustment without dual trace oscilloscope.

- 1) Connect oscilloscope between (T) and (U) (GND), (TP1) of S-0083 on the schematic diagram, then make the set operate.
- 2) Adjust the pulse detecting head screw so that the signal generated from eMH1 may lag signal generated from eMH2 by a phase angle of 90 degrees as shown in Fig. 5-5.

Fig. 5-5

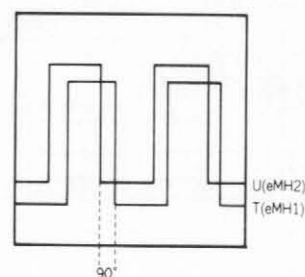

6. MAIN PARTS REPLACEMENT

6-1. Tonearm Assembly (55) Replacement

- 1) Remove the bottom plate.
- 2) Loosen three screws (7) to remove the auto mechanism assembly.
- 3) Loosen a screw fixing the TA drum (36).
- 4) Loosen the screw (37) to remove the screen plate (38).
- 5) Remove the lead wires from the tonearm.
- 6) Remove a string of the I.F.C. Ass'y (54).
- 7) Loosen the fastening nut to extract the tonearm.

* In installing the slit plate assembly, and TA drum assembly, refer to Figs. 5-1 (A) and (B), and Fig. 3-6 in XR-Q9 Service Manual.

6-2. Plunger Solenoid Assembly (16) Replacement


- 1) Remove the bottom plate.
- 2) Loosen three screws (7) to extract the auto mechanism assembly.
- 3) Remove the E type washer (13).
- 4) Loosen two screws (15) to remove the plunger assembly.

7. PACKING LIST

Index No.	Stock No.	Description
1	90123900	Corrugated Board
2	90226600	Plastic Sheet
3	91166000	Polyethylene Bag, platter
4	91165200	Polyethylene Bag, rubber mat
5	90124000	Corrugated Board, platter
6	90227300	Inner Packing (upper)
7	91166140	Polyethylene Bag, dust cover
8	91122710	Polyethylene Bag, turntable unit
9	90227410	Inner Packing (right)
10	90227510	Inner Packing (left)
11	90227910	Arm Packing
12	90029820	Carton Case

8. ACCESSORY LIST

Stock No.	Description
52432210	Cartridge Mounting Gauge
13010800	Cartridge Ass'y SV-101 (incl. stylus, fixing screws)
13010900	Stylus SN-101
13012300	45 rpm Adaptor
13022900	Main Weight Ass'y
92052300	Operating Instructions

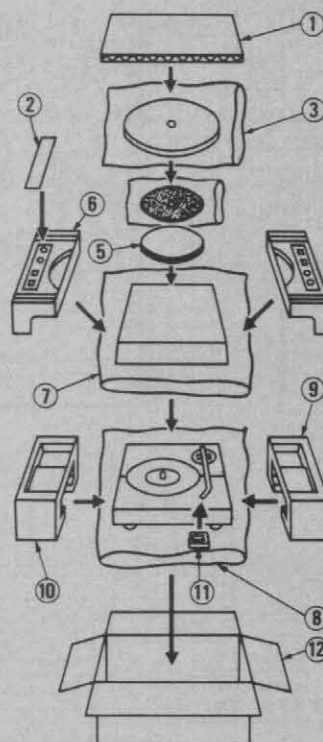

SANSUI ELECTRIC COMPANY LTD.:
SANSUI ELECTRONICS CORPORATION:

SANSUI ELECTRONICS (U.K.) LTD.:
SANSUI ELECTRONICS G.M.B.H.:

14-1, Izumi 2-chome, Suginami-ku, Tokyo 168 Japan PHONE:(03) 323-1111/TELEX:232-2076
1250 Valley Brook Ave. Lyndhurst, N.J. 07071 U.S.A.
333 West Alondra Blvd. Gardena, California 90247 U.S.A.
3036 Koapaka St. Honolulu, Hawaii 96819 U.S.A.
Unit 10A, Lyon Industrial Estate, Rockware Avenue, Greenford, Middx UB6, OAA, England
Arabella center, 6 Frankfurt AM Main, Lyoner Strasse 44-48, West Germany

SERVICE BULLETIN

COMPUTERIZED FULL AUTOMATIC QUARTZ-SERVO TURNTABLE

SANSUI XR-Q9

April 1981
Ref. AN-114

QUALITY ASSURANCE DEPT.

- *This Bulletin applies to all Model XR-Q9 after Serial No. 331020001.*

On Model XR-Q9 with Serial No. before 331020000, refer to Model XR-Q9 Service Manual previously supplied.

Therefore, when ordering parts or servicing, check the serial No. of the set, then use either this issue or the Service Manual.

** For an easy reference, please bind this bulletin together with Model XR-Q9 Service Manual.*

Specifications

Type	Two-speed direct-driven
Speeds	33-1/3, 45 rpm
Platter	Aluminum alloy die-cast 350 mm (13-3/4") diameter, 1.7 kg (3.74 lbs)
Motor	DC Brushless servo-type (Quartz-servo)
Wow and flutter	Less than 0.022 % (WRMS) Less than 0.015 % (WRMS- read out direct at the FG output)
S/N	Better than 62 dB (IEC-B)
Rumble	Better than 78 dB (DIN-B)
Tonearm	Statically-balanced type
Tonearm length	245 mm (9-11/16")
Overhang	16 mm (5/8")
Optimum cartridge weight	
When the headshell supplied is employed	4 ~ 10 g
Dimensions	483 mm (19") W 142 mm (5-5/8") H 420 mm (16-9/16") D
Weight	11.6 kg (25.5 lbs) net 13.6 kg (30 lbs) packed
Power consumption	25 W

- The power voltage is adjusted to the one of the area where you bought the unit.

Spécifications de la cartouche (applicables uniquement pour les appareils à cartouche)

Modèle SV-101

Type	Double aimant
Réponse de fréquence	10 ~ 20,000 Hz
Tension de sortie	2,5 mV par canal (1,000 Hz 35,4 mm/s)
Impédance de charge	47 kΩ
Force sur le sillon	2 g
Pointe de lecture	Diamant sphérique, 0,6 mil, (SN-101)

- * La présentation et spécifications sont susceptibles d'être modifiées sans préavis par suite d'améliorations éventuelles.
- * Pour simplifier les explications, les illustrations peuvent quelquefois être différentes des originaux.